

[manuals.plus](#) /› [Brock Electronics](#) /› [Brock Electronics TO-3001-SS Electric Oven User Manual](#)

## Brock Electronics TO-3001-SS

# Brock Electronics TO-3001-SS Electric Oven User Manual

Model: TO-3001-SS

## 1. INTRODUCTION

Welcome to the user manual for your Brock Electronics TO-3001-SS Electric Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

### Important Safety Instructions

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the oven during operation.

## 2. PRODUCT OVERVIEW



**Figure 1:** Brock Electronics TO-3001-SS Electric Oven. This image shows the stainless steel exterior, the large glass door, and the control panel on the right side. The interior is visible, featuring a rotisserie spit.

### Components and Accessories

- Electric Oven Unit
- Baking Tray
- Wire Rack
- Tray/Rotisserie Handle
- Rotisserie Spit
- Crumb Tray

### Control Panel Description

The control panel is located on the right side of the oven and features four rotary knobs:

1. **Rotisserie/Grill Function Knob:** Selects the rotisserie or grill function. (OFF / Rotisserie / Grill)
2. **Temperature Control Knob:** Adjusts the oven temperature from 100°C to 230°C. An indicator light illuminates when the oven is heating.
3. **Heating Function Knob:** Selects the desired heating mode. (OFF / Top Heating / Bottom Heating / Top & Bottom Heating)
4. **Timer Knob:** Sets the cooking time up to 60 minutes. The oven will automatically turn off and sound an alarm when the set time expires. Can also be set to 'OFF' for continuous operation.

## 3. SETUP

### Unpacking

- Carefully remove the oven and all accessories from the packaging.
- Remove any protective films, stickers, or packaging materials from the oven's interior and exterior.
- Retain packaging for future storage or transport if necessary.

## Placement

- Place the oven on a stable, flat, and heat-resistant surface.
- Ensure there is adequate space (at least 10-15 cm) around the oven for proper ventilation. Do not place it directly against a wall or under cabinets that could be damaged by heat.
- Keep the oven away from flammable materials, curtains, and other heat-sensitive objects.
- Ensure the power cord is not pinched or in contact with hot surfaces.

## Initial Cleaning

- Before first use, wipe the interior of the oven and all accessories (baking tray, wire rack, rotisserie spit) with a damp cloth and mild detergent.
- Dry thoroughly.
- It is recommended to run the oven empty for about 15 minutes at maximum temperature (230°C) with the 'Top & Bottom Heating' function selected to burn off any manufacturing residues. A slight odor or smoke may be present during this initial operation; ensure the area is well-ventilated.

## 4. OPERATING INSTRUCTIONS

---

### General Operation

1. Plug the oven into a suitable grounded electrical outlet.
2. Place the food to be cooked on the baking tray or wire rack. Insert the tray/rack into the desired slot inside the oven.
3. Close the oven door securely.
4. Set the **Temperature Control Knob** to the desired temperature. The indicator light will turn on.
5. Select the appropriate heating mode using the **Heating Function Knob** (e.g., Top Heating for grilling, Bottom Heating for baking bases, Top & Bottom Heating for general cooking).
6. Set the **Timer Knob** to the desired cooking time. The oven will begin heating. If continuous operation is desired, set the timer to 'OFF'.
7. When the cooking time expires, the oven will automatically turn off and an audible alarm will sound. If operating continuously, manually turn the timer to 'OFF' to stop heating.
8. Carefully remove the cooked food using oven mitts and the provided tray/rotisserie handle.

### Using the Rotisserie Function

1. Prepare the food (e.g., chicken) and secure it onto the rotisserie spit using the forks. Ensure the food is balanced to prevent uneven rotation.
2. Insert the pointed end of the rotisserie spit into the drive socket on the right side of the oven interior.
3. Rest the square end of the spit onto the support on the left side.
4. Set the **Temperature Control Knob** to the desired temperature (e.g., 190-230°C for poultry).
5. Turn the **Rotisserie/Grill Function Knob** to the 'Rotisserie' setting.
6. Set the **Timer Knob** for the required cooking duration.
7. Monitor the cooking process through the oven door.

- Once cooking is complete, turn the timer to 'OFF' and carefully remove the hot rotisserie spit using the tray/rotisserie handle.

## 5. MAINTENANCE

---

### Cleaning

- Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
- Interior:** Wipe the interior surfaces with a damp cloth and a mild, non-abrasive detergent. For stubborn stains, a specialized oven cleaner suitable for electric ovens can be used, following the product's instructions. Ensure all cleaner residue is removed.
- Exterior:** Clean the exterior with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- Accessories:** The baking tray, wire rack, rotisserie spit, and crumb tray can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing or reusing.
- Do not immerse the oven unit, power cord, or plug in water or any other liquid.

### Storage

Ensure the oven is clean and dry before storing. Store the oven in a cool, dry place, preferably in its original packaging, away from direct sunlight and moisture.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	Not plugged in; power outage; timer not set or set to 'OFF'.	Check power connection; verify power supply; set timer to desired cooking duration.
Food cooks unevenly.	Incorrect rack position; oven not preheated; food too large.	Adjust rack position; preheat oven for 10-15 minutes; ensure food fits properly.
Excessive smoke during cooking.	Food residue in oven; too much fat/oil on food; crumb tray full.	Clean oven interior and crumb tray; trim excess fat from food.
Rotisserie spit not rotating.	Spit not correctly inserted; food too heavy/unbalanced; rotisserie function not selected.	Ensure spit is properly seated in drive socket and support; balance food; select 'Rotisserie' function.

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

---

Feature	Specification
Model Number	TO-3001-SS

Feature	Specification
Brand	Brock Electronics
Capacity	33 Liters
Power/Wattage	1500 W
Voltage	220-240 V, 50/60 Hz
Temperature Range	100°C - 230°C
Timer	60 minutes with alarm
Material	Stainless Steel, Tempered Glass
Product Dimensions (L x W x H)	55 x 37 x 37 cm
Weight	7 kg
Special Features	BPA-free, Double Tempered Glass, Interior Light, Rotisserie Function

## 8. WARRANTY AND SUPPORT

### Warranty Information

This Brock Electronics TO-3001-SS Electric Oven comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or your sales receipt for specific terms, conditions, and duration of the warranty. The warranty typically covers defects in materials and workmanship under normal household use.

### Customer Support

For technical assistance, service inquiries, or to report a problem with your appliance, please contact Brock Electronics customer service. Have your model number (TO-3001-SS) and proof of purchase ready when contacting support.

#### Brock Electronics Customer Service:

Please refer to the contact information provided on the Brock Electronics official website or your product packaging for the most up-to-date support details.