

[Manuals.plus](#) /

› [Adventure Force](#) /

› Adventure Force Tactical Strike Quantum Motorized Ball Blaster User Manual

Adventure Force 5505

Adventure Force Tactical Strike Quantum Motorized Ball Blaster User Manual

Model: 5505

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Adventure Force Tactical Strike Quantum Motorized Ball Blaster. Please read this manual thoroughly before operating the blaster and retain it for future reference. The Quantum blaster is designed for competitive play, featuring fully automatic firing and a high-capacity round hopper.

SAFETY INFORMATION

WARNING: To avoid injury, do not aim at eyes or face. Use only official Adventure Force Tactical Strike Rounds. Other rounds may not meet safety standards and could cause injury. Do not modify the blaster or rounds.

- Always wear eye protection when using this blaster.
- Do not aim or fire at people or animals at close range.
- Keep fingers and other body parts clear of all moving parts and the firing mechanism.
- Adult supervision is recommended for younger users.
- Store the blaster and rounds out of reach of small children.

PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- 1 x Adventure Force Tactical Strike Quantum Motorized Ball Blaster
- 75 x Adventure Force Tactical Strike Rounds

BLASTER OVERVIEW



Figure 1: Adventure Force Tactical Strike Quantum Motorized Ball Blaster. This image displays the blaster's overall design, including the blue main body, orange front section, and the transparent hopper on top filled with red foam rounds.

The Quantum blaster features a robust design with a large capacity hopper for rounds. Key components include the trigger, grip, motorized firing mechanism, and the round loading port.

SETUP

1. Power Source

The Adventure Force Tactical Strike Quantum Blaster is motorized. No user-replaceable batteries are required for operation. Ensure the blaster is fully charged or connected to its power source if applicable (refer to packaging for specific power requirements).

2. Loading Rounds

1. Locate the clear hopper on top of the blaster.
2. Open the hopper lid.
3. Carefully pour up to 100 Adventure Force Tactical Strike Rounds into the hopper. Ensure rounds are not jammed or stacked improperly.
4. Close the hopper lid securely.



Figure 2: Loading rounds into the transparent hopper. The image highlights the large capacity hopper designed for quick and easy loading of up to 100 rounds.

OPERATING INSTRUCTIONS

1. Powering On

Locate the power switch, typically found near the grip or on the side of the blaster. Slide the switch to the "ON" position. You may hear the motor rev up, indicating it is ready for firing.

2. Firing the Blaster

1. Ensure eye protection is worn by all participants.
2. Hold the blaster firmly with both hands.
3. Aim at a safe target, away from eyes and face.
4. Press and hold the trigger to engage the fully automatic firing mechanism. Rounds will be propelled rapidly from the muzzle.
5. Release the trigger to stop firing.

3. Powering Off

When finished playing, slide the power switch to the "OFF" position to conserve power and prevent accidental firing.

MAINTENANCE

Cleaning

- Wipe the exterior of the blaster with a clean, damp cloth. Do not submerge the blaster in water.
- Ensure no dirt or debris enters the firing mechanism or hopper.

Storage

- Store the blaster in a cool, dry place away from direct sunlight.
- Remove all rounds from the hopper before storing for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster does not fire.	Power switch is OFF. Rounds are jammed. Low power (if rechargeable).	Ensure power switch is ON. Clear any jammed rounds from the hopper or firing mechanism. Recharge the blaster if it has an internal battery.
Rounds are not feeding properly.	Hopper lid not closed. Rounds are damaged or not official. Hopper is overfilled.	Ensure hopper lid is securely closed. Use only official, undamaged Adventure Force Tactical Strike Rounds. Do not overfill the hopper; ensure rounds can move freely.
Rounds fire weakly.	Low power (if rechargeable). Rounds are wet or damaged.	Recharge the blaster. Use dry, undamaged rounds.

SPECIFICATIONS

- Model Number:** 5505
- Brand:** Adventure Force
- Product Type:** Motorized Ball Blaster
- Round Capacity:** Up to 100 rounds
- Included Rounds:** 75 Tactical Strike Rounds
- Dimensions:** Approximately 30 x 12 x 4 inches (76.2 x 30.5 x 10.2 cm)
- Weight:** Approximately 5.8 Pounds (2.63 kg)
- Material:** Plastic
- Power Source:** Motorized (No user-replaceable batteries required)
- Recommended Age:** Kid (Refer to product packaging for specific age recommendations)

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Adventure Force website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question