

[Manuals.plus](#) /

› [Rexel](#) /

› Rexel Momentum X406 Paper Shredder User Manual

Rexel 2104569EU

Rexel Momentum X406 Paper Shredder

Model: 2104569EU

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Rexel Momentum X406 Paper Shredder. Please read these instructions carefully before using the appliance and retain them for future reference.



Image: The Rexel Momentum X406 Paper Shredder, a compact device with a dark grey body and a silver-grey top panel, designed for office or home use.

IMPORTANT SAFETY INFORMATION

- Keep hands, hair, and loose clothing away from the paper entry slot.
- Do not insert fingers or other body parts into the shredder opening.
- Keep children and pets away from the shredder.
- Unplug the shredder when not in use or before cleaning.

- Do not shred metal objects, credit cards, CDs/DVDs, or adhesive labels. This shredder is designed for paper only.
- Do not operate the shredder if the power cord is damaged.
- Ensure the shredder is placed on a stable, level surface.

SETUP

1. **Unpacking:** Carefully remove the shredder from its packaging. Ensure all components are present, including the shredder head, waste bin, and instruction manual.
2. **Placement:** Position the shredder on a flat, stable surface near a power outlet. Ensure there is adequate space around the unit for ventilation and easy access to the waste bin.



Image: A Rexel Momentum X406 paper shredder positioned on the floor next to a desk with a laptop, illustrating a typical placement in an office or home environment.

3. **Waste Bin Installation:** Ensure the waste bin is correctly inserted into the shredder base. The shredder will not operate if the bin is not properly seated.



Image: An exploded view of the Rexel Momentum X406 shredder, showing the shredder head lifted from the base, revealing the internal 15-liter waste bin filled with shredded paper. An icon indicates the 15L capacity.

4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On:** Locate the power switch on the shredder head and set it to the 'ON' or 'AUTO' position. The shredder is now ready for use.
2. **Shredding Documents:** Insert up to 6 sheets of A4 paper into the paper entry slot. The shredder will automatically start and stop once the paper has passed through.



Image: The Rexel Momentum X406 paper shredder with a stack of six sheets of paper being fed into its slot, accompanied by a large "6 SHEETS" graphic, indicating its maximum sheet capacity.

3. **Continuous Operation:** The shredder has a continuous run time of 3 minutes. After this period, it will require a cool-down period to prevent overheating.
4. **Anti-Jam Technology:** The Momentum X406 features anti-jam technology. If too much paper is inserted, the shredder will automatically reverse to clear the jam. It can also handle small paper clips.



Image: The Rexel Momentum X406 paper shredder next to a large stack of paper, with "ANTI-JAM" and a paper clip icon prominently displayed, highlighting its jam prevention and paper clip compatibility features.

5. **Security Level:** This shredder provides P4 cross-cut security, reducing documents to 4 x 28 mm particles.



Image: A close-up of the shredded paper output from the Rexel Momentum X406, showing small cross-cut particles. A graphic indicates "P4" security level and "4 x 28 mm" particle size.

6. **Power Off:** When finished shredding, set the power switch to the 'OFF' position and unplug the unit from the power outlet.

MAINTENANCE

- **Emptying the Waste Bin:** Regularly check and empty the 15-liter waste bin to prevent paper jams and ensure optimal performance. Always unplug the shredder before removing the bin.
- **Cleaning:**
 - **Exterior:** Wipe the exterior of the shredder with a soft, dry cloth. Do not use abrasive cleaners or solvents.
 - **Shredder Blades:** For cross-cut shredders, it is recommended to oil the blades periodically (e.g., every 30 minutes of cumulative shredding or after emptying the bin 2-3 times) using shredder oil sheets or liquid shredder oil applied to a sheet of paper. This helps maintain cutting performance and extends the life of the shredder.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shredder does not operate.	Not plugged in. Waste bin not properly seated. Overheat protection activated. Power switch in 'OFF' position.	Ensure power cord is securely plugged into an outlet. Push the waste bin firmly into place. Allow the shredder to cool down for 20-30 minutes. Set the power switch to 'AUTO' or 'ON'.
Paper jam.	Too many sheets inserted. Paper not inserted straight.	Use the reverse function to clear the jam. Reduce the number of sheets. Ensure paper is inserted centrally and straight.
Shredder stops during operation.	Waste bin is full. Overheat protection activated.	Empty the waste bin. Allow the shredder to cool down for 20-30 minutes.

SPECIFICATIONS

- Model:** Rexel Momentum X406
- Item Model Number:** 2104569EU
- Shred Type:** Cross-Cut
- Security Level:** P4 (4 x 28 mm particles)
- Sheet Capacity:** Up to 6 sheets (A4, 80gsm)
- Waste Bin Capacity:** 15 Liters
- Continuous Run Time:** 3 minutes
- Cool-down Time:** Approximately 30 minutes
- Product Dimensions:** 9.02 x 12.8 x 13.5 inches (229 x 325 x 343 mm)



Image: The Rexel Momentum X406 paper shredder with overlaid measurements indicating its height (343 mm), width (325 mm), and depth (229 mm), providing precise dimensional information.

Item Weight: 7.7 pounds

Color: Blue with Grey accents

Recommended Use: Shredding Paper

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your product or contact Rexel customer service. Keep your proof of purchase for warranty claims.

Manufacturer: Rexel

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question