

Tefal FV1739E0

Tefal Virtuo FV1739E0 Steam Iron User Manual

Model: FV1739E0

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Tefal Virtuo FV1739E0 Steam Iron. Please read it thoroughly before first use and keep it for future reference.



Image: The Tefal Virtuo FV1739E0 Steam Iron, featuring its sleek design and ergonomic handle.

SAFETY INSTRUCTIONS

- Always unplug the iron from the electrical outlet when filling with water, emptying, or when not in use.
- Do not leave the iron unattended while it is connected to the mains or when it is still hot.
- Keep the iron and its cord out of reach of children.
- Do not immerse the iron, cord, or plug in water or other liquids.
- Use the iron only for its intended purpose.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Place the iron on a stable, heat-resistant surface when resting.

PRODUCT OVERVIEW

The Tefal Virtuo FV1739E0 Steam Iron is designed for efficient and effortless ironing. Key features include:

- **Power:** 2000 W for quick heat-up and powerful performance.
- **Continuous Steam Output:** 24 g/min for effective wrinkle removal.
- **Steam Shot:** 90 g/min for tackling stubborn creases and thicker fabrics.
- **Soleplate:** Ceramic soleplate for smooth gliding and even heat distribution.
- **Anti-Drip System:** Prevents water stains on garments, even at low temperatures.

- **Vertical Steaming:** Ideal for refreshing hanging garments, drapes, and delicate fabrics.
- **Self-Cleaning and Anti-Calc System:** Extends the iron's lifespan by preventing limescale buildup.



Image: Underside view of the iron's ceramic soleplate, highlighting its steam vents for optimal distribution.

SETUP

1. **Unpacking:** Carefully remove the iron and all accessories from the packaging. Retain packaging for future storage or transport.
2. **First Use Preparation:** Before first use, it is recommended to iron an old piece of fabric to remove any manufacturing residues from the soleplate.
3. **Filling the Water Tank:**
 - Ensure the iron is unplugged.
 - Open the water tank inlet.
 - Fill the tank with clean tap water up to the 'MAX' level indicator. Do not overfill.
 - Close the water tank inlet securely.

OPERATING INSTRUCTIONS

Standard Ironing (Horizontal)

1. **Plug In:** Plug the iron into a suitable electrical outlet.
2. **Temperature Setting:** Adjust the thermostat dial to the appropriate temperature for your fabric type. Refer to the fabric care labels on your garments.
3. **Heating Up:** The indicator light will illuminate, indicating the iron is heating. It will turn off when the desired temperature is reached.
4. **Steam Control:** For steam ironing, ensure the water tank is filled and the temperature is set to the steam zone (usually indicated on the dial). Adjust the steam output lever as desired.
5. **Steam Shot:** Press the steam shot button for an extra burst of steam to remove stubborn wrinkles. Wait a few seconds between bursts.
6. **Sprayer:** Use the spray button to lightly moisten dry areas of fabric before ironing.



Image: The iron gliding smoothly over a piece of fabric, demonstrating its ease of use.

Vertical Steaming

The vertical steam function is useful for removing wrinkles from hanging clothes, curtains, or delicate fabrics that cannot be ironed horizontally.

1. Hang the garment on a hanger.
2. Fill the water tank.
3. Set the temperature to maximum.
4. Hold the iron vertically, a few centimeters away from the fabric.
5. Press the steam shot button repeatedly while moving the iron up and down the garment.



Image: Various garments hanging on a clothing rack, illustrating items suitable for vertical steaming.

MAINTENANCE

Cleaning the Soleplate

- Allow the iron to cool completely.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive scouring pads or chemical cleaners.

Self-Cleaning (Anti-Calc) Function

Regular use of the self-cleaning function helps to flush out mineral deposits and maintain optimal steam performance.

1. Fill the water tank to the 'MAX' level.
2. Plug in the iron and set the temperature to maximum.
3. Once the indicator light goes out, unplug the iron.
4. Hold the iron horizontally over a sink.
5. Activate the self-clean function (refer to your iron's specific button/lever for this). Hot water and steam will be expelled from the soleplate, carrying away impurities.
6. Gently shake the iron back and forth until the water tank is empty.
7. Plug the iron back in and let it heat up to dry the soleplate.
8. Unplug and allow to cool before storing.

Storage

- Ensure the iron is unplugged and completely cool.
- Empty any remaining water from the tank.
- Store the iron upright on its heel in a safe, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet fault; thermostat set to minimum.	Check plug and outlet; adjust thermostat to desired setting.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'dry'; limescale buildup.	Fill water tank; set temperature to steam zone; adjust steam control; perform self-cleaning.
Water dripping from soleplate.	Temperature too low for steam; water tank overfilled; anti-drip system not functioning.	Increase temperature; do not overfill; if problem persists, contact support.
White flakes coming from soleplate.	Limescale buildup.	Perform self-cleaning function.

SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	FV1739E0
Color	White
Power	2000 W
Voltage	240 Volts
Continuous Steam Output	24 g/min
Steam Shot	90 g/min
Soleplate Material	Ceramic
Product Dimensions (L x W x H)	2.79 x 24.64 x 16.51 cm
Item Weight	1 Kilogram

WARRANTY AND SUPPORT

Tefal is committed to providing high-quality products. This product is designed for durability and ease of repair.

- **Repairability:** Tefal offers a 15-year repairability commitment for this product, ensuring access to spare parts and repair services through a network of authorized repair centers worldwide.
- For warranty claims, technical assistance, or to locate an authorized service center, please visit the official Tefal website or contact their customer support.
- Keep your proof of purchase for any warranty-related inquiries.



Image: Logo indicating Tefal's 15-year commitment to product repairability.

For more information, you can visit the official [Tefal Brand Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question