

Teesa TSA3540

Teesa Easy Cook EVO 4IN1 Multifunction Robot User Manual

Model: TSA3540 | Brand: Teesa

1. INTRODUCTION

Welcome to the user manual for your Teesa Easy Cook EVO 4IN1 Multifunction Robot, model TSA3540. This appliance is designed to simplify your kitchen tasks with its versatile functions including mixing, meat grinding, blending, and slicing. Please read this manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

General Safety

- Read all instructions before use.
- Do not immerse the motor unit in water or any other liquid.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surface, including the stove.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Carefully unpack all components and check for any damage. Ensure all items listed below are present:

- Main Motor Unit
- Stainless Steel Mixing Bowl (4.5 L capacity)
- Ball Whisk attachment
- Flat Beater attachment
- Kneading Hook attachment
- Meat Grinder attachment with 2 grinding discs (medium, coarse)
- Mandoline attachment with 4 tips (2 slicing discs, 1 snow disc)
- Blender Jug (1.25 L capacity)
- Slicer Bowl (1.25 L capacity)
- Splash Guard with opening
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Teesa Easy Cook EVO 4IN1 Multifunction Robot.



Figure 4.1: The Teesa Easy Cook EVO 4IN1 Multifunction Robot with the whisk attachment and stainless steel mixing bowl. The main unit features a speed control dial and a tilt-head mechanism.

Attachments Overview

The appliance comes with various attachments for different culinary tasks:

- **Whisk:** Ideal for whipping cream, egg whites, and light batters.
- **Flat Beater:** Suitable for mixing cakes, cookies, frostings, and mashed potatoes.
- **Kneading Hook:** Designed for heavy doughs like bread and pizza.
- **Meat Grinder:** For preparing fresh ground meat.
- **Blender:** For smoothies, soups, and sauces.
- **Slicer/Shredder:** For processing vegetables and fruits.



Figure 4.2: Close-up of the three primary mixing attachments: dough hook (left), flat beater (center), and whisk (right).



Figure 4.3: Components of the meat grinder attachment, including two grinding discs and three sausage stuffer nozzles.

5. SETUP

5.1 Initial Cleaning

Before first use, wash all parts that will come into contact with food (mixing bowl, attachments, blender jug, slicer bowl, etc.) in warm soapy water. Rinse thoroughly and dry. The main motor unit should only be wiped with a damp cloth.

5.2 Assembling the Main Unit

1. Place the main motor unit on a clean, stable, and dry surface. Ensure the anti-slip rubber feet are firmly gripping the surface.
2. Ensure the speed control dial is set to '0' (OFF) and the appliance is unplugged.
3. To raise the tilt head, press the release button located on the side of the unit and lift the head until it locks into place.
4. Place the stainless steel mixing bowl into its base, twisting it clockwise until it locks securely.
5. Select the desired attachment (whisk, flat beater, or kneading hook). Insert the attachment into the shaft and twist upwards until it clicks into place.

6. Lower the tilt head by pressing the release button again and gently pushing the head down until it locks.
7. Attach the splash guard to the mixing bowl if desired.



Figure 5.1: The Teesa Easy Cook EVO 4IN1 set up for mixing, showing the whisk attachment and splash guard in place.

5.3 Attaching Other Modules

The Teesa Easy Cook EVO 4IN1 features multiple ports for different modules. Ensure the appliance is unplugged before attaching or detaching any module.

Meat Grinder Attachment

1. Remove the front cover from the main unit.

2. Insert the assembled meat grinder attachment into the front port, aligning the drive shaft, and twist to secure.
3. Place a bowl under the output.



Figure 5.2: The Teesa Easy Cook EVO 4IN1 with the meat grinder attachment installed on the front port.

Blender Attachment

1. Remove the top cover from the main unit.
2. Place the blender jug onto the top port, aligning the base with the drive mechanism, and twist to secure.



Figure 5.3: The Teesa Easy Cook EVO 4IN1 with the blender jug attached to the top port.

Slicer/Shredder Attachment

1. Remove the top cover from the main unit.
2. Place the slicer bowl assembly onto the top port, aligning the base with the drive mechanism, and twist to secure.
3. Insert the desired slicing or shredding disc.



Figure 5.4: The Teesa Easy Cook EVO 4IN1 with the slicer/shredder attachment installed on the top port.

6. OPERATING INSTRUCTIONS

Ensure the appliance is properly assembled and plugged into a suitable power outlet (220-240V, 50/60Hz).

6.1 Speed Control

The appliance features a speed control dial with 7 operating speeds and a pulse function. Turn the dial clockwise to increase speed from 1 to 7. For the pulse function, turn the dial to 'P' and hold; the appliance will operate at maximum speed as long as the dial is held in this position.

6.2 Using the Mixer (Mixing, Kneading, Whisking)

1. Ensure the correct attachment (whisk, flat beater, or kneading hook) is securely installed.
2. Add ingredients to the stainless steel mixing bowl. Do not overfill.
3. Lower the tilt head until it locks.
4. Plug in the appliance.
5. Turn the speed dial to the desired setting. Start with a low speed and gradually increase if needed.
6. For adding ingredients during operation, use the opening in the splash guard.
7. When finished, turn the speed dial to '0' and unplug the appliance.
8. Raise the tilt head and remove the attachment and mixing bowl.

6.3 Using the Meat Grinder

1. Assemble the meat grinder attachment with the desired grinding disc and install it on the front port.
2. Cut meat into small pieces that fit into the feeding tube.
3. Place a bowl under the output.
4. Plug in the appliance.
5. Turn the speed dial to a medium setting (e.g., 3-5).
6. Feed meat into the tube using the food pusher. Never use your fingers.
7. When finished, turn the speed dial to '0' and unplug the appliance.
8. Disassemble and clean immediately.

6.4 Using the Blender

1. Ensure the blender jug is securely installed on the top port.
2. Add ingredients to the blender jug. Do not exceed the MAX fill line (1.25 L).
3. Secure the lid on the blender jug.
4. Plug in the appliance.
5. Turn the speed dial to the desired setting. For quick bursts, use the 'P' (Pulse) function.
6. When finished, turn the speed dial to '0' and unplug the appliance.
7. Carefully remove the blender jug.

6.5 Using the Slicer/Shredder

1. Ensure the slicer bowl assembly with the desired disc is securely installed on the top port.
2. Place a bowl under the output chute.
3. Plug in the appliance.
4. Turn the speed dial to a medium-high setting (e.g., 4-6).
5. Feed ingredients into the feeding tube using the food pusher. Never use your fingers.
6. When finished, turn the speed dial to '0' and unplug the appliance.
7. Disassemble and clean immediately.

7. MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your appliance.

7.1 Cleaning the Main Unit

- Always unplug the appliance before cleaning.
- Wipe the exterior of the main motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Ensure all parts are completely dry before storing or re-using.

7.2 Cleaning Attachments and Bowls

- All detachable parts, including the stainless steel mixing bowl, whisk, flat beater, kneading hook, blender jug, slicer bowl, and meat grinder components, are dishwasher safe.
- Alternatively, wash these parts in warm soapy water, rinse thoroughly, and dry immediately.
- For stubborn food residue, soak the parts before cleaning.
- Handle sharp blades (e.g., slicer discs, meat grinder blades) with extreme care.

7.3 Storage

Store the appliance and its accessories in a clean, dry place, away from direct sunlight and out of reach of children.

8. TROUBLESHOOTING

If you encounter any issues with your Teesa Easy Cook EVO 4IN1, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet fault; Speed dial not at '0' before starting; Overload protection activated.	Check power plug and outlet; Ensure speed dial is at '0' before turning on; Unplug, wait 30 minutes for motor to cool, then try again.
Motor sounds strained or stops during operation.	Overloaded with ingredients; Ingredients too thick/hard; Incorrect speed setting.	Reduce quantity of ingredients; Cut ingredients into smaller pieces; Increase speed setting if appropriate for task; Unplug and allow motor to cool.
Attachments not fitting correctly.	Incorrect attachment for port; Not aligned properly; Obstruction.	Ensure correct attachment is used for the specific port (front for grinder, top for blender/slicer, main head for mixing); Re-align and twist until it clicks; Check for any food residue or debris.
Loud noise or vibration.	Appliance not on a stable surface; Bowl or attachment not securely locked; Overload.	Place on a flat, stable surface; Ensure bowl and attachment are securely locked; Reduce load if overloaded.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

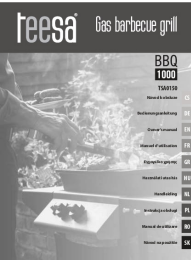
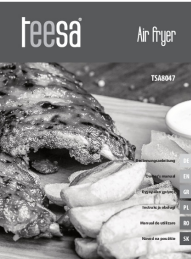
Feature	Specification
Model Number	TSA3540



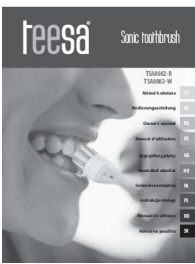

Feature	Specification
Power (Max)	1000 W
Voltage	220-240 V ~ 50/60 Hz
Mixing Bowl Capacity	4.5 L (Stainless Steel)
Blender Jug Capacity	1.25 L
Slicer Bowl Capacity	1.25 L
Speeds	7 speeds + Pulse function
Dimensions (Main Unit)	365 x 220 x 340 mm (L x W x H)
Weight (Main Unit)	5.8 kg
Cable Length	1.45 m
Dishwasher Safe Parts	Yes (detachable parts)

10. WARRANTY AND SUPPORT

Teesa products are manufactured to high quality standards. In case of any issues or for technical support, please contact your retailer or the official Teesa customer service. Please retain your proof of purchase for warranty claims. For more information, visit the official Teesa website: www.teesa.pl

Related Documents - TSA3540

	<p>Teesa TSA0150 Gas Barbecue Grill - Návod k obsluze</p> <p>Kompletní návod k obsluze pro plynový gril Teesa TSA0150. Zjistěte, jak bezpečně a efektivně používat váš nový plynový gril pro venkovní použití. Obsahuje bezpečnostní pokyny, návod k montáži a údržbě.</p>
	<p>Ghid de utilizare Friteuză cu Aer Teesa TSA8047</p> <p>Manual complet pentru Friteuza cu Aer Teesa TSA8047, incluzând instrucțiuni de utilizare, siguranță, operare, curățare, depanare și specificații tehnice. Descoperiți caracteristicile și beneficiile acestui electrocasnic versatil.</p>

	<p>Teesa Wall Clock TSA0048/TSA0048DB User Manual and Specifications</p> <p>Comprehensive user manual for the Teesa wall clock (models TSA0048/TSA0048DB), covering safety, battery installation, time setting, technical specifications, and proper disposal instructions.</p>
	<p>TEESA Digital Air Fryer TSA8053 User Manual</p> <p>Comprehensive user manual for the TEESA Digital Air Fryer model TSA8053, covering safety instructions, product description, operation, maintenance, troubleshooting, and food suggestions in multiple languages.</p>
	<p>Teesa TSA8082 Sonic Toothbrush User Manual & Instructions</p> <p>Comprehensive user manual for the Teesa TSA8082 Sonic Toothbrush (models TSA8082-B, TSA8082-W). Learn about features, charging, settings, cleaning, safety, and specifications.</p>
	<p>Teesa TSA8052 Fan Tower Heater User Manual</p> <p>Comprehensive user manual for the Teesa TSA8052 fan tower heater, covering safety instructions, operation, cleaning, and specifications. Learn how to use your PTC ceramic heater safely and effectively.</p>