

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER Crisp 'N Bake Air Fry Countertop Convection Toaster Oven, XL Capacity, 8-Slice, 5-in-1](#)

BLACK+DECKER TO3265XSSD

BLACK+DECKER Crisp 'N Bake Air Fry Countertop Convection Toaster Oven

Model: TO3265XSSD

Brand: BLACK+DECKER

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials not specifically designed for oven use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause the oven to overheat.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

PRODUCT OVERVIEW

The BLACK+DECKER Crisp 'N Bake Air Fry Toaster Oven offers versatile cooking functions in a compact countertop design. It features intuitive knob controls for temperature, timer, and cooking mode selection.



Front view of the BLACK+DECKER Crisp 'N Bake Toaster Oven, showing the glass door, control knobs, and interior racks.

Key Components:

- **Temperature Control Knob:** Adjusts cooking temperature from Warm (120°F) to 450°F. Includes specific settings for Bake, Broil, Toast, and Air Fry.
- **Timer/Toast Control Knob:** Sets cooking time up to 60 minutes or selects toast shade. Includes a "Stay On" function for longer cooking.
- **Function Selector Knob:** Chooses between Bake, Broil, Toast, Keep Warm, and Air Fry modes.
- **Glass Door:** Provides visibility into the cooking chamber and features a cool-touch handle.

- **Air Fry Basket:** Designed for optimal air circulation during air frying, allowing for crispy results.
- **Bake/Broil Rack:** Standard oven rack for baking, broiling, and toasting.
- **Bake/Broil Pan:** A versatile pan for baking, roasting, and collecting drips.
- **Removable Crumb Tray:** Slides out from the bottom for easy cleaning of crumbs and drips.



Air Fry Technology

Interior view of the toaster oven showing the air fry basket positioned above the bake/broil pan.

SETUP

Before first use, follow these steps:

1. Remove all packing material, stickers, and plastic bands from the appliance.
2. Wash all removable parts (Air Fry Basket, Bake/Broil Rack, Bake/Broil Pan, and Removable Crumb Tray) in warm, soapy water. Rinse and dry thoroughly.

3. Wipe the interior and exterior surfaces of the oven with a damp cloth or sponge. Dry thoroughly.
4. Place the oven on a stable, level, heat-resistant surface. Ensure there is at least 4 inches of space on all sides of the oven for proper air circulation.
5. Plug the appliance into a standard 120V AC electrical outlet.
6. It is recommended to operate the oven on the highest temperature setting for approximately 10 minutes before first use to burn off any manufacturing residues. This may produce a slight odor or smoke, which is normal. Ensure good ventilation during this process.

OPERATING INSTRUCTIONS

This toaster oven offers five versatile cooking functions. Always preheat the oven for optimal results, especially for baking and air frying.

General Operation:

- Place food on the appropriate accessory (Air Fry Basket, Bake/Broil Rack, or Bake/Broil Pan).
- Insert the accessory into the desired rack position.
- Close the glass door.
- Select the desired cooking function using the Function Selector Knob.
- Set the desired temperature using the Temperature Control Knob.
- Set the cooking time using the Timer/Toast Control Knob. The oven will begin cooking.
- A bell will sound when the cooking cycle is complete.

Cooking Functions:

1. Air Fry

Air Fry Technology uses high-intensity hot air to bake, brown, and crisp your favorite fried foods with little to no oil. Ideal for French fries, chicken wings, and frozen snacks.

- Use the Air Fry Basket placed on top of the Bake/Broil Pan to catch drips.
- Select "Air Fry" function.
- Set temperature to 400°F (200°C) or as recommended by recipe.
- Set timer for desired cooking duration.



Air Fry Technology

The air fry function in action, showing crispy French fries inside the basket.

2. Bake

Use the Bake function for casseroles, cookies, cakes, and reheating leftovers. The extra-wide capacity accommodates a 9" x 13" pan with handles.

- Place food on the Bake/Broil Pan or in an oven-safe dish on the Bake/Broil Rack.
- Select "Bake" function.
- Set temperature as required by your recipe (e.g., 350°F - 400°F).
- Set timer for desired cooking duration.



Convection Heating

The convection heating feature allows for even baking, as shown with a loaf cake inside the oven.

3. Broil

Ideal for browning the tops of casseroles, melting cheese, or cooking thin cuts of meat.

- Place food directly on the Bake/Broil Rack or on the Bake/Broil Pan.
- Select "Broil" function.
- Set temperature to 450°F (230°C).
- Monitor food closely as broiling is a fast cooking method.

4. Toast

Perfect for bread, bagels, and frozen waffles. The oven can toast up to 8 slices of bread at once.

- Place bread directly on the Bake/Broil Rack.
- Select "Toast" function.
- Set the Timer/Toast Control Knob to the desired toast shade (light to dark).
- The oven will automatically turn off when the toast cycle is complete.

5. Keep Warm

Use this function to keep cooked food warm before serving without overcooking.

- Place cooked food in an oven-safe dish on the Bake/Broil Rack.
- Select "Keep Warm" function.
- Set temperature to Warm (120°F).
- Set timer for desired duration, or use "Stay On" for extended warming.



5 Cooking Functions

The extra-large capacity allows for a 12-inch pizza to be cooked or kept warm.

COOKING TIPS

- For best air frying results, do not overcrowd the Air Fry Basket. Cook in batches if necessary.
- Shake or flip food halfway through air frying for even browning and crisping.
- Always use oven mitts when inserting or removing items from the hot oven.

- Adjust cooking times and temperatures as needed based on food quantity and desired doneness.
- The convection technology circulates air for faster and more even results, especially when air frying.

CARE AND CLEANING

Regular cleaning will help maintain your toaster oven's performance and appearance.

1. **Before Cleaning:** Always unplug the oven from the electrical outlet and allow it to cool completely before cleaning.
2. **Removable Parts:** The Air Fry Basket, Bake/Broil Rack, Bake/Broil Pan, and Removable Crumb Tray are dishwasher safe or can be washed by hand in warm, soapy water. Rinse thoroughly and dry.
3. **Interior:** Wipe the interior walls with a damp cloth or sponge. For stubborn stains, use a mild liquid cleanser and a non-abrasive sponge. Avoid using abrasive cleaners or metal scouring pads, as they can damage the interior finish.
4. **Exterior:** Wipe the exterior surfaces with a damp cloth or sponge. Dry thoroughly. Do not use abrasive cleaners or polishes that may scratch the stainless steel finish.
5. **Glass Door:** Clean the glass door with a damp cloth or sponge and a mild glass cleaner. Do not use sharp objects or abrasive materials that could scratch the glass.
6. **Crumb Tray:** Regularly remove and empty the Removable Crumb Tray to prevent buildup of crumbs, which can cause odors or fire hazards.

TROUBLESHOOTING

If your toaster oven is not operating correctly, check the following common issues:

Problem	Possible Cause	Solution
Oven does not turn on.	Appliance not plugged in; power outage; controls not set correctly.	Ensure oven is plugged into a working outlet. Check circuit breaker. Set temperature, function, and timer knobs.
Food is not cooking evenly.	Oven not preheated; food overcrowded; incorrect rack position.	Preheat oven before cooking. Do not overcrowd the basket/pan. Adjust rack position based on food type and desired browning.
Excessive smoke or odor.	Food residue on heating elements or interior; first use odor.	Clean interior and accessories thoroughly. For first use, run empty oven for 10 minutes in a well-ventilated area.
Toast is too light/dark.	Toast shade setting incorrect.	Adjust the Timer/Toast Control Knob to a lighter or darker setting.

Problem	Possible Cause	Solution
Knob not working properly.	Internal mechanism issue.	If a knob is not functioning as expected, contact customer support. (Note: Some user reviews indicate potential issues with knob durability over time.)

SPECIFICATIONS

- **Model Number:** TO3265XSSD
- **Brand:** BLACK+DECKER
- **Capacity:** Extra Large (Fits 9" x 13" pan with handles, 8 slices of bread, or a 12" pizza)
- **Dimensions (DxWxH):** 21.5"D x 23"W x 11.2"H
- **Color:** Stainless Steel
- **Power Source:** AC adapter
- **Voltage:** 120V
- **Wattage:** 1500W
- **Control Type:** Knob Control
- **Temperature Range:** 250 - 450 Degrees Fahrenheit (Warm to 450°F)
- **Functions:** Bake, Broil, Toast, Keep Warm, Air Fry
- **Included Components:** TO3265XSSD, Air Fry Basket, Bake/Broil Rack, and 9" x 13" pan
- **Item Weight:** 16.91 pounds

WARRANTY AND SUPPORT

This BLACK+DECKER appliance comes with a 2-Year Limited Warranty.

For detailed warranty information, troubleshooting assistance, or to purchase replacement parts, please refer to the official user manual or visit the BLACK+DECKER support website.

Official User Manual (PDF): [Download Here](#)

BLACK+DECKER Store: [Visit Store](#)