

## UBay RTS7010B

# UBay RTS7010B Remote Control User Manual

For RCA Home Theater Sound Bar Models: RTS7010B-E1, RTS7110B, RTS7630B, RTS739BWS

## 1. INTRODUCTION

This manual provides comprehensive instructions for the UBay RTS7010B Remote Control. This remote is designed as a direct replacement for various RCA Home Theater Sound Bar systems, ensuring seamless operation without the need for complex programming or pairing.

### Compatible RCA Sound Bar Models:

- RTS7010B-E1
- RTS7110B
- RTS7630B
- RTS739BWS
- RTS796B

## 2. SETUP AND BATTERY INSTALLATION

The UBay RTS7010B Remote Control requires two AAA alkaline batteries (not included). No programming or pairing is necessary; simply install the batteries, and the remote will be ready for use.

### 2.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



*Image 1: Back view of the remote control with the battery compartment open, illustrating correct battery placement.*

**Important:** Always use new alkaline batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

### 3. OPERATING THE REMOTE CONTROL

---

This section details the functions of the buttons on your UBay RTS7010B remote control. Point the remote directly at your RCA Sound Bar for optimal performance.



Image 2: Front view of the UBay RTS7010B Remote Control, highlighting button layout.

### 3.1 Button Functions

Button	Function
<b>Power</b>	Turns the sound bar On or Off.
<b>Mute</b>	Mutes or unmutes the sound.

Button	Function
Bluetooth (BT icon)	Selects Bluetooth input mode.
LINE IN	Selects Line In (Auxiliary) input mode.
AUX	Selects Auxiliary input mode.
OPTICAL	Selects Optical input mode.
VOL ▲ / ▼	Increases or decreases the main volume.
BASS ▲ / ▼	Adjusts the bass level.
TREBLE ▲ / ▼	Adjusts the treble level.
SOURCE ▲ / ▼	Cycles through available input sources.
Play/Pause (▶▶)	Plays or pauses media (primarily for Bluetooth mode).
Previous Track (◀◀)	Skips to the previous track (primarily for Bluetooth mode).
Next Track (▶▶)	Skips to the next track (primarily for Bluetooth mode).

## 4. MAINTENANCE

Proper care will ensure the longevity and reliable performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Avoid Moisture:** Keep the remote control away from water and other liquids.

## 5. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

- **Remote not responding:**
  - Ensure the remote is pointed directly at the sound bar's sensor.
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with new AAA alkaline batteries.
  - Ensure there are no obstructions between the remote and the sound bar.
- **Limited range:**
  - Replace batteries with new ones.
  - Ensure you are within the maximum operating range of 10 meters (33 feet).
  - Remove any objects that might be blocking the infrared signal.
- **Specific buttons not working:**
  - This remote is pre-programmed for specific RCA sound bar models. Verify your sound bar model is listed

as compatible.

- Ensure the sound bar is powered on and functioning correctly.

## 6. SPECIFICATIONS

Feature	Detail
Brand	UBay
Model Name	RTS7010B
Compatible Devices	RCA Home Theater Sound Bars (RTS7010B-E1, RTS7110B, RTS7630B, RTS739BWS, RTS796B)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Number of Buttons	10 (visible buttons)
Maximum Range	10 Meters (approximately 33 feet)
Battery Type	2 x AAA Alkaline Batteries (not included)
Color	Black
Special Feature	Ergonomic design
UPC	631882411907

## 7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your UBay RTS7010B Remote Control, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. As a replacement remote, specific warranty terms may vary.

For further assistance, you may also visit the UBay official website or contact their customer service directly.

