

UBay AKB75095307

Universal Remote Control Instruction Manual

Model: AKB75095307 | Brand: UBay

1. PRODUCT OVERVIEW

The UBay AKB75095307 Universal Remote Control is designed for seamless compatibility with a wide range of LG Smart LCD LED HDTV UHD OLED 3D 4K TVs. This remote offers an upgraded experience with enhanced transmitting distance and quick response time, serving as a direct replacement without the need for complex programming or pairing.

It provides all essential functions for controlling your LG television, including channel navigation, volume control, input selection, and direct access to popular streaming services.



Image: Front and close-up view of the UBay AKB75095307 Universal Remote Control, highlighting its ergonomic design and the arrangement of its buttons, including the number pad and dedicated streaming service buttons.



Image: Side view of the UBay AKB75095307 Universal Remote Control, illustrating its slim and comfortable profile.

2. SETUP

2.1 Battery Installation

This remote control requires two AAA batteries (not included). To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2.2 Initial Use

The UBay AKB75095307 remote control is designed for immediate use with compatible LG TVs. No programming or pairing is required. Once batteries are installed, the remote is ready to operate your television.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your LG TV's infrared receiver for optimal performance. Below are the functions of the primary buttons:

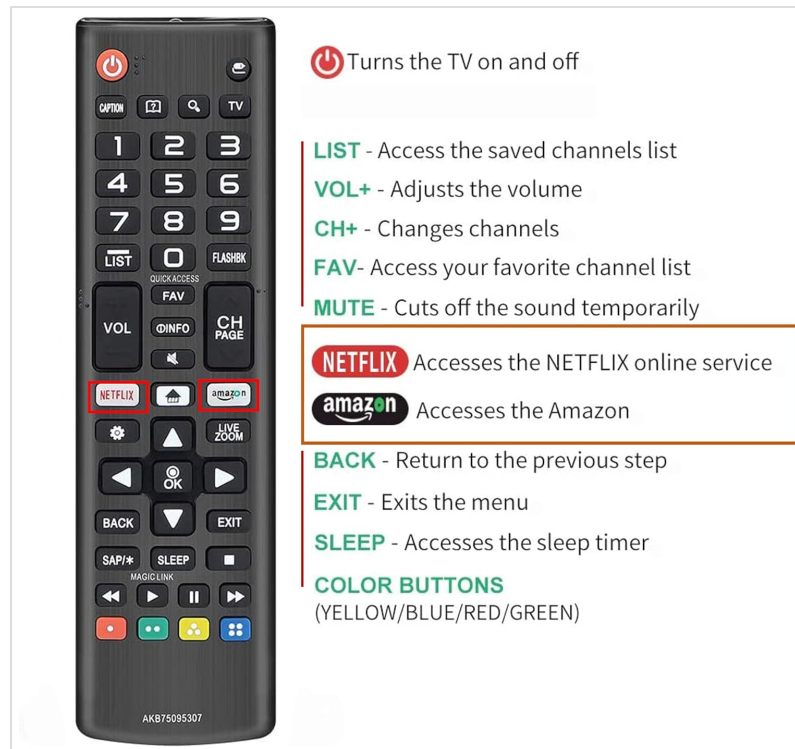


Image: The UBay AKB75095307 remote control with clear labels for each button's function, including power, volume, channel, navigation, and dedicated streaming buttons.

- **Power Button (●):** Turns the TV on and off.
- **Number Pad (0-9):** Directly input channel numbers or other numerical selections.
- **LIST:** Accesses the saved channels list.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels up or down.
- **FAV:** Accesses your favorite channel list.
- **MUTE:** Cuts off the sound temporarily.
- **Navigation Arrows (Up, Down, Left, Right):** Navigate through menus and options.
- **OK Button:** Confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **SLEEP:** Accesses the sleep timer function.
- **NETFLIX Button:** Directly accesses the Netflix online streaming service.
- **Amazon Prime Video Button:** Directly accesses the Amazon Prime Video streaming service.
- **Color Buttons (Red, Green, Yellow, Blue):** Perform specific functions depending on the TV's current mode or application.

4. COMPATIBILITY

The UBay AKB75095307 Universal Remote Control is broadly compatible with LG Smart LCD LED HDTV UHD OLED 3D 4K TVs. It functions as a direct replacement for many original LG remote models, including but not limited to:

- 32LJ550BUA, 32LJ550B-UA, 32LJ550MUB, 32LJ550M-UB
- 43UJ6200, 43LJ5500UA, 43LJ5500-UA, 43LJ550MUB, 43LJ550M-UB, 43LJ5550UC, 43LJ5550-UC, 43UJ6050UC, 43UJ6050-UC, 43UJ6200UA, 43UJ6200-UA, 43UJ6300UA, 43UJ6300-UA, 43UJ6350UC, 43UJ6350-UC, 43UJ6500, 43UJ6500-UB, 43UJ6560
- 49LJ5500UA, 49LJ5500-UA, 49LJ550MUB, 49LJ550M-UB, 49LJ5550UC, 49LJ5550-UC, 49UJ6050UC, 49UJ6050-UC, 49UJ6200UA, 49UJ6200-UA, 49UJ620MUA, 49UJ620M-UA, 49UJ6300UA, 49UJ6300-UA, 49UJ6350UC, 49UJ6350-UC, 49UJ6500, 49UJ6500UB, 49UJ6500-UB, 49UJ6560, 49UJ6560-UF
- 55LJ5500UA, 55LJ5500-UA, 55LJ550MUB, 55LJ550M-UB, 55SJ8000, 55SJ8000UA, 55SJ8000-UA, 55SJ800A, 55SJ8500, 55SJ8500UB, 55SJ8500-UB, 55UJ6050UC, 55UJ6050-UC, 55UJ6200UA, 55UJ6200-UA, 55UJ6300UA, 55UJ6300-UA, 55UJ6350UC, 55UJ6350-UC, 55UJ6520, 55UJ6520-UD, 55UJ6540, 55UJ6540-UB, 55UJ6580, 55UJ6580-UE
- 60SJ8000, 60SJ8000UA, 60SJ8000-UA, 60SJ800A, 60SJ8500, 60SJ8500UB, 60SJ8500-UB, 60UJ6050UC, 60UJ6050-UC, 60UJ6300UA, 60UJ6300-UA, 60UJ6350UC, 60UJ6350-UC, 60UJ6540, 60UJ6540-UB
- 65SJ8000, 65SJ8000UA, 65SJ8000-UA, 65SJ800A, 65SJ800AUB, 65SJ800A-UB, 65SJ850A, 65SJ8500, 65SJ8500UB, 65SJ8500-UB, 65SJ9500, 65SJ9500UA, 65SJ9500-UA, 65UJ6050UC, 65UJ6050-UC, 65UJ6200UA, 65UJ6200-UA, 65UJ6300UA, 65UJ6300-UA, 65UJ6350UC, 65UJ6350-UC, 65UJ6520, 65UJ6520-UD, 65UJ6540, 65UJ6540-UB, 65UJ6580, 65UJ6580-UE
- 70UJ6520, 70UJ6520-UA, 70UJ6570, 70UJ6570-UB, 70UJ657A, 70UJ657A-UC, 74UJ6450, 74UJ6450UD, 74UJ6450-UD, 75SJ857A, 75SJ8570, 75SJ8570UB, 75SJ8570-UB, 75UJ6470, 75UJ6470-UC, 75UJ6520, 75UJ6520-UA, 75UJ657A, 75UJ657A-UB
- 86SJ9570, 86SJ9570UA, 86SJ9570-UA
- OLED55B7A, OLED55B7AU, OLED55B7A-U, OLED55B7P, OLED55B7PU, OLED55B7P-U, OLED55C7P, OLED55C7PU, OLED55C7P-U, OLED55E7P, OLED55E7PU, OLED55E7P-U
- OLED65B7, OLED65B7A, OLED65B7AU, OLED65B7A-U, OLED65B7P, OLED65B7PU, OLED65B7P-U, OLED65C7P, OLED65C7PU, OLED65C7P-U, OLED65E7P, OLED65E7PU, OLED65E7P-U



Image: The UBay AKB75095307 remote control displayed alongside a text list of compatible LG remote models, emphasizing its broad compatibility.

5. SPECIFICATIONS

Feature	Detail
Model Number	AKB75095307
Brand	UBay
Product Dimensions	7 x 1.8 x 0.5 inches
Item Weight	2 ounces
Color	Black
Max Number of Supported Devices	1 (Television)
Special Feature	Universal, No Programming Required

6. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure fresh AAA batteries are correctly installed with proper polarity.
 - Verify there are no obstructions between the remote control and the TV's infrared receiver.
 - Confirm the remote is pointed directly at the TV.
- **Specific Buttons Not Working (e.g., Scroll Wheel, Voice Control):**
 - While this remote is broadly compatible, some advanced features (like the scroll wheel or voice control found on newer LG Magic Remotes) may not be supported by older LG TV models. The primary navigation and function buttons will still operate.
- **Reduced Transmitting Distance:**
 - Replace batteries with new ones.
 - Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR receiver.

7. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop or subject the remote to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. WARRANTY AND SUPPORT

For specific warranty information or technical support, please refer to the product packaging or contact UBay customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may also visit the product page on Amazon.com or contact the seller, "Value Foremost," for support related to your purchase.

© 2024 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07J2SP7P6>

More documents and user manuals: <https://manuals.plus/>