

Bosch 06033D1140

Bosch UniversalVac 15 Instruction Manual

Model: 06033D1140

INTRODUCTION

Welcome to the Bosch UniversalVac 15. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new wet and dry vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PACKAGE CONTENTS

Your Bosch UniversalVac 15 package should contain the following items:

- UniversalVac 15 Wet and Dry Vacuum Cleaner
- Paper filter bag
- Pre-filter
- Filter (Cartridge filter)
- Crevice nozzle
- Handle
- 2 extraction pipes - 0.5 m each - Ø 35 mm
- Floor nozzle
- Rubber lip/brush insert
- 2.2 m hose - Ø 35 mm
- Universal adapter

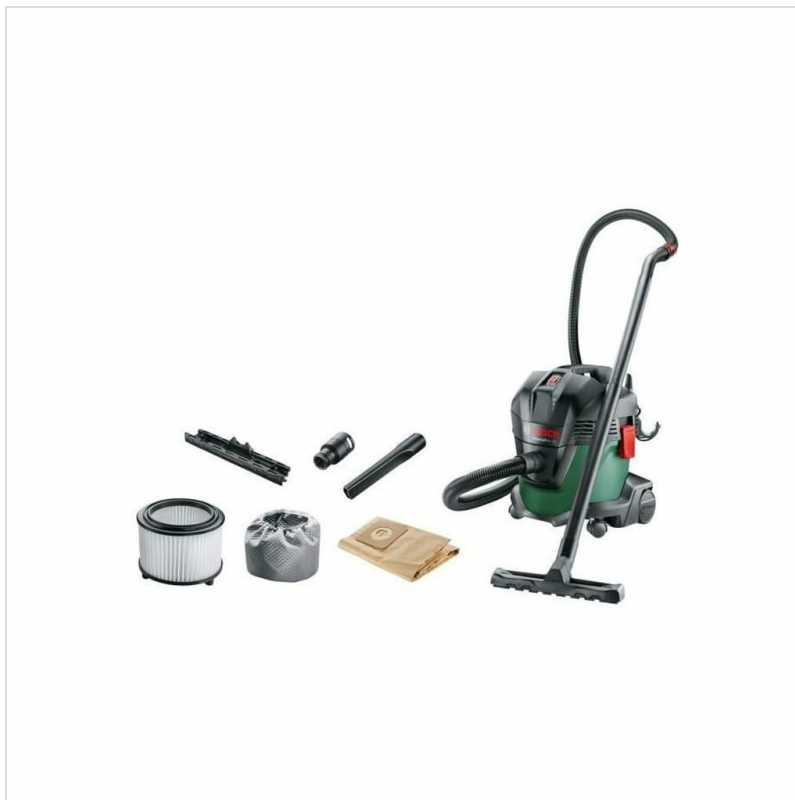


Image: The Bosch UniversalVac 15 vacuum cleaner shown with its various accessories, including the hose, extension pipes, floor nozzle, crevice nozzle, filters, and paper bag.



Image: The retail packaging box for the Bosch UniversalVac 15, displaying product features and branding.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Attaching the Wheels:** Ensure the wheels are securely attached to the base of the vacuum cleaner for stability and mobility.
3. **Connecting the Hose:** Insert the flexible hose into the suction port on the front of the vacuum cleaner until it clicks into place. For blowing function, connect the hose to the exhaust port.
4. **Assembling Extension Pipes and Nozzle:** Connect the two 0.5m extraction pipes to the handle, then attach the desired nozzle (floor nozzle or crevice nozzle) to the end of the pipes.
5. **Installing Filters:**
 - **For Dry Vacuuming:** Ensure the paper filter bag is correctly installed inside the container, covering the inlet. The pre-filter and cartridge filter should also be in place.
 - **For Wet Vacuuming:** Remove the paper filter bag. The cartridge filter and pre-filter should remain installed to protect the motor.



Image: A person carrying the Bosch UniversalVac 15 by its integrated handle, demonstrating its portability.

OPERATING INSTRUCTIONS

General Operation

Plug the power cord into a suitable electrical outlet. The Bosch UniversalVac 15 operates at 1000 Watts. Turn the vacuum cleaner on using the power switch located on the unit.

Wet Vacuuming

Before wet vacuuming, ensure the paper filter bag is removed. The cartridge filter and pre-filter must be installed to protect the motor from liquids. Use the rubber lip insert on the floor nozzle for optimal liquid pickup.



Image: The floor nozzle of the Bosch UniversalVac 15 cleaning a mixture of wet and dry debris on a hard surface, highlighting its versatility.

Dry Vacuuming

For dry vacuuming, ensure the paper filter bag is correctly installed. The cartridge filter and pre-filter should also be in place. Use the brush insert on the floor nozzle for effective dry debris collection.

Blower Function

To use the blower function, disconnect the hose from the suction port and connect it to the exhaust port on the vacuum cleaner. This function is ideal for clearing leaves or debris from hard-to-reach areas.

Connecting to Power Tools

The UniversalVac 15 can be connected to many Bosch Green DIY power tools using the universal adapter. This allows for efficient dust extraction directly from the power tools, ensuring a cleaner and healthier working environment.



Image: The Bosch UniversalVac 15 connected via its universal adapter to a Bosch power tool, demonstrating its use for dust extraction during woodworking.

MAINTENANCE

Filter Cleaning and Replacement

The built-in wet and dry cartridge filter does not require frequent changing. However, regular cleaning is recommended to maintain optimal suction power.

- **Cartridge Filter:** For dry dust, gently tap the filter to dislodge dust. For wet debris, rinse the filter with water and allow it to air dry completely before reinstallation.
- **Paper Filter Bag:** Replace the paper filter bag when it is full or when suction power decreases significantly during dry vacuuming.
- **Pre-filter:** Clean the pre-filter regularly by shaking off dust or rinsing if necessary.

General Cleaning

Wipe the exterior of the vacuum cleaner with a damp cloth. Do not use abrasive cleaners or solvents. Empty the container regularly to prevent buildup and maintain hygiene.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Suction Power	Clogged filter, full dust bag, blocked hose/nozzle.	Clean or replace filters. Empty dust bag. Check hose and nozzle for blockages.
Vacuum does not turn on	No power supply, faulty power cord/plug.	Check power outlet. Inspect cord and plug for damage. Contact service if problem persists.

Problem	Possible Cause	Solution
Water leaking during wet vacuuming	Container too full, filter not properly installed, damaged seal.	Empty container. Ensure filters are correctly seated. Check seals for damage.

SPECIFICATIONS

- **Model:** Bosch UniversalVac 15 (Model Number: 06033D1140)
- **Power Input:** 1000 Watts
- **Capacity:** 15 Litres
- **Hose Length:** 2.2 Metres
- **Suction Power:** 240 mbar
- **Airflow:** 65 L/s
- **Weight:** 6.9 kg
- **Dimensions (L x W x H):** 49L x 39.5W x 46H Centimeters
- **Noise Level:** 84 dB
- **Filter Type:** Cartridge (Wet/Dry)
- **Special Features:** Wet/Dry Function, Blower Function, Power Tool Connectivity

WARRANTY AND SUPPORT

The Bosch UniversalVac 15 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty duration (typically 1 year for battery life, implying product warranty). For technical support, spare parts, or service, please contact your local Bosch service center or visit the official Bosch website. Keep your purchase receipt as proof of purchase for warranty claims.

For more information, visit the official Bosch store: [Bosch Store on Amazon.in](#)