

[Manuals.plus](#) /

› [Homdox](#) /

› Homdox Electric Cheese Grater 5 in 1 Professional Electric Slicer Shredder 150W Cheese Grater One-Touch Control Salad Maker for Home Kitchen Use, Electric Salad Machine for Cheese, Fruits, Vegetables

Homdox 150W (FD-7)

Homdox Electric Cheese Grater & Slicer/Shredder User Manual

Model: 150W (FD-7)

INTRODUCTION

Thank you for choosing the Homdox Electric Cheese Grater and Slicer/Shredder. This versatile 5-in-1 appliance is designed to simplify your food preparation tasks, offering efficient slicing, shredding, and grating for various ingredients like cheese, fruits, and vegetables. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Figure 1: Homdox Electric Cheese Grater and its capabilities.

SAFETY INFORMATION

Your safety is paramount. Always adhere to the following safety guidelines:

- **Read All Instructions:** Familiarize yourself with the appliance's operation and safety features before use.
- **Electrical Safety:** Ensure the voltage matches your power supply. Unplug the appliance when not in use, before cleaning, or before assembling/disassembling parts. Do not immerse the motor base in water or other liquids.
- **Prevent Injury:** Keep hands and utensils away from moving parts during operation. Always use the food pusher provided to feed ingredients into the chute. Never use fingers or other objects to push food.
- **Child Safety:** This appliance is not intended for use by children. Keep out of reach of children and supervise closely when in use near them.

- **Proper Use:** Use the appliance only for its intended household purpose as described in this manual. Do not use outdoors.
- **Damaged Appliance:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer support for assistance.
- **BPA-Free Materials:** All materials in contact with food are BPA-free, ensuring food safety.



Figure 2: Safety features and design of the Homdox Electric Slicer.

PRODUCT COMPONENTS

The Homdox Electric Cheese Grater comes with the following components:

- **Motor Base:** The main unit housing the 150W motor and control button.
- **Food Chute/Feed Port:** Where ingredients are inserted.
- **Food Pusher:** Used to safely push food into the chute.
- **5 Interchangeable Stainless Steel Cones:**
 - Thick Slicing Cone (for potatoes, cucumbers, carrots)
 - Thin Slicing Cone (for thin slices of vegetables)
 - Coarse Shredding Cone (for cheese, carrots, cabbage)
 - Fine Shredding Cone (for cheese, carrots, cabbage)
 - Grinding/Chopping Cone (for nuts, chocolate, breadcrumbs)
- **Outlet Tube:** Where processed food exits.

5-in-1 PROFESSIONAL SALAD SHOOTER

5 Sharp Stainless Steel Cones



Multifunction Salad Maker
Satisfied your different needs

Figure 3: The 5 sharp stainless steel cones for versatile food preparation.

SETUP

Follow these steps to set up your Homdox Electric Cheese Grater:

1. Place the motor base on a stable, flat, and dry surface.
2. Attach the transparent food chute to the motor base by aligning the tabs and twisting until it locks into place.
3. Select the desired stainless steel cone for your task (slicing, shredding, or grinding).
4. Insert the selected cone into the food chute, ensuring it is securely seated.
5. Place a bowl or plate under the outlet tube to collect the processed food.
6. Plug the appliance into a suitable electrical outlet.



Figure 4: Step-by-step assembly of the electric slicer.

OPERATING INSTRUCTIONS

Using your Homdox Electric Cheese Grater is simple and efficient:

1. Ensure the appliance is properly assembled and plugged in.
2. Prepare your ingredients by cutting them into pieces that fit comfortably into the food chute.
3. Press the ON/OFF button to turn the appliance on.
4. Carefully place the ingredients into the food chute.
5. Use the food pusher to gently guide the ingredients down towards the rotating cone. Apply even, steady pressure.
6. Once all ingredients are processed, press the ON/OFF button to turn the appliance off.
7. Unplug the appliance from the power supply before disassembling or cleaning.

Using Different Cones:

- **Slicing Blades (Thick/Thin):** Ideal for cucumbers, potatoes, carrots, and other firm vegetables.
- **Shredding Blades (Coarse/Fine):** Perfect for grating cheese, carrots, cabbage, and zucchini.
- **Grinding Blade:** Suitable for nuts, peanuts, chocolate, and making breadcrumbs.

Your browser does not support the video tag.

Video 1: Demonstration of the Homdox Electric Slicer Shredder Salad Maker in use, showcasing its various functions for different ingredients.

5 Sharp Stainless Steel Cones



Figure 5: Thick Slices Blade in action.

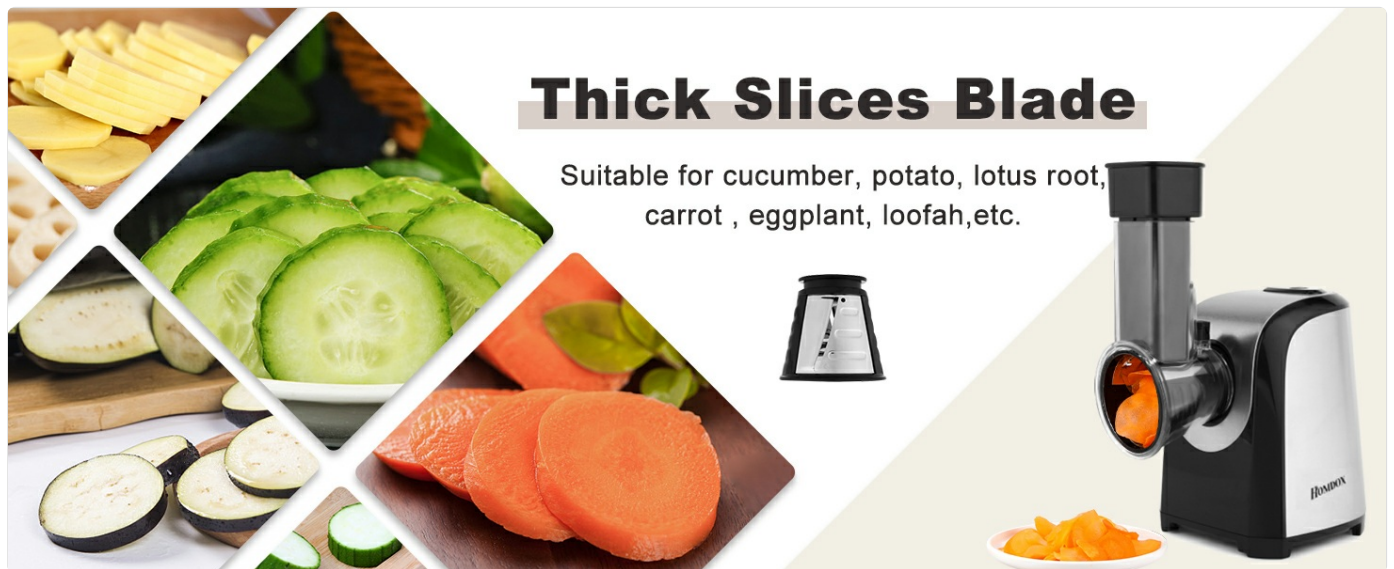


Figure 6: Thin Slices Blade in action.



Figure 7: Fine Shredding Blade in action.



Figure 8: Coarse Shredding Blade in action.



Figure 9: Chopped Blade in action.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your appliance:

1. **Unplug First:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the food pusher, cones, and food chute from the motor base.
3. **Wash Detachable Parts:** The detachable feed port, outlet tube, and blade cones are washable. Hand wash these parts with warm, soapy water. Use a brush if necessary to remove stubborn food residue.
4. **Clean Motor Base:** Wipe the stainless steel shell of the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing to prevent rust and maintain hygiene.
6. **Storage:** Store the appliance and its accessories in a clean, dry place.



Easy to clean, can also washed with a brush

Figure 10: Easy cleaning of the detachable parts.

TROUBLESHOOTING

If you encounter issues with your Homdox Electric Cheese Grater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the food chute is properly locked into the motor base.

Problem	Possible Cause	Solution
Motor slows down or jams.	Overloading with too much food; food pieces are too large or too hard.	Reduce the amount of food being processed. Cut ingredients into smaller, manageable pieces. Do not force food into the chute.
Food is not processed evenly.	Incorrect cone used; inconsistent pressure on food pusher.	Ensure you are using the appropriate cone for the desired result. Apply steady and even pressure with the food pusher.
Appliance is noisy.	Normal operation; loose parts.	Some motor noise is normal. Check that all parts are securely assembled. If noise is excessive or unusual, discontinue use and contact support.

If the problem persists after trying these solutions, please contact Homdox customer support.

SPECIFICATIONS

Feature	Detail
Brand	Homdox
Model Number	FD-7 (150W)
Product Dimensions	9.05"L x 6.29"W x 11.02"H
Material	Stainless Steel
Color	Silver
Power	150W
Operation Mode	Automatic
Special Feature	Interchangeable Blades (5-in-1)
Item Weight	4.16 pounds
UPC	727955807545

PRODUCT PARAMETERS

Title Homdox Salad Maker		Model Number FD-7	
Material Stainless steel		Color Siver Black	Weight 4.32LB
Size 9.05* 6.29*11.02 inch (L*W*H)		Power 150W	
Product Aecessories Knife Box, Wafer cylinder, Thickslices Cylinder, Filaments Cylinder, Coarseyard Cylinder,Shavedice Cylinder, Feeder			



Figure 11: Detailed product specifications.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Homdox website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

You can also find additional information and support by visiting the [Homdox Store on Amazon](#).

A digital version of the user manual is also available for download:[User Manual \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I get a parts list and instructions for replacing the retaining pin on my Homdox BH6616 slicer?

Based on the manual for the Homdox Electric Slicer (Model FD-7/BH6616), there is no internal parts list or specific instruction for replacing a "retaining pin" provided to users. The manual explicitly states: "Never try...

[Read full answer](#)