

Amazon Basics PL10S10

Amazon Basics Traditional Electronic Keyless Keypad Deadbolt Door Lock

Model: PL10S10

PRODUCT OVERVIEW

The Amazon Basics Traditional Electronic Keyless Keypad Deadbolt Door Lock offers a secure and convenient way to manage access to your home or office. This electronic deadbolt features a keypad for keyless entry, along with a traditional key option for backup. It supports up to six customizable user codes and temporary single-use codes, providing flexible access control. The lock also includes an automatic locking feature, which can be set to engage between 10 to 99 seconds after entry, enhancing security and peace of mind.





Figure 1: Front view of the Amazon Basics Traditional Electronic Keyless Keypad Deadbolt Door Lock, showcasing the keypad and keyhole in a satin nickel finish.

amazon basics



Up to 6 programmable user codes and customizable automatic door locking



Fits both left and right-handed doors
1-3/8 to 1-3/4 in thickness



Can be used electronically or with traditional key

Satin Nickel

Traditional Design

Figure 2: Key features of the deadbolt, including programmable user codes, door compatibility, and dual operation options.

SETUP AND INSTALLATION

Before beginning installation, ensure all components are present and your door meets the compatibility requirements. Refer to the detailed installation manual for step-by-step instructions.

1. Unpacking and Component Check

Carefully unpack all items from the box and verify that all parts are included as shown in the diagram below. If any parts are missing or damaged, do not proceed with installation and contact customer support.



Figure 3: All components included in the product package, essential for a complete installation.

2. Door Preparation and Compatibility

This lock is designed to fit standard door preparations. Ensure your door thickness is between 1-3/8 to 1-3/4 inches (35.1 mm to 50.8 mm) and the door holes are suitable for 2-1/8 inches (54.1 mm). The backset should be 2-3/8 or 2-3/4 inches (60.5 mm or 69.9 mm).



① Backset

2-3/8 in or 2-3/4 in
(60.5 mm or 69.9 mm)

② Hole Diameter

2-1/8 in
(54.1 mm)

③ Bore Diameter

1 in
(25.4 mm)

④ Door Thickness


1-3/8 in to 2 in
(35.1 mm to 50.8 mm)



Keep the door open and
the lockset unlocked while
programming to prevent
accidental lockouts

Figure 4: Detailed door measurement requirements for proper installation, including backset and hole dimensions.

Door Compatibility Guide

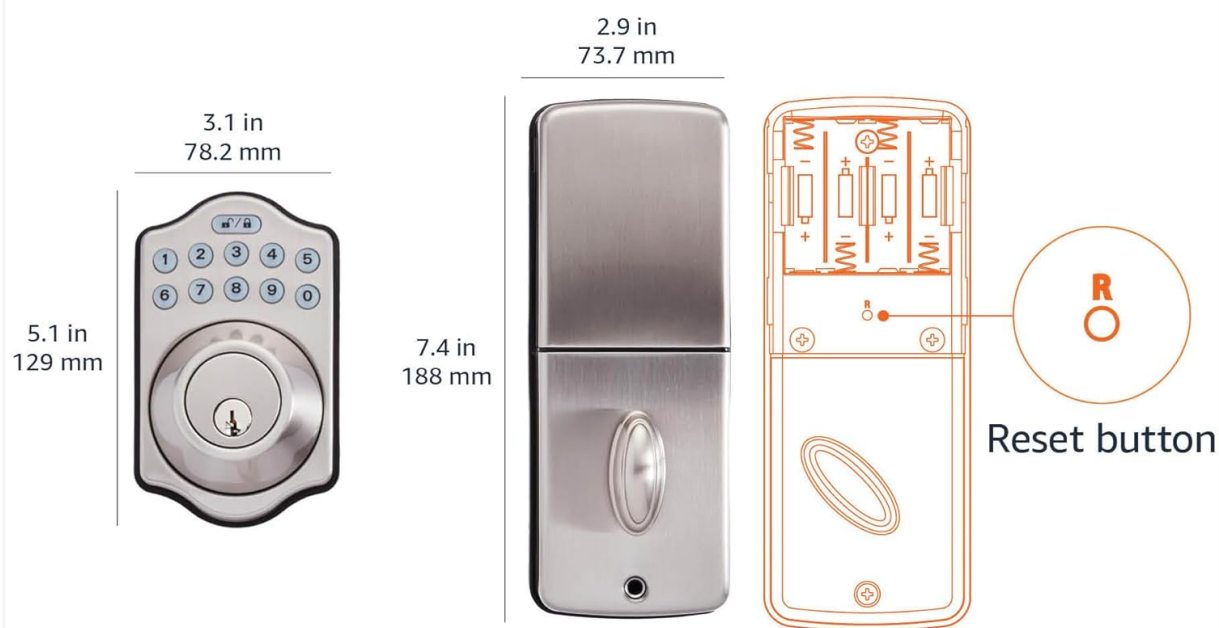

SUITABLE DOOR SIZE		
Door holes		
Only suitable for 2-1/8 in / 54.1 mm		
Door thickness	Left handed door	Right handed door
1-3/8 in to 2 in / 35.1 mm to 50.8 mm		

Figure 5: Visual guide for door compatibility, showing lock dimensions and suitable door types.

3. Battery Installation

The lock requires 4 AA batteries (not included). Install them into the interior assembly following the polarity indicators. Ensure the batteries are fresh for optimal performance.

OPERATING INSTRUCTIONS

1. Locking and Unlocking

- **To Unlock:** Enter a valid user code on the keypad, then press the Lock button. The deadbolt will retract.
- **To Lock:** Press the Lock button on the keypad. The deadbolt will extend.
- **Manual Operation:** Use the traditional key from the outside or the thumb turn from the inside to lock or unlock the deadbolt.

2. Programming User Codes

The lock supports up to 6 unique user codes. To program new codes or modify existing ones, refer to the detailed programming instructions in the full user manual. It is recommended to program codes with the door open to prevent accidental lockouts.

3. Temporary Single-Use Codes

For visitors or temporary access, you can generate single-use codes that expire after one use. Consult the user manual for the procedure to create and manage these codes.

4. Automatic Locking Feature

The automatic locking feature can be enabled to re-lock the door automatically after a set period (10 to 99 seconds) following a successful unlock. This feature can be configured or disabled via the programming mode.

5. Resetting the Lock

If you need to reset the lock to factory default settings, locate the reset button on the interior assembly (refer to Figure 5 for location). Follow the specific reset procedure outlined in the user manual. This will erase all programmed user codes.

MAINTENANCE

1. Battery Replacement

When the batteries are low, the lock will provide an audible and/or visual indicator. Replace all four AA batteries simultaneously with new, high-quality alkaline batteries. Do not mix old and new batteries or different battery types.

2. Cleaning

Clean the lock's exterior with a soft, damp cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and electronic components.

3. General Care

Periodically check the screws and mounting to ensure the lock remains securely fastened. Avoid excessive force when operating the keypad or turning the thumb turn.

TROUBLESHOOTING

If you encounter issues with your Amazon Basics Electronic Keypad Deadbolt, try the following common troubleshooting steps:

- **Keypad Unresponsive:** Check battery levels and replace if necessary. Ensure the battery pack is correctly seated.
- **Lock Not Engaging/Disengaging:** Verify that the deadbolt latch is aligned correctly with the strike plate on the door frame. Ensure there are no obstructions.
- **Codes Not Working:** Re-enter the programming mode and verify the user codes. If issues persist, perform a factory reset and reprogram all codes.
- **Beeping Sounds:** Refer to the user manual for specific beep codes, which often indicate low battery or programming errors.

For more detailed troubleshooting guides and solutions, please consult the comprehensive User Guide (PDF) available for download.

SPECIFICATIONS

Feature	Specification
Brand	Amazon Basics
Model Name	PL10S10
Lock Type	Keypad Deadbolt
Special Feature	Keyless Entry
Material	Nickel
Color	Satin Nickel
Dimensions (L x W x H)	7.42 x 5.28 x 4.76 inches
Item Weight	2.04 Pounds
Power Source	4 x AA Batteries (not included)
Door Thickness Compatibility	1-3/8 to 1-3/4 inches (35.1 mm to 50.8 mm)
User Codes	Up to 6 customizable codes + temporary single-use codes
Automatic Locking	Adjustable from 10 to 99 seconds
Included Components	Exterior keypad, interior assembly, deadbolt latch, strike plate, mounting plate, screws, keys

WARRANTY INFORMATION

This Amazon Basics product is covered by a limited warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the official [Warranty Document \(PDF\)](#) provided by the manufacturer. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please visit the Amazon Basics support page or refer to the comprehensive [User Guide \(PDF\)](#). You may also find helpful information on the product's Amazon listing page.