

Princess 01.162367.01.500

Princess Multi Wonder Chef Pro Electric Multi-Cooker

Instruction Manual - Model 01.162367.01.500

1. INTRODUCTION AND OVERVIEW

The Princess 162367 Multi Wonder Chef Pro is a versatile electric multi-cooker designed for various cooking tasks. It functions as a frying pan, grill plate, teppanyaki plate, and wok, making it an ideal appliance for preparing meals for large groups or when kitchen space is limited. Its non-stick coating allows for healthier cooking without excessive fats, and its adjustable thermostat ensures precise temperature control for optimal results.

This multi-cooker is perfect for quickly frying or slow-cooking dishes, such as pulled pork, stews, curries, and paella. The dual heating element ensures even heat distribution. It is also suitable for keeping food warm during parties or barbecues.

The appliance includes a glass lid with a steam vent, allowing you to monitor the cooking process, and practical wooden spatulas to prevent damage to the non-stick surface. Its high-quality non-stick coating also makes cleaning effortless, with no burnt or stuck-on residues.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance to prevent damage or injury. Keep this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the electrical unit, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not touch hot surfaces. Use handles or oven mitts.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

- Never leave the appliance unattended while in operation.
- Do not use metal utensils that could scratch the non-stick coating. Use the provided wooden spatulas or other non-abrasive tools.

3. COMPONENTS AND PARTS LIST

The Princess Multi Wonder Chef Pro package includes the following components:

- Princess Multi Wonder Chef Pro unit (electric pan)
- Glass lid with steam vent
- Removable power cord with adjustable thermostat
- Wooden spatula
- User manual



Figure 3.1: The Princess Multi Wonder Chef Pro electric multi-cooker unit.



Figure 3.2: The glass lid with steam vent.

4. SETUP

- 1. Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or disposal.
- 2. Clean:** Before first use, wash the pan and glass lid with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the heating unit with a damp cloth.
- 3. Placement:** Place the multi-cooker on a flat, stable, and heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the appliance.
- 4. Connect Thermostat:** Insert the removable power cord with the thermostat into the appliance's power socket. Ensure it is firmly seated.
- 5. Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The Princess Multi Wonder Chef Pro offers versatile cooking options. Follow these steps for general operation:

- 1. Prepare Food:** Place your ingredients into the multi-cooker pan. The non-stick coating allows for cooking with minimal or no oil/fat.
- 2. Set Temperature:** Turn the adjustable thermostat dial to your desired cooking temperature. The temperature can be set up to 215 °C. A light on the thermostat will indicate when the appliance is heating.
- 3. Preheating:** Allow the multi-cooker to preheat for a few minutes until the indicator light turns off, signaling that the set temperature has been reached. The light will cycle on and off during

cooking to maintain the temperature.

4. **Cooking:** Cook your food, stirring occasionally with the provided wooden spatula to ensure even cooking and prevent scratching the non-stick surface. Use the glass lid to retain heat and moisture, monitoring the cooking process through the transparent cover.
5. **Keeping Warm:** For keeping food warm, set the thermostat to a lower temperature setting.
6. **Finish Cooking:** Once cooking is complete, turn the thermostat dial to the 'OFF' position and unplug the appliance from the power outlet.



Figure 5.1: Cooking paella in the multi-cooker, showing the attached thermostat.



Figure 5.2: Example of a paella dish prepared in the multi-cooker.



Figure 5.3: Example of a noodle dish prepared in the multi-cooker.



Figure 5.4: Example of a spaghetti dish prepared in the multi-cooker.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Princess Multi Wonder Chef Pro.

- 1. Cool Down:** Always allow the appliance to cool completely before cleaning.
- 2. Disconnect:** Unplug the power cord from the electrical outlet and detach the thermostat unit from the pan.
- 3. Pan and Lid:** The pan and glass lid are easy to clean due to the high-quality non-stick coating. They can be washed by hand with warm soapy water and a soft sponge, or placed in a dishwasher.
- 4. Thermostat Unit:** Wipe the thermostat unit and power cord with a damp cloth. Do not immerse

them in water or any other liquid.

5. **Drying:** Ensure all parts are thoroughly dry before storing or next use.

6. **Storage:** Store the multi-cooker in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your Princess Multi Wonder Chef Pro, refer to the following common problems and solutions:

- **Appliance does not turn on:**

- Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
- Check if the thermostat dial is set to an active temperature (not 'OFF').
- Verify that the electrical outlet is functioning by testing it with another appliance.

- **Food is not cooking evenly:**

- Ensure the appliance is placed on a flat, level surface.
- Stir food more frequently to distribute heat.
- Check that the thermostat is set to the appropriate temperature for your recipe.

- **Non-stick coating is damaged:**

- Always use wooden or heat-resistant plastic utensils to prevent scratching. Avoid metal utensils.
- Do not use abrasive cleaners or scouring pads.

If the problem persists after checking these points, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Princess
Model Number	01.162367.01.500
Color	Black
Diameter	35 Centimeters
Capacity	5.4 Liters
Power	1800 Watts
Voltage	220 Volts
Material	Glass (Lid)
Special Feature	Practical, Adjustable Thermostat, Non-stick Coating
Item Weight	3.7 Kilograms

Product Dimensions (L x W x H)	51.5 x 38.3 x 17 cm
Included Components	Multi Wonder Chef Pro unit, Glass lid, Wooden spatula, User manual

9. WARRANTY AND SUPPORT

Princess offers a **24-month warranty** on all its products. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or warranty inquiries, please refer to the contact information provided on the Princess official website or your local retailer's support channels.

© 2024 Princess. All rights reserved.