

[Manuals.plus](#) /

› [QFX](#) /

› QFX PBX-1012 Bluetooth PA Party Sound System User Manual

QFX PBX-1012

QFX PBX-1012 Bluetooth PA Party Sound System User Manual

Model: PBX-1012

INTRODUCTION

Thank you for purchasing the QFX PBX-1012 Bluetooth PA Party Sound System. This versatile sound system is designed to deliver powerful audio and dynamic LED disco lights, perfect for any party or event. It features multiple connectivity options including Bluetooth, USB, SD card, and auxiliary input, along with an FM tuner and microphone inputs. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the most out of your device.

WHAT'S IN THE BOX

- QFX PBX-1012 PA Party Sound System
- Remote Control
- AC Power Adapter
- User Manual (this document)

PRODUCT OVERVIEW





Figure 1: Front view of the QFX PBX-1012 system. This image displays the main speaker unit with its twin 3-inch tweeters and 10-inch woofer, all illuminated with red LED lights. The QFX logo is visible above the main woofer. The top panel features an LED display.

The QFX PBX-1012 features a robust design with integrated wheels and a handle for portability. Key components include:

- **Twin 3-inch Tweeters:** Located at the top, providing clear high-frequency sound.

- **10-inch Woofer:** Central large speaker for powerful bass.
- **RGB Disco Lights:** Integrated around the speakers, capable of pulsing with the music.
- **LED Display:** Located on the top panel, showing current mode and track information.
- **Control Panel:** (Details not visible in image, but implied by description) Buttons and knobs for volume, mode selection, EQ, etc.
- **Input Ports:** USB, SD card, Auxiliary (AUX-in), and two Microphone inputs.
- **Built-in Rechargeable Battery:** For portable use.

SETUP

1. Initial Charging

Before first use, fully charge the internal battery.

1. Connect the supplied AC power adapter to the DC IN port on the back of the speaker.
2. Plug the adapter into a standard AC outlet (100-240V, 50/60Hz).
3. The LED indicator will show charging status. Allow several hours for a full charge.
4. The unit can be operated while charging.

2. Powering On/Off

Locate the Power switch, typically on the rear or top panel.

- To turn on: Flip the switch to the "ON" position. The LED display will illuminate.
- To turn off: Flip the switch to the "OFF" position.

OPERATING INSTRUCTIONS

1. Mode Selection

Press the **MODE** button on the control panel or remote control to cycle through available modes: Bluetooth, USB, SD, AUX, FM Radio. The selected mode will be displayed on the LED screen.

2. Bluetooth Pairing

1. Turn on the speaker and select **Bluetooth** mode. The LED display will show "BLUE" or a similar indicator, and the unit will enter pairing mode.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices. Select "**QFX PBX-1012**" from the list.
4. Once paired, the speaker will emit a confirmation tone, and the Bluetooth indicator will stop flashing.
5. You can now play audio from your device through the speaker.

3. USB/SD Card Playback

1. Insert a USB flash drive or SD card (with MP3 audio files) into the corresponding port.
2. The unit will automatically switch to USB/SD mode and begin playing the first compatible track. If not, press the **MODE** button to select USB/SD.
3. Use the **PLAY/PAUSE**, **PREV**, and **NEXT** buttons to control playback.

4. FM Radio

1. Select **FM** mode using the **MODE** button.

2. Press the **PLAY/PAUSE** button to initiate an automatic scan for FM stations. The unit will save found stations.
3. Use the **PREV** and **NEXT** buttons to navigate through saved stations.

5. Auxiliary Input (AUX-in)

1. Connect an external audio device (e.g., MP3 player, laptop) to the AUX-in port using a 3.5mm audio cable (not included).
2. Select **AUX** mode using the **MODE** button.
3. Audio from the connected device will now play through the speaker. Control playback from the external device.

6. Microphone Use

1. Connect a microphone (not included) to one of the two microphone input jacks.
2. Adjust the **MIC VOL** knob to control the microphone volume.
3. Use the **ECHO** knob to add an echo effect to the microphone audio.

7. Sound Adjustment

- **MASTER VOLUME:** Adjust the main volume knob for overall sound output.
- **TREBLE:** Adjust the treble knob to control high-frequency sounds.
- **BASS:** Adjust the bass knob to control low-frequency sounds.
- **EQUALIZER (EQ):** Some units may have preset EQ modes. Press the EQ button to cycle through them.

8. LED Disco Lights

The built-in RGB disco lights automatically pulse and change patterns with the music. There may be a dedicated button to turn the lights on/off or cycle through light modes. Refer to the specific button layout on your unit.

MAINTENANCE

Cleaning

- Always unplug the unit from the power source before cleaning.
- Use a soft, dry cloth to wipe down the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Keep the speaker grilles free of dust and debris. Use a soft brush or vacuum cleaner with a brush attachment if necessary.

Storage

- If storing the unit for an extended period, ensure the battery is fully charged to prolong its lifespan.
- Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.
- Protect the unit from dust and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power cable not connected; Power switch off.	Charge the battery; Ensure power cable is securely connected; Turn the power switch to "ON".

Problem	Possible Cause	Solution
No sound	Volume too low; Incorrect mode selected; Device not paired (Bluetooth); Cable loose (AUX).	Increase volume; Select correct mode; Re-pair Bluetooth device; Check AUX cable connection.
Bluetooth not connecting	Speaker not in pairing mode; Device too far; Interference; Already connected to another device.	Ensure speaker is in Bluetooth pairing mode; Move device closer; Turn off other Bluetooth devices; Disconnect from other devices.
USB/SD playback not working	Unsupported file format; Corrupted files; USB/SD card not inserted correctly.	Ensure files are MP3 format; Try a different USB/SD card; Re-insert the card/drive.
Lights not working	Lights feature turned off.	Check for a dedicated light control button and ensure it is enabled.

SPECIFICATIONS

Feature	Detail
Model Number	PBX-1012
Brand	QFX
Connectivity Technology	Bluetooth, Auxiliary, USB
Speaker Type	Woofer (10 Inches), Twin Tweeters (3 Inches)
Power Source	Battery Powered, AC 100-240V, 50/60Hz
Product Dimensions (D x W x H)	13"D x 14.9"W x 35.9"H
Item Weight	32.34 Pounds
Included Components	Speaker, Remote Control
Control Method	Remote, On-unit controls
Special Features	LED Disco Lights, FM Tuner, 2 Microphone Inputs, Echo, Treble, Bass controls, Wheels and Handle for portability.

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official QFX website.

If you encounter any issues not covered in the troubleshooting section, or require further assistance, please contact QFX customer support. Contact details can typically be found on the QFX website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07J57KS2W>

More documents and user manuals: **<https://manuals.plus/>**