

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Gewa](#) /

› [GEWA E-Acoustic Classical Guitar BASIC Instruction Manual \(Model PS510198\)](#)

Gewa PS510198

GEWA E-Acoustic Classical Guitar BASIC Instruction Manual

Model: PS510198

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your GEWA E-Acoustic Classical Guitar BASIC, Model PS510198. Please read these instructions carefully to ensure proper use and to maximize the lifespan of your instrument.

The GEWA E-Acoustic Classical Guitar BASIC combines traditional classical guitar design with modern electro-acoustic capabilities, featuring a built-in pickup, tuner, and EQ for versatile performance.

PRODUCT OVERVIEW

The GEWA E-Acoustic Classical Guitar BASIC is designed for both acoustic play and amplified performance. Key features include:

- **Electro-Acoustic Design:** Equipped with a built-in pickup, tuner, and 4-band equalizer for amplified sound and precise tuning. The cutaway body design provides easier access to higher frets.
- **Construction Materials:** Features a basswood body for a balanced sound and an ABS body edge for durability. The fretboard and bridge are made of pakka wood.
- **Hardware:** Nickel silver frets and chrome-plated tuners contribute to playability and tuning stability.
- **Finish:** Water-based matt finish.





Image 1: Front view of the GEWA E-Acoustic Classical Guitar BASIC, showcasing the body, neck, and headstock.





Image 2: Back view of the GEWA E-Acoustic Classical Guitar BASIC, showing the smooth matt finish and neck joint.

SETUP

1. Initial Inspection

Upon unboxing, carefully inspect the guitar for any visible damage. Check the neck, body, and headstock. Ensure all strings are present and correctly seated on the bridge and nut.

2. Tuning the Guitar

The GEWA E-Acoustic Classical Guitar BASIC includes a built-in chromatic tuner. Follow these steps to tune your guitar:

- Activate Tuner:** Locate the control panel on the side of the guitar. Press the "Tuner" button to activate the built-in chromatic tuner. The display will illuminate.
- Pluck a String:** Pluck one string at a time. The display will show the note being played.
- Adjust Tuning Peg:** Turn the corresponding tuning peg slowly until the display indicates the correct note and the tuning indicator is centered (usually green).
- Standard Tuning:** Tune the strings to standard classical guitar tuning (from thickest to thinnest): E, A, D, G, B, E.
- Deactivate Tuner:** Press the "Tuner" button again to turn off the tuner.

New strings may stretch and require frequent re-tuning during the first few playing sessions. This is normal.



Image 3: Detail of the guitar's side-mounted control panel, featuring the chromatic tuner display and equalizer knobs.

OPERATING THE ELECTRONICS

Your GEWA E-Acoustic Classical Guitar BASIC is equipped with a bridge piezo pickup and a 4-band equalizer (EQ) for amplified performance.

1. Connecting to an Amplifier or PA System

- Power On:** Ensure the guitar's battery is installed (typically in the control panel unit or a separate compartment near the output jack).
- Connect Cable:** Insert a standard 1/4-inch instrument cable into the output jack located on the lower bout of the guitar. Connect the other end to your amplifier or PA system's input.
- Adjust Volume:** Start with the guitar's volume knob (on the control panel) at its lowest setting, and the amplifier's volume low. Gradually increase both to a comfortable listening level.



Image 4: Detail of the guitar's output jack and battery compartment, typically located on the lower side of the body.

2. Using the 4-Band Equalizer (EQ)

The EQ allows you to shape the amplified tone of your guitar. The control panel typically includes knobs for:

- **Volume:** Controls the overall output level of the amplified signal.
- **Bass:** Adjusts the low-frequency response. Turn up for a fuller, warmer sound; turn down to reduce muddiness.
- **Middle:** Adjusts the mid-frequency response. Affects the guitar's presence and punch.
- **Treble:** Adjusts the high-frequency response. Turn up for brightness and clarity; turn down to reduce harshness.
- **Presence:** Controls the very high frequencies, adding sparkle or cutting through a mix.

Experiment with these controls to find the sound that best suits your playing style and environment.

MAINTENANCE

1. Cleaning Your Guitar

- **Body:** Use a soft, lint-free cloth to wipe down the body after each use to remove sweat and fingerprints. For a deeper clean, use a guitar-specific polish or cleaner sparingly.
- **Fretboard:** Periodically clean the fretboard with a soft brush to remove dirt buildup. You may use a small amount of lemon oil or fretboard conditioner (specifically for pakka wood) to keep it hydrated, but avoid over-application.
- **Strings:** Wipe down the strings after each use to prolong their life and maintain tone.

2. String Replacement

Nylon strings should be replaced regularly, typically every 3-6 months depending on playing frequency, to maintain optimal tone and playability. When replacing strings:

1. Replace one string at a time to maintain neck tension.
2. Use high-quality classical guitar nylon strings.
3. Ensure strings are properly tied at the bridge and wound around the tuning pegs.



Image 5: Detail of the guitar's bridge, showing how the nylon strings are secured.

3. Storage

Store your guitar in a stable environment, away from extreme temperature changes, direct sunlight, and high humidity. A guitar case or gig bag is recommended for protection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Guitar won't stay in tune	New strings stretching; improper string winding; worn tuning machines.	Stretch new strings thoroughly; ensure strings are correctly wound; consider professional inspection if tuning machines are suspected.
No sound when amplified	Dead battery; faulty cable; amplifier issues; volume knob off.	Check/replace battery; test with a different cable; verify amplifier is working; ensure guitar and amp volume are up.
Buzzing sound from strings	Low action; uneven frets; improper playing technique.	Adjust playing technique; if persistent, professional setup may be required to address action or fret issues.
Fret edges feel sharp	Environmental changes causing wood shrinkage; manufacturing variation.	This can sometimes occur. A qualified guitar technician can file and smooth fret ends if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	PS510198
Brand	Gewa
Body Material	Basswood
Neck Material	Basswood
Fretboard Material	Pakka wood
String Material	Nylon
Number of Strings	6
Scale Length	25.5 inches (650 mm)
Nut Width	52 mm
Pickup Configuration	Bridge Piezoelectric
Tuners	Chrome-plated
Frets	Nickel Silver
Finish	Water-based Matt
Item Weight	4.75 pounds
Product Dimensions	5.51 x 17.72 x 39.76 inches

Feature	Detail
Hand Orientation	Right

WARRANTY AND SUPPORT

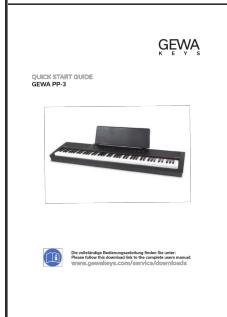
For information regarding warranty coverage, technical support, or service, please refer to the documentation included with your purchase or visit the official Gewa website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Gewa customer service through their official channels.

© 2024 Gewa. All rights reserved. This manual is for informational purposes only.

Related Documents - PS510198

 <p>GEWA G3 & G5 Drum Module Quick Start Guide ENGLISH</p>	<p>GEWA G3 & G5 Drum Module Quick Start Guide Quickly set up and operate your GEWA G3 or G5 Drum Module with this comprehensive guide. Learn about features, safety, connections, and troubleshooting for an enhanced electronic drumming experience.</p>
 <p>GEWA G3 Drum-Modul Bedienungsanleitung DEUTSCH</p>	<p>GEWA G3 Drum-Modul Bedienungsanleitung Umfassende Bedienungsanleitung für das GEWA G3 Drum-Modul von GEWA music GmbH. Erfahren Sie mehr über Einrichtung, Funktionen, Sicherheit und technische Details dieses digitalen Schlagzeugmoduls.</p>
 <p>GEWA G3 Setup Rack Assembly Instructions</p>	<p>GEWA G3 Setup Rack Assembly Instructions Step-by-step guide for assembling the GEWA G3 Setup Rack, including a detailed parts list and helpful assembly tips.</p>

	<p><u>GEWA G9 Drum Workstation Owner's Manual</u></p> <p>Comprehensive owner's manual for the GEWA G9 Drum Workstation, detailing setup, operation, features, safety guidelines, and technical specifications for this advanced E-Drum.</p>
	<p><u>GEWA PP-3 Schnellstartanleitung</u></p> <p>Diese Schnellstartanleitung führt Sie durch die grundlegende Einrichtung und Bedienung Ihres GEWA PP-3 Digitalpianos, einschließlich Sicherheitshinweisen, Anschließen und erster Inbetriebnahme.</p>
	<p><u>Mode d'emploi Piano numérique GEWA UP 365</u></p> <p>Guide complet pour le piano numérique GEWA UP 365, couvrant l'installation, l'utilisation des fonctions, les réglages et la maintenance pour une expérience musicale optimale.</p>