

Kidzlane KL-0516

Kidzlane Bluetooth Microphone for Kids - Instruction Manual

Model: KL-0516

INTRODUCTION

Thank you for choosing the Kidzlane Bluetooth Microphone for Kids. This manual provides essential information for the safe and effective use of your new microphone. Please read it thoroughly before operation and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- This product is intended for children aged 3 and up.
- Adult supervision is recommended during use.
- Do not immerse the microphone in water or other liquids.
- Do not attempt to disassemble or modify the microphone.
- Use only the specified battery type (3 AAA batteries). Ensure correct polarity when inserting batteries.
- Remove batteries if the product will not be used for an extended period.
- Keep small parts away from young children to prevent choking hazards.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Kidzlane Bluetooth Microphone.



Image: Front view of the Kidzlane Bluetooth Microphone, highlighting its compact design and accessible controls.

Controls and Features:

- **Play/Pause Button (Yellow):** Starts or pauses playback of built-in songs or Bluetooth audio.
- **Skip/Previous Track Buttons (Yellow Arrows):** Navigates between built-in nursery rhymes or Bluetooth tracks.
- **Record Button (Red 'R'):** Initiates recording of your voice.
- **Playback Button (Red Play Arrow):** Plays back recorded audio.
- **Voice Changer Button (Blue Hand Icon):** Activates the voice changer effect.
- **Applause Button (Blue Hand Icon):** Triggers an applause sound effect.
- **OFF/LOW/HIGH Switch (Teal):** Power switch and volume control for the microphone.
- **DUET/Bluetooth Switch (Yellow):** Toggles between Duet Mode (with vocals) and Karaoke Only (music only) for built-in songs, or activates Bluetooth pairing.
- **LED Lights:** Integrated lights for visual effects during performance.
- **Speaker:** Located at the bottom of the microphone for audio output.

SETUP

Battery Installation

The Kidzlane Bluetooth Microphone requires 3 AAA batteries (not included).

1. Locate the battery compartment on the back of the microphone.
2. Using a small screwdriver, unscrew the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring the correct positive (+) and negative (-) polarity as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Image: Rear view of the microphone, illustrating the battery compartment and overall dimensions.

OPERATING INSTRUCTIONS

Power On/Off and Volume Control

1. To turn on the microphone, slide the **OFF/LOW/HIGH** switch to either the **LOW** or **HIGH** position.
2. Select **LOW** for a softer volume or **HIGH** for increased amplification.
3. To turn off the microphone, slide the **OFF/LOW/HIGH** switch to the **OFF** position.

Playing Built-in Nursery Rhymes

The microphone comes with 10 pre-installed nursery rhymes.

1. Ensure the microphone is powered on.
2. Press the **Play/Pause Button** (yellow) to start playing the first nursery rhyme.

3. Press the **Skip/Previous Track Buttons** (yellow arrows) to navigate to the next or previous song.
4. Press the **Play/Pause Button** again to pause the song.

Duet Mode and Karaoke Only

Engage with the built-in songs in two different ways.

1. While a built-in song is playing, slide the **DUET/Bluetooth Switch** to the **DUET** position to hear the song with vocals.
2. Slide the **DUET/Bluetooth Switch** to the other position (Bluetooth icon) to hear the song with music only, allowing you to sing the lead vocals.

Bluetooth Pairing

Connect your smartphone or tablet to stream your favorite music.

1. Ensure the microphone is powered on.
2. Slide the **DUET/Bluetooth Switch** to the Bluetooth icon position. The microphone will enter pairing mode, indicated by a flashing blue light.
3. On your device (smartphone, tablet), go to Bluetooth settings and search for available devices.
4. Select "Kidz0516" from the list to pair. A confirmation sound will indicate successful pairing.
5. Once paired, you can play music from your device, and it will stream through the microphone's speaker.

Video: An overview of the Kidzlane Sing With Me Bluetooth Microphone, demonstrating its features and ease of use for children.

Recording and Playback

Record your voice or singing for up to 100 seconds.

1. Press and hold the **Record Button** (red 'R') to begin recording. The microphone will indicate it's recording (e.g., with a light).
2. Speak or sing into the microphone.
3. Release the **Record Button** to stop recording.
4. Press the **Playback Button** (red play arrow) to listen to your last recording.

Voice Changer

Alter your voice for added fun.

1. While speaking or singing into the microphone, press the **Voice Changer Button** (blue hand icon).
2. Press it again to cycle through different voice effects or to turn off the voice changer.

Applause Feature

Celebrate your performance with a round of applause.

- Press the **Applause Button** (blue hand icon) to play an applause sound effect.

Video: Demi Jade demonstrates the various functions of the Kidzlane Bluetooth Microphone, including playing songs, recording, and using the voice changer.

MAINTENANCE

Cleaning

- Wipe the microphone with a soft, dry cloth.
- Do not use abrasive cleaners or immerse in water.

Storage

- Store the microphone in a cool, dry place away from direct sunlight.
- Remove batteries if storing for extended periods to prevent leakage.

TROUBLESHOOTING

Problem	Possible Solution
No sound/Microphone not turning on	Check battery installation and ensure batteries are fresh. Make sure the OFF/LOW/HIGH switch is not in the OFF position.
Bluetooth not connecting	Ensure the DUET/Bluetooth switch is in the Bluetooth position. Make sure Bluetooth is enabled on your device and it's within range. Try restarting both the microphone and your device.
Poor sound quality/Static	Check battery level. Ensure there are no obstructions between the microphone and the paired Bluetooth device. Reduce distance to the paired device.
Recording not working	Ensure the Record button is pressed and held during recording. Check if the microphone is in a mode that allows recording (e.g., not actively streaming Bluetooth audio without microphone input).

SPECIFICATIONS

Feature	Detail
Model Number	KL-0516
Brand	Kidzlane
Connectivity	Bluetooth
Power Source	3 AAA Alkaline Batteries (not included)
Recording Time	Up to 100 seconds
Built-in Songs	10 Nursery Rhymes
Special Features	Voice Changer, Record & Playback, LED Lights, Duet Mode, Portable
Item Weight	7.4 ounces
Package Dimensions	9.65 x 4.02 x 2.83 inches
Recommended Age	3 years and up

WARRANTY AND SUPPORT

Kidzlane products are designed for quality and durability. For specific warranty details or technical support, please refer to the product packaging or contact Kidzlane customer service directly. Keep your purchase receipt as proof of purchase.