

[Manuals.plus](#) /

› [Singsation](#) /

› Singsation Performer Deluxe Karaoke System Instruction Manual

Singsation SPKA700AM

Singsation Performer Deluxe All-in-One Karaoke System

Model: SPKA700AM | Brand: Singsation

INTRODUCTION

The Singsation Performer Deluxe is an all-in-one karaoke system designed for all ages, featuring a stand adjustable from 2 to 6 feet. It offers seamless Bluetooth connectivity for streaming thousands of songs and karaoke videos from your smartphone or tablet, eliminating the need for CDs. Enhance your performance with 10 different voice effects, 8 fun sound effects, and 16 room and ceiling-filling light shows, making every session a concert experience. This system is engineered for superior sound quality, providing an immersive and entertaining party machine.

SETUP GUIDE

What's in the Box

- Power Cable
- 2x Microphones
- Remote Control

Assembly

Assemble the stand by connecting the base unit to the adjustable pole. Secure the microphone holder and device stand at the top of the pole. Ensure all connections are firm before proceeding.



Figure 1: Exploded view of the Singsation Performer Deluxe components.

Initial Power On and Connection

Plug the power cable into the base unit and a wall outlet. Press the Power/Pair button on the base to turn on the system. The Bluetooth indicator light will flash, indicating it's ready for pairing. On your smartphone or tablet, enable Bluetooth and select 'Singsation' from the list of available devices. Once paired, the indicator light will turn solid.



Figure 2: Fully assembled Singstation Performer Deluxe Karaoke System.

OPERATING INSTRUCTIONS

Controls Overview

The base unit features a comprehensive control panel. The Master Volume knob controls the overall sound output. Individual knobs are available for Music Volume and Mic Volume, allowing you to balance the audio levels. Buttons for Light Effects, Light Colors, Voice Effects, and Sound Effects provide customization options for your performance.

2

 
WAYS TO CONNECT

WIRELESS



Bluetooth®

OR

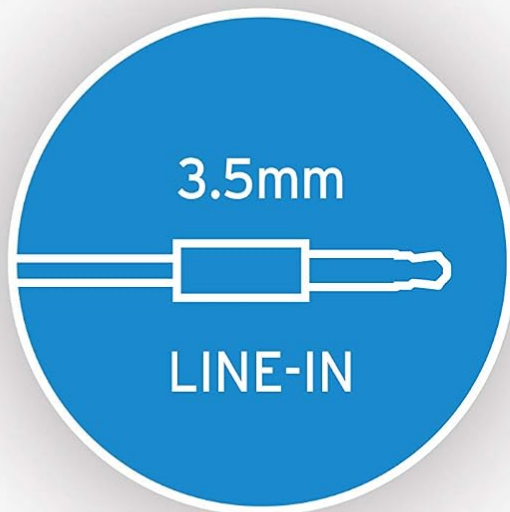

LINE-IN:
Plugs into
headphone
jack

Figure 3: Detailed view of the control panel on the Singsation base.

Light Effects

The Singsation Performer Deluxe offers 16 different room and ceiling-filling light shows. Use the 'Light Effects' button to cycle through various patterns like Pulse, Chill, Breathe, Party, Dance, and Still. The 'Light Color' button allows you to change the color scheme of the projected lights.

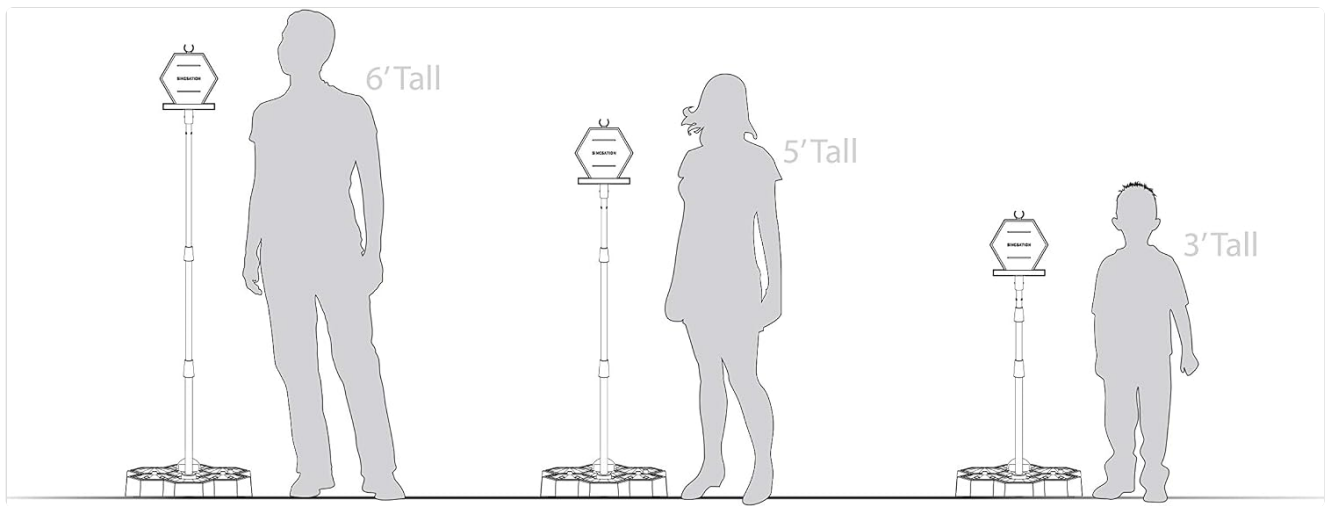 



Figure 4: Examples of multi-color light modes from the Singsation unit.

Voice and Sound Effects

Experiment with 10 different voice effects, including harmonize, high pitch, low pitch, and chipmunk, to add a unique touch to your vocals. Additionally, activate 8 sound effects such as air horn, cheers, and DJ scratch to further engage your audience and enhance the party atmosphere.

Connecting Devices

 Beyond Bluetooth, the system supports a 3.5mm Line-In connection, allowing you to plug in devices directly. This provides flexibility for various audio sources.

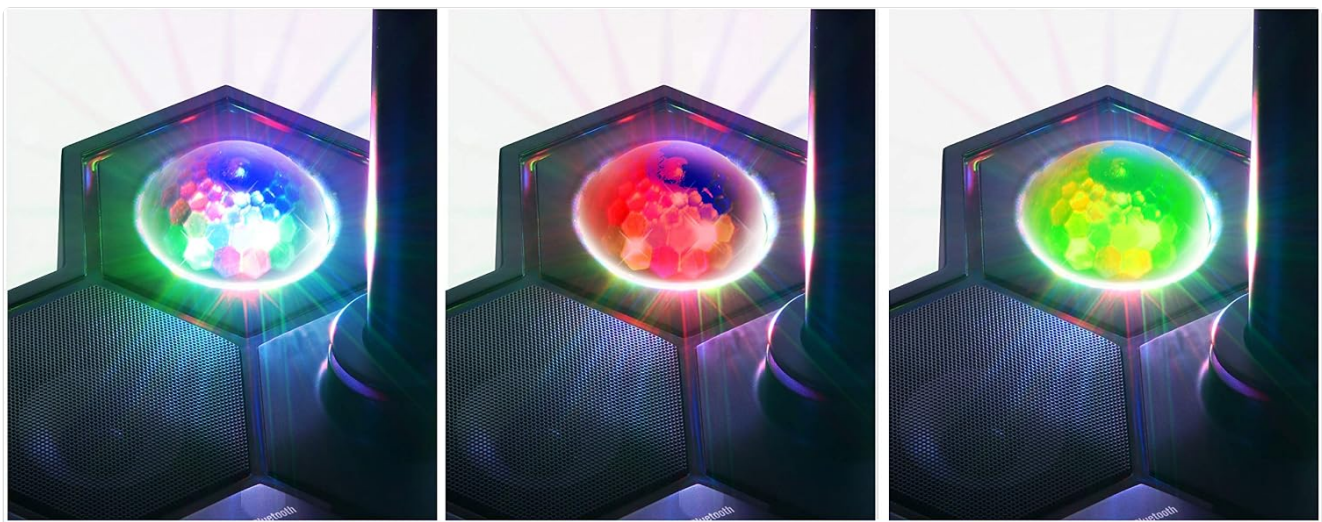

Multi-color light modes party, pulse, breathe, chase and more.

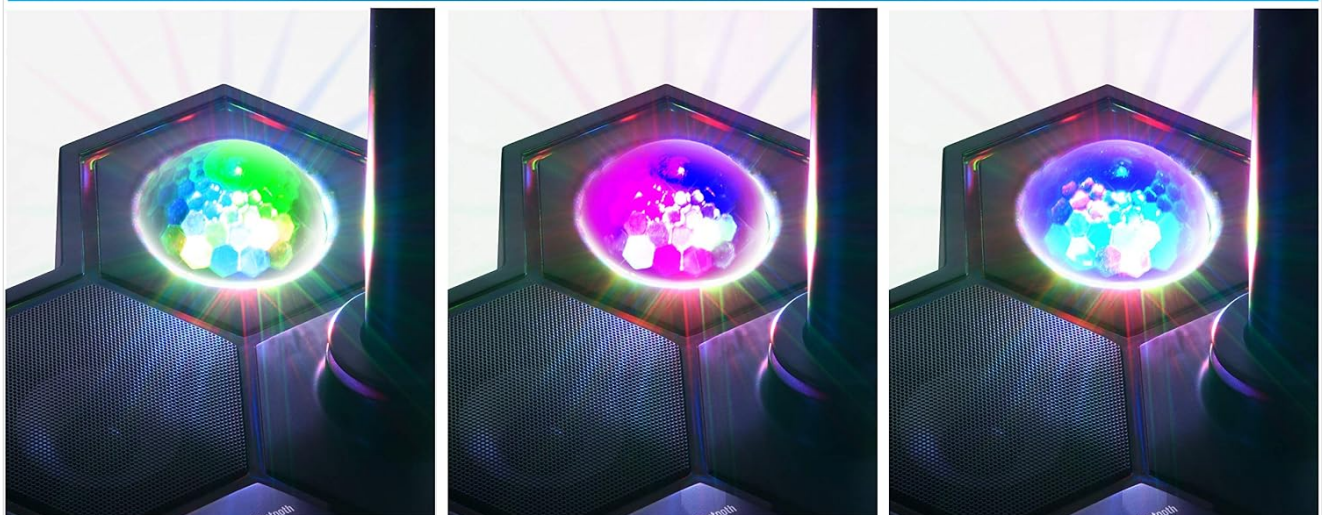 


Figure 5: Connection options for the Singstation Karaoke System.

Using Karaoke Apps

The Singstation Performer Deluxe is compatible with any karaoke app from your phone or tablet. Simply connect your device via Bluetooth and use the app to display lyrics and play backing tracks. The integrated device holder provides a convenient viewing angle for lyrics.

Video 1: Official Singstation Performer Deluxe All-In-One Karaoke System and Party Machine overview.

MAINTENANCE

Cleaning

To clean the unit, use a soft, dry cloth. Do not use abrasive cleaners or solvents. Keep the speakers free from dust and debris. For the microphone, gently wipe the grille with a damp cloth and ensure it is dry before storage.

Storage

When not in use, store the karaoke system in a cool, dry place away from direct sunlight and extreme temperatures.

Disassemble the stand if necessary for compact storage and coil cables neatly to prevent damage.

TROUBLESHOOTING

No Power

- Ensure the power cable is securely connected to both the unit and a working power outlet.
- Check if the power outlet is active by plugging in another device.

Bluetooth Connection Issues

- Make sure Bluetooth is enabled on your device and the Singsation unit is in pairing mode (flashing blue light).
- Move your device closer to the karaoke system.
- Forget the device from your phone's Bluetooth settings and try pairing again.
- Restart both the karaoke system and your Bluetooth device.

No Sound from Microphone

- Check if the microphone is securely plugged into the correct input jack (Mic 1 or Mic 2).
- Increase the Mic Volume knob on the base unit.
- Ensure the Master Volume is also turned up.

Lights Not Working or Stuck

- Press the 'Light Effects' and 'Light Color' buttons to cycle through modes and colors.
- Ensure the unit is powered on correctly.

SPECIFICATIONS

Feature	Detail
Item Weight	7.39 pounds
Product Dimensions	12.71 x 12.58 x 4.25 inches
Item Model Number	SPKA700AM
Color	Black
Compatible Devices	Tablet, Smartphone
Connector Type	XLR (for microphones)
Speaker Count	2
Power Source	Corded Electric
Voltage	120 Volts (AC)
Special Feature	Voice Changer, Light Shows
Recommended Uses	Home Entertainment

WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the official Singstation website or contact their customer service directly. You can also download the full User Guide for more in-depth instructions and troubleshooting.

[Download User Guide \(PDF\)](#)