

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Klarstein](#) /

› [Klarstein Amazonia 8 Neo Compact Tabletop Dishwasher User Manual](#)

Klarstein Amazonia 8 Neo

Klarstein Amazonia 8 Neo Compact Dishwasher User Manual

Model: Amazonia 8 Neo

INTRODUCTION

Thank you for choosing the Klarstein Amazonia 8 Neo Compact Dishwasher. This appliance is designed to provide efficient and convenient dishwashing for smaller households or spaces. To ensure safe operation and optimal performance, please read this instruction manual thoroughly before using the dishwasher and keep it for future reference.

SAFETY INSTRUCTIONS

- **Electrical Safety:** Ensure the dishwasher is connected to a properly grounded outlet. Do not use extension cords or adapters. Disconnect the appliance from the power supply before cleaning or maintenance.
- **Water Connection:** Connect the dishwasher to a cold water supply using new hose sets. Do not reuse old hose sets. Ensure all connections are secure to prevent leaks.
- **Child Safety:** Keep children away from the dishwasher, especially when it is operating. Detergents are corrosive; keep them out of reach of children.
- **Loading:** Load sharp items (knives, forks) with the handles up to prevent injury. Do not overload the dishwasher.
- **Flammable Materials:** Do not wash items contaminated with gasoline, paint, or other flammable liquids in the dishwasher.
- **Damage:** Do not operate the dishwasher if it is damaged. Contact customer support for repairs.

PRODUCT OVERVIEW

The Klarstein Amazonia 8 Neo is a compact tabletop dishwasher designed for convenience and efficiency. It features an elegant glass facade and touch controls for easy operation.



Image: Klarstein Amazonia 8 Neo Compact Dishwasher, showcasing its compact design and interior capacity for 8 place settings.

Key Features:

- **Capacity:** 8 place settings, suitable for plates up to 27 cm in diameter.
- **Wash Programs:** 8 distinct programs including Intensive, Universal, ECO, Glass, 90 min, Quick, Fruit, and Self-cleaning.
- **Controls:** Intuitive touch controls with an LED display.
- **Noise Level:** Operates quietly at 49 dB.
- **Water Consumption:** Approximately 8 liters per cycle.
- **Design:** Modern design with a transparent glass front.

Included Components:

- Cutlery basket
- Salt filling funnel
- Drain hose

- Inlet hose

SETUP AND INSTALLATION

The Klarstein Amazonia 8 Neo dishwasher is designed for easy installation, suitable for tabletop use or under-counter integration.

Placement:

- Place the dishwasher on a stable, level surface near a water supply, drain, and electrical outlet.
- Ensure adequate ventilation around the appliance.
- If installing under a counter, ensure the dimensions (56 x 60 x 55 cm for built-in) are met.

Water Connection:

1. Connect the inlet hose to a cold water tap with a 3/4-inch thread. Tighten securely.
2. Connect the drain hose to a suitable drain pipe or sink. Ensure the drain hose is not kinked and is positioned to allow proper drainage.

Electrical Connection:

- Plug the power cord into a grounded electrical outlet. The power cord length is 140 cm.
- Ensure the voltage and frequency of your power supply match the specifications of the dishwasher.

OPERATING INSTRUCTIONS

Follow these steps for effective dishwashing:

1. Loading the Dishwasher:

- Scrape off large food particles from dishes.
- Place dishes securely in the racks, ensuring water can reach all surfaces.
- Load cutlery into the cutlery basket, handles up for sharp items.

2. Adding Detergent and Rinse Aid:

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid dispenser and refill if necessary. Rinse aid helps with drying and prevents spots.
- If your water is hard, use the provided salt filling funnel to add dishwasher salt to the dedicated compartment.

3. Selecting a Wash Program:

Use the touch controls and LED display to select one of the 8 wash programs:

- **Intensive:** For heavily soiled dishes and pots.
- **Universal:** Standard program for normally soiled dishes.
- **ECO:** Energy-saving program for normally soiled dishes.
- **Glass:** Gentle program for delicate glassware.
- **90 min:** For lightly soiled dishes requiring a quicker wash.
- **Quick:** Short program for very lightly soiled dishes without drying.
- **Fruit:** Special program for washing fruits.

- **Self-cleaning:** For cleaning the dishwasher itself.

4. Starting the Cycle:

- Close the dishwasher door firmly.
- Press the Start button to begin the selected program.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

Cleaning the Filters:

- The filter system (coarse filter, main filter, fine filter) should be cleaned regularly to prevent blockages.
- Twist and remove the filter assembly from the bottom of the dishwasher.
- Rinse all filter components under running water to remove food particles. Use a soft brush if necessary.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

Cleaning the Spray Arms:

- Periodically check the spray arm nozzles for blockages.
- If blocked, remove the spray arms and clear the nozzles with a thin wire or toothpick.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the door seal regularly to remove food residue and prevent odors.

Adding Dishwasher Salt:

- If your dishwasher has a salt indicator light, refill the salt compartment when the light illuminates.
- Use the provided funnel to add dishwasher salt to prevent limescale buildup, especially in hard water areas.

TROUBLESHOOTING

Before contacting customer service, try these common troubleshooting steps:

- **Dishwasher not starting:** Check if the power cord is plugged in, the door is fully closed, and the circuit breaker has not tripped.
- **Dishes not clean:** Ensure spray arms are not blocked, filters are clean, and dishes are loaded correctly. Check detergent levels.
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the filters.
- **Excessive noise:** Ensure dishes are not obstructing the spray arms. Check for foreign objects in the pump area.
- **Leaks:** Check hose connections for tightness. Ensure the door seal is clean and intact.

If the problem persists after performing these checks, please contact Klarstein customer support.

SPECIFICATIONS

Model Name	Amazonia 8 Neo
------------	----------------

Brand	Klarstein
Capacity	8 Place Settings / 9.6 Liters
Dimensions (D x W x H)	50 x 55 x 59 cm
Weight	29.5 kg
Noise Level	49 Decibels
Water Consumption (per cycle)	8 Liters
Energy Efficiency Class	A+
Control Type	Touch
Display Type	LED
Material	Glass
Installation Type	Under Counter Mount
Part Number	DSM-90200-Ama8NB

WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Klarstein website. Keep your proof of purchase for any warranty claims.