



Manuals.plus /

› XIHADA /

› XIHADA ML999-25 Universal Garage Door & Gate Opener Remote Instruction Manual

XIHADA ML999-25

XIHADA ML999-25 Universal Garage Door & Gate Opener Remote Instruction Manual

Model: ML999-25 | Brand: XIHADA

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your XIHADA ML999-25 Universal Garage Door & Gate Opener Remote. Please read this manual thoroughly before use to ensure proper functionality and to avoid any issues.



Figure 1: XIHADA ML999-25 Universal Remotes (5-pack)

PRODUCT FEATURES

- **Universal Compatibility:** Clones and programs with a wide range of major garage door and gate opener brands (280MHz - 868MHz).
- **Multi-Frequency Support:** Can clone up to four different original remotes, even if they operate on different frequencies.
- **Compact Design:** Smaller than a business card, designed for portability and convenience on a keychain.
- **Four Buttons:** Allows for programming multiple devices or functions.
- **Built-in Clip:** For easy attachment and carrying.

Important: This remote requires an existing, working original remote to clone its codes. It cannot be programmed without an original remote.

COMPATIBILITY INFORMATION

Before programming, verify that your original remote and opener system are compatible with the XIHADA ML999-25. Refer to the compatibility chart below. This remote is **not compatible** with certain brands and

models, including but not limited to: Chamberlain / Liftmaster Security 2.0, 2.0+ Garage Door Opener, Chamberlain Garage door Opener with MYQ, Liftmaster Garage Door Opener with MYQ, AccessMaster Garage with MYQ, LiftMaster 8500W Garage Door Opener, Liftmaster 892LT, LiftMaster 811LMX, LiftMaster 893LM, Chamberlain B 6713T Garage Opener, Chamberlain B 6753T Smart Garage Opener, Genie Pro Screw Drive, Condo's garage door opener, Ryobi, Softens Doors, Blue Sea, Allister, Amarr, Atoms, Doorking/DKS, Lynx, Merik, Stanley, Skylink, Wayne Dalton, Martin, Saco Gate Opener.

The duplicator for copy rolling code remote			
Brand	model	Brand	model
ACM	TX2, TX2 COLOR, TX4	LABEL	SPYCO
ADYX	TE4433H BLUE, 433-HG BRAVO	LIFE	FIDO
AERF	COMPACT, HY-DOM, MERCURI B, MERCURI C, ABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH	LINEAR	MCT-11, ACT-21, ACT-22, STING RAY ACT-31, STING RAY ACT-34B
ALLMATIC	BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3	MERLIN	2.0 E945M, E943M, E940M MERLIN/PROLIFT C945, C940, C943, M842, M844
APERIO	GO, GO PRO, GO MINI APERTO (Sommer) 4020-TX03-434, TX02-434-2, TX02-868-2	MHOUSE	TX3, TX4, GTX4
APRIMATIC	TR, TM4, TXM	MOOVO	MT4G
ATA	PTX4 BLU, PTX4 PINK	NICE	SMILO, FLOR-S, VERY-VR, FLOR-S ERA . ONE (ON), ON ERA, INTI, ERGO, PLANO, ONE (ON FM)
AVIDSEN	104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250 BALLAN FM400, FM400E	NORTON	NEO, TXCD GO NORTON, GO MINI NORTON
BENINCA	TO, GO, WV, TWV, ROLLKEY, APPLE, LOT WCV, CUPIDO, TO.GO, QV,IO	NOVOFERM	MCHS, MICRO-NOVOTRON 502, MINI-NOVOTRON 504, MICRO-NOVOTRON 502, MICRO-NOVOTRON 504, MICRO- NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI-NOVOTRON 50, MNHS
BFT	MITTO, MITTO M, MITTO RCB, MITTO A, TRC, GHIBLI, MURALE, KLEIO	O&O	TX, T.COM R4-2, T.COM R8-2, TWIN, TX (NEO)
CARDIN	TRQ S449, TRQ S449 GREEN (PRECODE), TXQ S449, TXQ S449 GREEN, TRQ S486, TXQ S486, S437 TX, XRADO	PECCININ	TX MENBRANA
CASALI	JA33 AMIGO GENIUS/CASALI A252RC	PRASTEL	MTE, MPSTLE, MPSTP2E, TCE, BFOR, TRQ-P, SLIM-E
CHAMBERLAIN/ LIFT MASTER/ MOTOR LIFT	953ESTD, 371 LM, 971LM, 84330E, 94334CE, 94333E/94334E/94335E, 9747E, 1A5639-7, 1A5477, 1A6487, 132B2372, 94330EML/9333EML/94335EML, 84330EML/84333EML/84335EML, 8747EML	PUJOL	TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO
CLEMSA	MUTANCODE, T, T-8, E-CODE N MASTERCODE MV	RIB	LITHIO
DASPI	ZERO RC	ROPER	NEO ,GO ROPER, GO MINI ROPER, SABUTOM BROOVER, BROSTAR
DEA	SYSTEM PUNTO 278, GOLDR, GENIE R 273	SEA	HEAD, SMART DUAL ROLL, SMART-3 ROLLING CODE, COCCINELLA ROLL
DITEC	BIXLP, GOL4, BIXLG	SEAV	BE HAPPY RS
DOORHAN	TRANSMITTER 4	SECULUX	NEO
DOORMATIC	MILENY, MILENY-EVO	SILVELOX	Mhz 2007, QUARZ SAW
ECOSTAR	RSC, RSE, RSZ	SIMINOR	CVXNL, MITTO ,SIM433
ERREKA	IRIS, ROLLER 2, ROLLER 433, ROLLER 868, SOL433, SOL868, VEGA 433, VEGA 868	SOMFY	K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA
FAAC	TML 433SLH, DL 868 SLH, XT 868 SLH, XT 433 SLH, T 868 SLH, T 433 SLH, XT 868 SLH BLACK, XT 433 SLH BLACK,XT 433 RC, TE433HG, XT4 433 RCBE	SOMMER	4010, 4011, 4014 TX03-434-2, 4013 TX03-434-4, 4020 TX03-868- 4, 4026 TX03-868-2, 4022 TX02-434-2, 4025 TX02-868-2, 4031 TX08-868-4 .
FADINI	JUBI-SMALL, JUBI 433	STAGNOLI	KALLISTO, VENUS AV223
GENIE	GITR-3, GIT, GICT390, GIFT390-1, G3T-BX, G1T-BX, GM3T, GICTD, GIFTD	TAU	250K-SLIMRP, 250K-SLIMR, 250T-4RP
GENIUS	AMIGOLD, AMIGO, KILO BRAVO, ECHO	TELCOMA	FM400E, FM400
GIBIDI	AU1600, AU1600 WOOD, AU1680, AU1680 WOOD, DOMINO	TOR LIFT	TORMIT4
JCM	NEO, TWIN, GO, GO PORTIS, GO NORTON, KBLUE ETH- TEL01	V2	TSC, TXC, TRC, HANDY, PHOENIX, PHOX 433
KEY	900TXB-42R, TXB 44R, SUB 44R .KING GATES CLIPPER, STYLO KLING KUA, KUA E, KUA S	VDS	ECO-R, TRQ P

Figure 2: Partial Compatibility List. For a complete list, refer to the product listing or contact support.

SETUP AND PROGRAMMING

Follow these steps carefully to program your XIHADA Universal Remote:

Step 1: Clear Existing Codes (First Use)

1. Press and hold the top-left button and the top-right button simultaneously on the XIHADA remote.
2. Hold until the LED indicator light flashes slowly, then quickly, and then turns off. This indicates that

the remote's memory has been cleared.

3. Release both buttons.

If the LED does not flash as described, repeat the process. Ensure the buttons are pressed firmly.

Step 2: Clone Your Original Remote

1. Place your original remote and the XIHADA remote side-by-side, preferably touching or very close (1-3 cm apart).
2. On the XIHADA remote, press and hold the button you wish to program (e.g., the top-left button). The LED will flash slowly.
3. While still holding the button on the XIHADA remote, press and hold the corresponding button on your original remote.
4. Keep both buttons pressed. The LED on the XIHADA remote will change from a slow flash to a rapid flash. This indicates successful cloning.
5. Release both buttons.
6. Repeat this process for any other buttons you wish to program on the XIHADA remote using different original remotes or functions.



Figure 3: Remote Dimensions. The compact size aids in easy cloning.

Note: If the LED does not flash rapidly, try adjusting the distance between the remotes or the angle. Some remotes may require direct contact.

Step 3: Pair with Garage Door/Gate Opener (Learn Button)

This step is crucial for many garage door and gate opener systems. You will need to access the "Learn" or "Program" button on your actual garage door or gate opener motor unit.

1. Locate the "Learn" or "Program" button on your garage door or gate opener motor. This button is typically found on the motor unit itself, often under a light cover or on the back panel. Refer to your opener's manual if you cannot find it.
2. Press and release the "Learn" button on your opener. The indicator light on the opener will usually illuminate or flash, indicating it is in learning mode. You typically have about 30 seconds to complete

the next step.

3. Immediately after pressing the "Learn" button on the opener, press the programmed button on your XIHADA remote (the one you programmed in Step 2) once.
4. The opener's light may flash or click, confirming that the remote has been successfully paired.
5. Press the programmed button on your XIHADA remote again to test its functionality. The garage door or gate should activate.

Warning: Ensure no obstructions are in the path of the garage door or gate during testing.

OPERATING INSTRUCTIONS

Once programmed, operating your XIHADA Universal Remote is straightforward:

- **Opening/Closing:** Press the programmed button on your XIHADA remote once. The garage door or gate will open or close.
- **Stopping Movement:** Press the programmed button again while the door/gate is in motion to stop it.
- **Multiple Devices:** If you have programmed multiple devices to different buttons, simply press the corresponding button for the desired device.



Figure 4: Remote in use, opening a garage door.

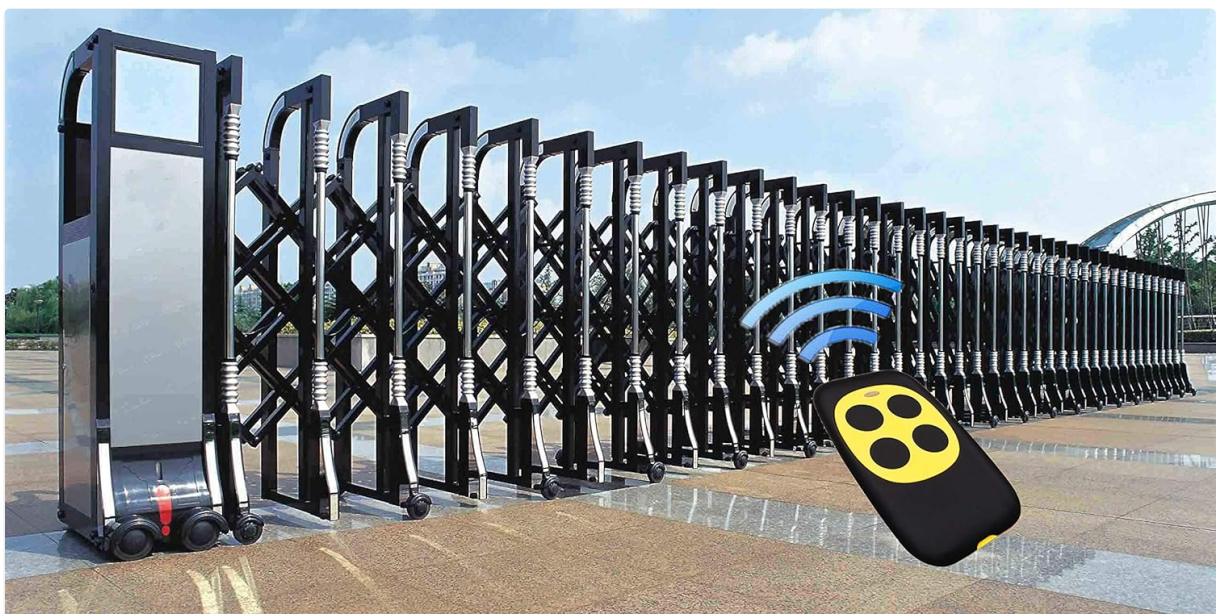


Figure 5: Remote in use, opening a gate.

MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** The remote uses 1 CR2032 battery (included). When the remote's range decreases or the LED indicator becomes dim, it's time to replace the battery. Carefully open the remote casing to access the battery compartment. Ensure correct polarity when inserting the new battery.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

Caution: The battery is not designed for easy user replacement and may require careful handling to avoid damaging internal components. If unsure, seek professional assistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not program (LED doesn't flash rapidly).	Original remote not working or incompatible. Remotes not close enough or at the correct angle. Battery low in original remote or new remote.	Ensure original remote functions correctly. Check compatibility list. Adjust distance/angle; try direct contact. Replace batteries in both remotes if needed.
Remote programmed but doesn't open door/gate.	"Learn" button on opener not activated or timed out. Incorrect "Learn" button procedure for your opener. Remote not fully paired with the opener.	Ensure you press the "Learn" button on the opener and then the XIHADA remote within the specified time. Consult your garage door/gate opener's manual for specific "Learn" button instructions. Repeat the pairing process (Step 3).
Reduced operating range.	Low battery in the XIHADA remote. Interference from other electronic devices.	Replace the CR2032 battery. Ensure clear line of sight to the opener.

If you continue to experience issues, please refer to the official product page for additional programming videos or contact XIHADA customer support.

SPECIFICATIONS

- **Model:** ML999-25
- **Brand:** XIHADA
- **Frequency Range:** 280MHz - 868MHz
- **Buttons:** 4
- **Material:** ABS
- **Item Weight:** Approximately 4.6 ounces (for a pack of 5)
- **Dimensions (single remote):** Approximately 2.36 inches (6.0 cm) x 1.38 inches (3.5 cm)

- **Battery Type:** 1 x CR2032 (included)
- **Special Feature:** Universal cloning capability

WARRANTY AND SUPPORT

For warranty information, please refer to the product's original purchase documentation or the XIHADA official website. If you require further assistance, have compatibility questions, or need troubleshooting beyond this manual, please contact XIHADA customer support through the retailer where the product was purchased or visit the official XIHADA store page:

Visit the XIHADA Store on Amazon