

Borne BTSPK40

Borne Bluetooth Portable Wireless Hi-Fi Speaker User Manual

Model: BTSPK40 | Brand: Borne

1. INTRODUCTION

Thank you for purchasing the **Borne Bluetooth Portable Wireless Hi-Fi Speaker**. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new device. Please read this manual thoroughly before using the product to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INFORMATION

To prevent damage to your device or injury to yourself or others, please observe the following safety precautions:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from water and other liquids.
- Use only the specified charging accessories.
- Avoid dropping or subjecting the device to strong impacts.
- Keep out of reach of children.

3. PRODUCT OVERVIEW

The Borne Portable Wireless Hi-Fi Speaker is designed to deliver high-quality audio wirelessly from your Bluetooth-enabled devices. It features two built-in speakers for stereo sound and an Aux line input for wired connections.

3.1 Package Contents

- Borne Portable Wireless Hi-Fi Speaker
- Aux-in cable
- Charging cable (not explicitly mentioned but implied for rechargeable battery)

- User Manual

3.2 Device Layout

Familiarize yourself with the various parts of your speaker:



Figure 1: Front view of the speaker. This image shows the main circular speaker grille and the stable rectangular base.



Figure 2: Angled side view of the speaker. This perspective highlights the conical shape of the speaker housing and its sturdy base.



Figure 3: Profile view of the speaker. This image provides a clear view of the speaker's side, emphasizing its sleek design and how it connects to the base.

Note: Specific button locations (Power, Volume, Play/Pause), charging port, and AUX input port are typically located on the back or side of the speaker. Refer to the physical device for exact placement.

4. SETUP

4.1 Charging the Speaker

The speaker comes with a built-in long-lasting rechargeable battery. Before first use, fully charge the speaker.

1. Locate the charging port on the speaker (usually a micro USB or USB-C port).
2. Connect the charging cable to the speaker's charging port.
3. Connect the other end of the charging cable to a USB power adapter (not included) or a computer's USB port.
4. The charging indicator light (if present) will illuminate, typically red, during charging and turn off or change color (e.g., blue) when fully charged.
5. Charging time may vary, but typically takes 2-4 hours for a full charge.

4.2 Powering On/Off

- To power on: Press and hold the Power button for approximately 3 seconds until you hear an audible prompt or see an indicator light illuminate.
- To power off: Press and hold the Power button again for approximately 3 seconds until you hear an audible prompt or the indicator light turns off.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

The speaker is designed to stream music wirelessly from your Bluetooth-enabled smartphone, tablet, or computer.

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The Bluetooth indicator light will typically flash rapidly (e.g., blue).
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings menu.
3. Enable Bluetooth and scan for available devices.
4. Select "Borne Speaker" or a similar name from the list of found devices.
5. Once paired, the speaker will emit an audible confirmation, and the Bluetooth indicator light will typically stop flashing and remain solid.
6. You can now play audio from your device through the speaker.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on. If reconnection fails, repeat the pairing process.

5.2 Aux-in Mode

For devices without Bluetooth, or for a wired connection, use the Aux-in feature.

1. Connect one end of the included 3.5mm Aux-in cable to the AUX input port on the speaker.
2. Connect the other end of the Aux-in cable to the headphone jack or audio output port of your MP3 player, computer, or other audio device.
3. The speaker should automatically switch to Aux-in mode. If not, press the Mode button (if available) to switch modes.
4. Adjust volume on both the speaker and your connected device.

5.3 Volume Control

- **On the speaker:** Use the Volume Up (+) and Volume Down (-) buttons to adjust the speaker's output volume.
- **On your connected device:** Adjust the volume on your smartphone, tablet, or computer for overall sound level control.

5.4 Playback Control (Bluetooth Mode)

- **Play/Pause:** Press the Play/Pause button once to play or pause the current track.
- **Next Track:** Press and hold the Volume Up (+) button or a dedicated Next Track button.
- **Previous Track:** Press and hold the Volume Down (-) button or a dedicated Previous Track button.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners, waxes, or solvents.

- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in constant use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or depleted.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; Bluetooth is off on device; Device is too far.	Ensure speaker is in pairing mode (flashing light). Turn Bluetooth on your device. Move device closer to speaker (within 10 meters).
No sound from speaker.	Volume is too low; Incorrect input mode; Device not playing audio.	Increase volume on both speaker and connected device. Ensure correct mode (Bluetooth/Aux-in). Check if audio is playing on your source device.
Sound distortion.	Volume too high; Weak Bluetooth signal; Audio source issue.	Lower volume. Move device closer to speaker. Try a different audio source or file.
Aux-in not working.	Cable not fully inserted; Incorrect mode; Faulty cable.	Ensure Aux cable is fully inserted into both devices. Check if speaker is in Aux-in mode. Try a different Aux cable.

8. SPECIFICATIONS

Model Name	BTSPK40
Brand	Borne
Connectivity Technology	Bluetooth, Auxiliary
Audio Output Mode	Stereo
Speaker Maximum Output Power	3 Watts
Power Source Type	Battery Powered
Battery Type	1 Lithium Polymer battery (included)
Product Dimensions	16 x 11 x 18.5 cm; 399 g
Compatible Devices	Smartphone
Included Components	Auxiliary cable, 1 lithium-polymer battery

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Borne website. Keep your proof of purchase for any warranty claims.

Return Policy: The product has a return policy duration of 30 days for refund/replacement, as per the seller's terms. For further assistance, you may contact the seller directly through the platform where the product was purchased.

© 2024 Borne. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I adjust the volume on the Borne BTSPK40 speaker, and where are the volume controls located?

Based on the manual for the Borne BTSPK40, the volume controls and ports are typically located on the back or side of the speaker. If you only see a power button, charging port, and...

[Read full answer](#)