

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Arebos](#) /

› [Arebos AR-HE-GK2NW Ceramic Hob Instruction Manual](#)

## Arebos AR-HE-GK2NW

# Arebos AR-HE-GK2NW Ceramic Hob Instruction Manual

Model: AR-HE-GK2NW

## 1. INTRODUCTION

Thank you for choosing the Arebos AR-HE-GK2NW Ceramic Hob. This manual provides essential information for the safe and efficient use, installation, and maintenance of your new appliance. Please read these instructions carefully before use and retain them for future reference.

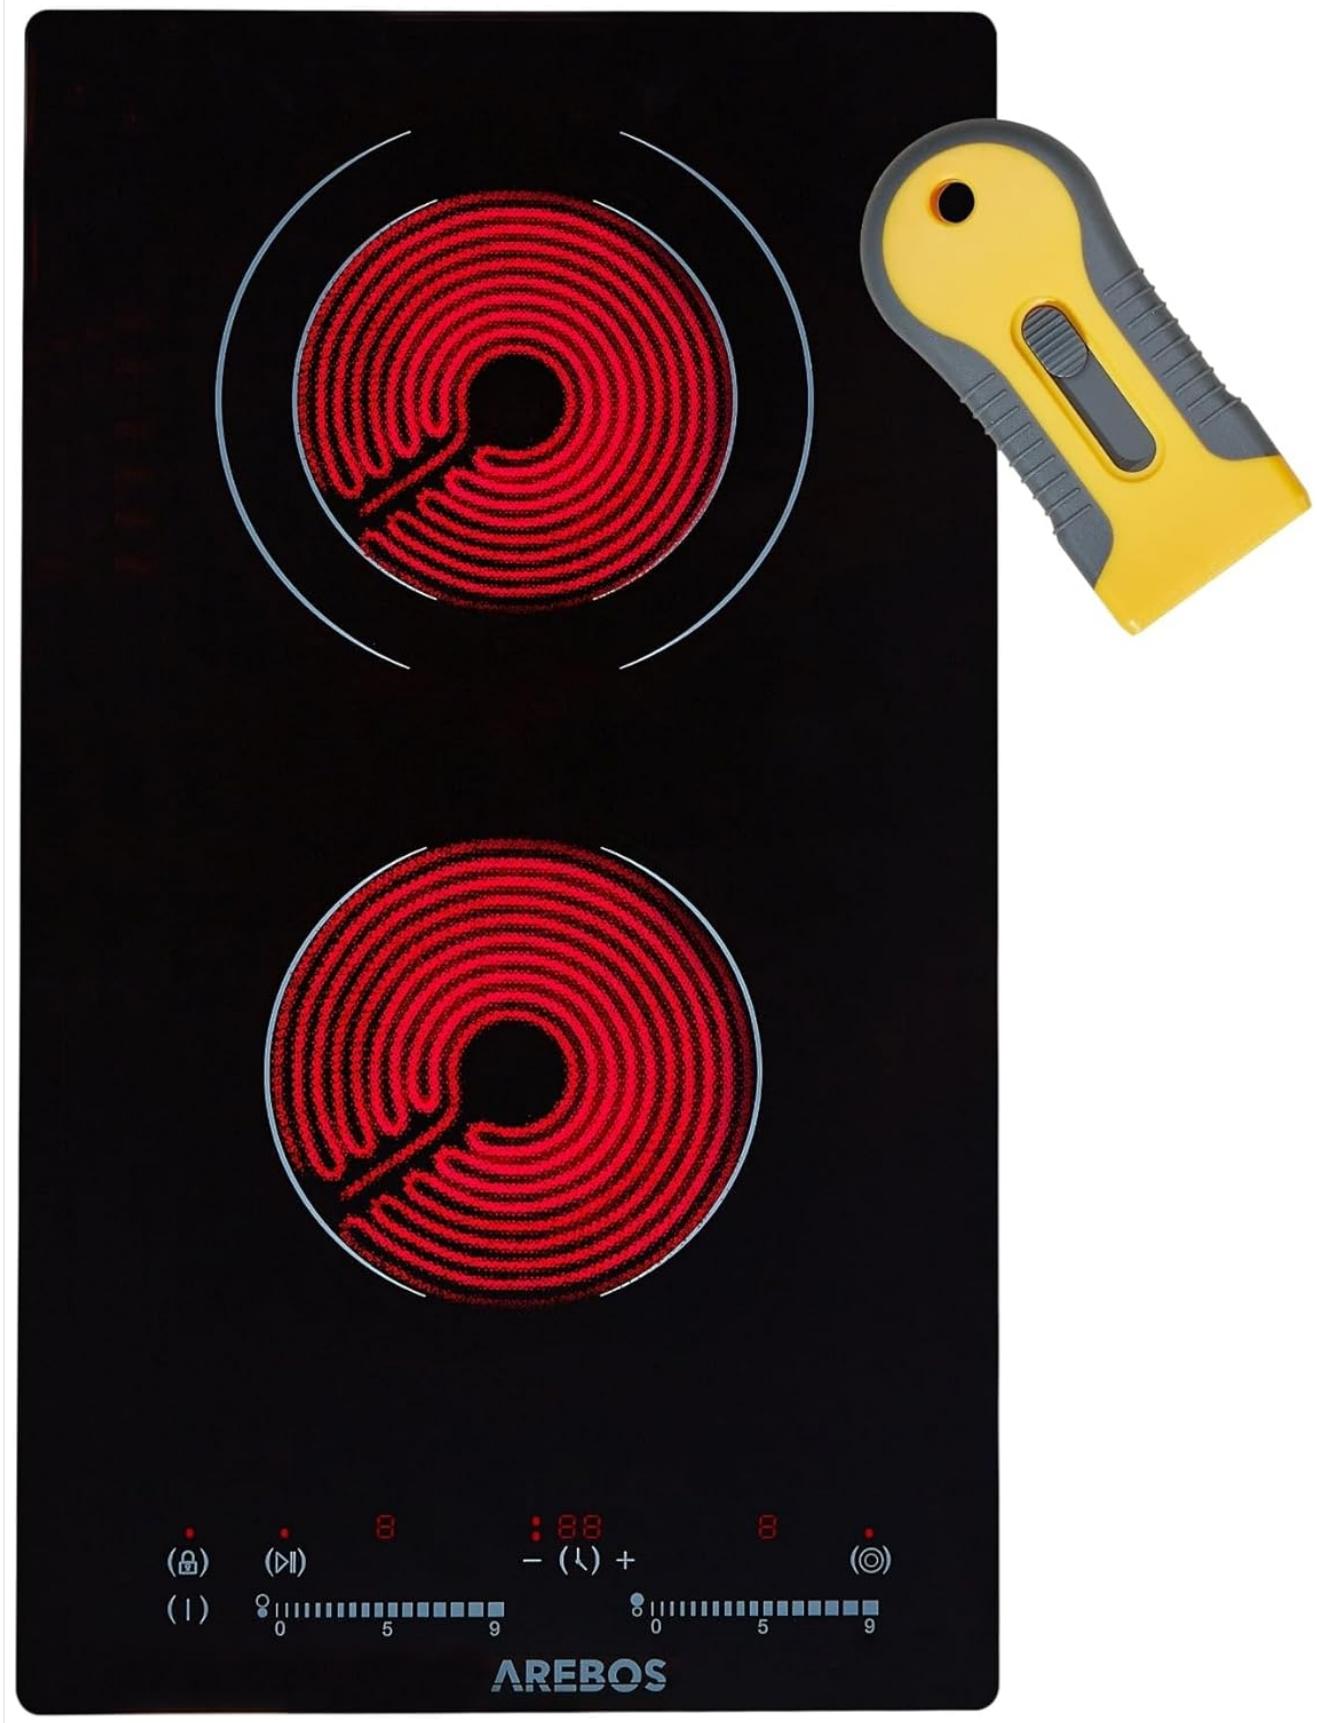


Image 1.1: The Arebos AR-HE-GK2NW Ceramic Hob, showcasing its two radiant cooking zones and the included cleaning scraper.

## 2. SAFETY INSTRUCTIONS

Your safety and the safety of others are paramount. Please observe the following safety precautions:

- **Electrical Safety:** Ensure the hob is correctly installed by a qualified electrician and connected to a suitable power supply. Do not operate if the power cord is damaged.

- **Overheating Protection:** The hob is equipped with an overheating protection system that automatically shuts off the appliance if it becomes excessively hot.
- **Child Lock:** Activate the child lock function to prevent accidental operation by children.
- **Hot Surfaces:** Cooking zones remain hot after use. A residual heat indicator will warn you. Avoid touching hot surfaces and keep children away.
- **Proper Ventilation:** Ensure adequate ventilation around the appliance during installation and operation.
- **Flammable Materials:** Do not store flammable materials near the hob.
- **Cleaning:** Always disconnect the hob from the power supply before cleaning.

### 3. PRODUCT OVERVIEW

---

The Arebos AR-HE-GK2NW is a 2-zone glass-ceramic hob designed for efficient cooking. It features a sensor-touch display for easy control and various safety functions.

#### 3.1 Key Features

- Two independent cooking zones.
- Sensor-touch display for intuitive control.
- 9 adjustable heating settings (1 to 16 power levels).
- Integrated timer (1 to 99 minutes).
- Child lock function for enhanced safety.
- Overheating protection and residual heat indicator.
- Easy-to-clean black glass-ceramic surface.



Image 3.1: Overview of the hob's key features, including safety and convenience functions.

### 3.2 Cooking Zones

The hob includes two cooking zones with different power outputs:

- **Zone 1 (Upper):** 1800 W, with a dual-ring feature for faster heating.
- **Zone 2 (Lower):** 1200 W.



Image 3.2: Detailed view of the two cooking zones, highlighting their sizes and power capabilities.

## 4. SETUP AND INSTALLATION

The Arebos AR-HE-GK2NW is designed as an integrated, self-sufficient hob. Professional installation is recommended.

### 4.1 Dimensions

The compact dimensions of the hob are approximately 52 cm (length) x 29.5 cm (width) x 6.5 cm (height). Ensure your countertop cutout matches these specifications for proper fitting.



Image 4.1: Diagram showing the approximate dimensions of the ceramic hob for installation planning.

## 4.2 Electrical Connection

The hob requires a wired electrical connection. Consult a qualified electrician to ensure correct wiring and compliance with local electrical regulations.

## 5. OPERATING INSTRUCTIONS

The hob is controlled via a sensor-touch display. Ensure your fingers are clean and dry for optimal responsiveness.

### 5.1 Power On/Off

Press the power symbol (O) to turn the hob on or off.

### 5.2 Adjusting Heat Levels

Each cooking zone has its own control. Use the slide touch control to select a power level from 1 to 9. The hob supports 1 to 16 adjustable power settings, which are mapped to the 9 display levels.



## SLIDE TOUCH CONTROL

NEW TECHNOLOGY FOR MORE COOKING FUN

Image 5.1: Demonstrating the slide touch control for adjusting heat settings.

### 5.3 Timer Function

The integrated timer can be set from 1 to 99 minutes. Use the timer controls to set the desired cooking duration. The hob will automatically switch off the selected zone once the timer expires.



Image 5.2: Visual representation of the hob's timer function, which can be set for up to 99 minutes.

## 5.4 Child Lock

To activate the child lock, press and hold the child lock symbol (◎) for a few seconds. This will disable the controls to prevent unintended operation. Repeat the process to deactivate.

## 5.5 Residual Heat Indicator

After a cooking zone is turned off, an 'H' will appear on the display if the surface is still hot. Do not touch the surface until the 'H' disappears.

## 5.6 Compatible Cookware

The hob is suitable for pots and pans made of iron, stainless steel, and alloy materials. Ensure the base of the cookware is flat and covers the cooking zone adequately for optimal heat transfer.



Image 5.3: Examples of cookware materials compatible with the ceramic hob.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hob.

- **Daily Cleaning:** Wipe the glass-ceramic surface with a damp cloth and mild detergent after each use, once the surface has cooled down.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use the provided scraper or a specialized ceramic hob cleaner. Hold the scraper at a shallow angle and gently scrape off residues.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the surface.
- **Spills:** Clean up spills immediately, especially sugary liquids, to prevent them from burning onto the surface and causing permanent damage.

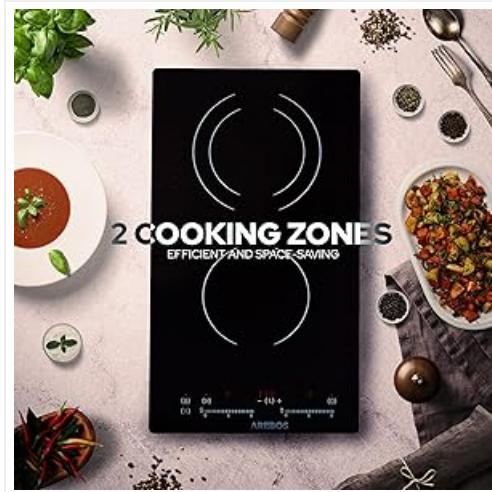


Image 6.1: Using the provided scraper for effective cleaning of the hob surface.

## 7. TROUBLESHOOTING

---

If you encounter issues with your hob, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hob does not turn on	No power supply; Child lock activated	Check power connection; Deactivate child lock.
Cooking zone not heating	Incorrect power level selected; Cookware not suitable	Adjust power level; Use compatible cookware.
Hob shuts off automatically	Overheating protection activated; Timer expired	Allow hob to cool down; Check timer settings.
Controls unresponsive	Surface is wet or dirty; Child lock activated	Clean and dry the control area; Deactivate child lock.

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

---

- Brand:** Arebos
- Model Number:** AR-HE-GK2NW
- Manufacturer:** Canbolat Vertriebs GmbH
- Product Dimensions:** 52 x 29.5 x 6.5 cm (L x W x H)
- Weight:** 4.63 kg
- Heating Elements:** 2
- Power Output:** Total 3200 W (Zone 1: 1800 W, Zone 2: 1200 W)
- Power Source:** Electric, Wired
- Surface Material:** Glass Ceramic
- Special Features:** Automatic shut-off, Timer, Child Lock, Overheating Protection, Residual Heat Indicator
- Country of Origin:** China

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

© 2023 Arebos. All rights reserved.