

Trexonic 363

Trexonic Portable Rechargeable 14 Inch 720p LED TV User Manual

Model: 363 | Brand: Trexonic

INTRODUCTION

The Trexonic Portable Rechargeable 14-inch LED TV is designed for high-quality entertainment on the go. This lightweight unit offers versatile connectivity and a built-in digital tuner, allowing you to enjoy your favorite shows and movies wherever you are. Its compact design and rechargeable battery make it an ideal companion for travel, outdoor activities, or simply moving entertainment around your home.

PACKAGE CONTENTS

Please ensure all the following items are included in your package:

- Trexonic 14-inch Portable LED TV
- Remote Control
- Detachable Telescope Antenna
- A/V Cables
- AC Adapter (Wall Charger)
- Car Adapter

PRODUCT OVERVIEW



Figure 1: Front view of the Trexonic Portable LED TV with included remote control.



Figure 2: Side panel connections including Antenna Jack, Mini-VGA Port, Audio/Video Input/Output, Earphones Jack, HDMI Input, USB Port, LED Charge Indicator, DC 12V Port, and Power Switch.



Figure 3: Top panel control buttons including SD/MMC card slot, Menu, Volume, Channel, Source, and Enter.



Figure 4: Rear view of the Trexonic Portable LED TV, highlighting the built-in speakers and adjustable stand.



Figure 5: Product dimensions: 13 inches width, 9 inches height, 1.25 inches depth, with a 14-inch diagonal screen size.

SETUP

1. Powering On and Charging

The Trexonic Portable LED TV can be powered by the included AC adapter, car adapter, or its built-in rechargeable battery. For initial use, it is recommended to fully charge the battery.

- **AC Power:** Connect the AC adapter to the DC 12V port on the side of the TV and plug it into a standard wall outlet (110-240V).
- **Car Power:** Use the car adapter to connect the TV to your vehicle's 12V power outlet.
- **Battery:** The built-in battery provides portable power. Ensure the power switch on the side panel is in the 'ON' position for battery operation. The LED Charge Indicator will show charging status. A full charge typically takes 4-5 hours, providing approximately 2-3 hours of playback depending on brightness settings.

2. Antenna Connection

For receiving over-the-air digital and analog TV channels, connect the detachable telescope antenna to the Antenna Jack

on the side panel. Extend the antenna fully for optimal signal reception.

3. Adjusting the Stand

The TV features a hard-mounted, sturdy adjustable back stand. Adjust the stand to achieve your desired viewing angle. The anti-slip textured panel on the stand helps maintain stability.

OPERATING INSTRUCTIONS

1. Basic Controls

The TV can be operated using the included remote control or the buttons located on the top panel of the unit.

- **Power:** Use the power button on the remote or the side power switch to turn the TV on/off.
- **Volume:** Use the VOL+ and VOL- buttons to adjust the volume.
- **Channel:** Use the CH+ and CH- buttons to change channels.
- **Menu:** Press the MENU button to access the on-screen display (OSD) menu.
- **Source:** Press the SOURCE button to switch between input modes (TV, HDMI, AV, VGA, USB, SD/MMC).
- **Enter:** Use the ENTER button to confirm selections in the menu.

2. Connecting External Devices

The Trexonic TV offers multiple connectivity options:

- **HDMI Input:** Connect devices like gaming consoles, laptops, or streaming sticks using an HDMI cable.
- **AV In/Out:** Use the provided A/V cables to connect older devices or output video/audio to another display.
- **VGA Input:** Connect a computer or laptop via the Mini-VGA port.
- **USB Port:** Insert a USB drive to play supported media files.
- **SD/MMC Card Slot:** Insert an SD or MMC card to play supported media files.
- **Headphone Jack:** Connect headphones for private listening.

3. Channel Scan Operation

To receive digital and analog broadcast channels, perform a channel scan:



Channel Scan Operation

1. Press **MENU** to open settings.
2. Press direction **▲▼** keys to select **CHANNEL**.
3. Press **ENTER** to go to the CHANNEL menu.



4. Make sure **AIR** is selected by selecting **◀** or **▶**



5. Choose **AUTO SCAN** with **▼** and press **ENTER** to confirm your choice.



6. Press **▶** to select **Yes** to initiate **AUTO SCAN**.



7. System will now run **AUTO SCAN**. Please wait for scan to complete.

NOTE: Charge time 4 - 5 Hours for full charge.

Play Time: 2 - 3 Hours based on brightness.

Figure 6: On-screen guide for performing a channel scan.

1. Press the **MENU** button to open settings.
2. Use the **CHANNEL** navigation keys to select **CHANNEL**.
3. Press **ENTER** to go to the CHANNEL menu.
4. Make sure **AIR** is selected by selecting the appropriate option.
5. Choose **AUTO SCAN** and press **ENTER** to confirm your choice.
6. Press **Yes** to initiate **AUTO SCAN**.
7. The system will now run **AUTO SCAN**. Please wait for the scan to complete.

4. Media Playback

The TV supports playback of various video and audio formats from USB drives or SD/MMC cards, including MKV, MOV, AVI, WMV, MPEG-1-4, MP4, and FLV for video, and MP3 for audio.

MAINTENANCE

Proper care and maintenance will ensure the longevity of your Trexonic Portable LED TV.

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior. For stubborn marks, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the TV in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. If storing for a long time, charge the battery to about 50% every few months.

- **Antenna Care:** Handle the detachable antenna with care to prevent bending or damage.

TROUBLESHOOTING

If you encounter issues with your Trexonic Portable LED TV, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Battery drained; Power adapter not connected; Power switch off.	Charge the battery; Ensure power adapter is securely connected; Turn the side power switch to 'ON'.
No Signal / Poor Picture Quality (TV Mode)	Antenna not connected or extended; No channel scan performed; Weak signal.	Connect and extend the antenna; Perform an Auto Scan (refer to Operating Instructions); Reposition the antenna or TV for better reception.
No Picture (External Input)	Incorrect input source selected; Cable not connected properly.	Press the SOURCE button to select the correct input (HDMI, AV, VGA, USB, SD/MMC); Check cable connections.
No Sound	Volume too low or muted; External device volume low.	Increase volume using VOL+ button; Check if TV is muted; Adjust volume on connected external device.
Short Battery Life	High brightness setting; Continuous usage; Battery degradation over time.	Reduce screen brightness; Ensure battery is fully charged before use; Battery life naturally decreases with age and usage cycles.

SPECIFICATIONS

Feature	Detail
Brand	Trexonic
Model Number	363
Screen Size	14 Inches (36 cm diagonal)
Display Technology	LED
Resolution	1366 x 768 (720p)
Aspect Ratio	16:9
Peak Brightness	350cd/m2
Contrast Ratio	300:1
Viewing Angle	165°
Response Time	8ms
Tuner Support	ATSC HD Digital, Analog TV (ATV & DTV)
Video Playback Support	1080P Video, MKV, MOV, AVI, WMV, MPEG-1-4, MP4, FLV
Audio Playback Support	MP3

Feature	Detail
Battery Capacity	1800 mAh
Power Supply	AC 110-240V, 12V Vehicle Power Input
Product Dimensions (D x W x H)	1.25" x 13.5" x 9"
Item Weight	2.2 pounds

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Trexonic website. Keep your proof of purchase for any warranty claims.

For technical assistance or inquiries, please contact Trexonic customer service through the contact details provided in your product packaging or on the manufacturer's website.




Documents - Trexonic – 363



Trexonic TV Auto Scan Guide

Instructions for performing an auto scan on a Trexonic TV to find channels, including preparation and step-by-step guidance.

lang: score:20 filesize: 1.61 M page_count: 1 document date: 2021-07-30

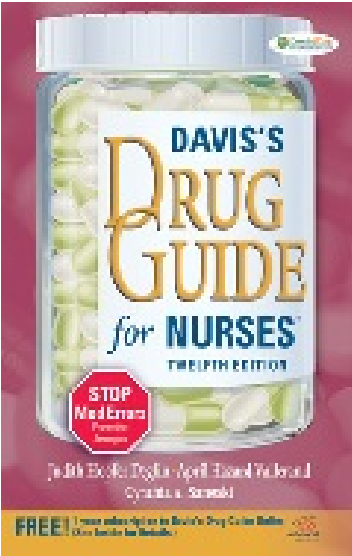

[pdf] Guide

49878 fm 1 10 Judith Hopfer Deglin Davis s Drug Guide for Nurses 12th ed J et al F A 2009 WW the eye eu public Books BioMed

Davis s DRUG GUIDE FOR NURSES TWELFTH EDITION JUDITH HOPFER DEGLIN, PharmD Consultant Pharmacist Ho ... inacea 1348 O feverfew 1349 garlic 1350 N ginger 1351 milk thistle 1361 SAME 1362 saw palmetto **1363** St. John s wort 1364 S ginkgo 1353 valerian 1365 NONOPIOID ANALGESICS PHARMACOLOGIC PROFILE ...

lang:en score:12 filesize: 121.33 M page_count: 1506 document date: 2010-12-02

