



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Infrared Remote Control Instruction Manual for JVC Car Stereo Systems

Easytry123 Easytry3194

Easytry123 Replacement Infrared Remote Control Instruction Manual

For JVC Car Stereo Systems: KD-R538, KD-R530, KD-S19, KD-A535, KD-A735BT, KW-R920BTS, KW-HDR720

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement infrared remote control, model Easytry3194. This remote is designed to function with specific JVC car stereo CD receiver models. Please ensure your original remote or car stereo system is listed as compatible before use.

Important Note: This is a replacement remote control. While it provides core functionalities, it may not offer all the exact features or button layouts as your original equipment manufacturer (OEM) remote. Always refer to your JVC car stereo's original manual for detailed information on its functions.

2. PACKAGE CONTENTS

- 1 x Easytry123 Replacement Infrared Remote Control (Model: Easytry3194)

Note: Batteries are not included and must be purchased separately.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Back view of the remote control with the battery compartment.

3.2 Initial Use

This remote control operates via infrared (IR) technology. No complex pairing is typically required. Once batteries are installed, point the remote directly at the IR receiver on your JVC car stereo system. Ensure there are no obstructions between the remote and the stereo.

Test basic functions like power and volume to confirm compatibility and operation.

4. OPERATING THE REMOTE CONTROL

The Easytry123 remote control provides essential functions for your compatible JVC car stereo system. Refer to the image below for button identification.



Figure 2: Front view of the remote control with button layout.

4.1 Button Functions

- **U/ATT:** Power On/Off or Attenuate (Mute) function.
- **SOUND:** Access sound settings or equalizer.
- **VOL+:** Increase volume.
- **VOL-:** Decrease volume.
- **SOURCE:** Cycle through audio sources (e.g., Radio, CD, USB, Bluetooth).
- **Navigation Arrows (R, U, D, F):** Used for menu navigation, track skipping (R/F for next/previous), or tuning (U/D for up/down).

Specific button functionality may vary slightly depending on your JVC car stereo model. Refer to your stereo's manual for detailed operation of each function.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

5.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are installed correctly with the correct polarity.
- Replace the batteries with fresh AAA batteries.
- Ensure there is a clear line of sight between the remote's IR emitter and the car stereo's IR receiver.
- Verify that your JVC car stereo model is listed as compatible with this remote.

- **Only some buttons work:**

- This replacement remote may not support all advanced functions of your original remote. Refer to the 'Important Note' in the Introduction.
- Ensure the car stereo is in the correct mode for the button function you are trying to use (e.g., CD mode for CD controls).

- **Short operating range:**

- Replace the batteries.
- Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.

7. SPECIFICATIONS

Brand	Easytry123
Model Number	Easytry3194
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Max Number of Supported Devices	1
Compatible Devices	JVC Car Stereo Systems: KD-R538, KD-R530, KD-S19, KD-A535, KD-A735BT, KW-R920BTS, KW-HDR720

8. SUPPORT

If you encounter any issues or have questions regarding the operation or compatibility of your Easytry123 replacement remote control, please contact the seller or manufacturer for assistance. It is recommended to have your product model number (Easytry3194) and your JVC car stereo model number ready when seeking support.