

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GoWISE](#) /

› [GoWISE USA GW44803 Ultra 12.7-Quart Electric Air Fryer Oven User Manual](#)

GoWISE GW44803

GoWISE USA GW44803 Ultra 12.7-Quart Electric Air Fryer Oven User Manual

Model: GW44803

IMPORTANT SAFETY INFORMATION

Before operating your GoWISE USA GW44803 Air Fryer Oven, please read all instructions thoroughly to ensure safe and proper use. This appliance is intended for household use only. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Ensure proper ventilation around the appliance during operation.

For detailed safety guidelines, refer to the official Safety Information PDF document provided by GoWISE USA: [Safety Information \(PDF\)](#).

PRODUCT OVERVIEW AND COMPONENTS

The GoWISE USA GW44803 Ultra 12.7-Quart Electric Air Fryer Oven is a versatile kitchen appliance designed for air frying, roasting, baking, and dehydrating. It comes with a comprehensive set of accessories to enhance your cooking experience.



Figure 1: GoWISE USA GW44803 Air Fryer Oven shown with all 11 included accessories, including rotisserie tools, mesh trays, and mini silicone mitts.

Main Unit Features:

- **Digital Touch Screen Control Panel:** Easy-to-read display with 11 preset functions.
- **Large Capacity:** 12.7-quart cooking space with 3 rack levels.
- **Full Glass Oven Door:** Allows for easy monitoring of cooking progress.
- **Stainless Steel Interior:** Durable and easy to clean.



Figure 2: Front view of the GoWISE USA GW44803 Air Fryer Oven, highlighting the digital display and glass door.

Included Accessories:

- Rotisserie Tong
- Rotisserie Rod
- Drip Pan
- Skewer Rotisserie
- Rotisserie Cage
- 2 Mesh Trays
- 1 Shallow Mesh Basket
- 2 Oven Racks
- Mini Silicone Mitts

SETUP AND FIRST USE

Unpacking and Placement:

1. Carefully remove all packaging materials and accessories from the air fryer oven.
2. Inspect the appliance for any damage. Do not use if damaged.
3. Place the air fryer oven on a stable, level, heat-resistant surface. Ensure there is at least 6 inches of clear space on all sides and above the unit for proper air circulation.



Figure 3: Product dimensions: 12"D x 12"W x 14"H, with internal cooking space measurements.

Before First Use:

1. Wipe the exterior of the unit with a clean, damp cloth.
2. Wash all accessories (mesh trays, drip pan, rotisserie tools, etc.) with warm, soapy water. Rinse thoroughly and dry completely.
3. Insert the drip pan at the bottom of the oven.
4. Plug the power cord into a grounded electrical outlet.

5. Run the appliance empty for approximately 10-15 minutes at 350°F (175°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
6. Allow the unit to cool completely before wiping down the interior with a damp cloth.

OPERATING INSTRUCTIONS

The GoWISE USA GW44803 Air Fryer Oven features an intuitive digital touch screen control panel for easy operation.



Figure 4: Detailed view of the digital control panel with various preset icons and manual controls.

Control Panel Functions:

- **Power Button:** Turns the unit on/off.
- **Menu Button:** Cycles through preset cooking functions (Fries, Wings, Steak, Vegetable, Fish, Chicken, Pizza, Pork, Bake, Toast, Dehydrate).
- **Rotisserie Button:** Activates the rotisserie function for even cooking.
- **Manual Button:** Allows for custom time and temperature settings.
- **Light Button:** Turns the interior light on/off.
- **Keep Warm Button:** Maintains food temperature after cooking.
- **Delay Button:** Sets a delayed start time for cooking.
- **Temperature/Time Adjustment Arrows:** Use the up/down arrows to adjust temperature and cooking time.

General Operation:

1. Place food on the appropriate accessory (mesh tray, oven rack, rotisserie rod).
2. Slide the accessory into the desired rack level inside the oven.
3. Close the oven door securely.
4. Press the Power button to turn on the unit.
5. Select a preset function using the Menu button, or use the Manual button to set custom time and temperature.
6. Press the Start/Pause button to begin cooking.
7. The internal light can be turned on to monitor cooking progress.

Using the Rotisserie Function:

The rotisserie function is ideal for whole chickens, roasts, or skewers, ensuring even cooking and browning.

1. Prepare your food and secure it onto the rotisserie rod or skewer rotisserie. Ensure the weight does not exceed 5.5 pounds.
2. Insert the rotisserie rod into the designated slots inside the oven.
3. Select a cooking preset or manual settings.
4. Press the Rotisserie button to activate the rotation.
5. Use the rotisserie tong to safely remove the hot rotisserie rod after cooking.



Figure 5: Chicken wings cooking on multiple mesh trays inside the air fryer oven, demonstrating multi-level cooking.



Figure 6: Skewers with meat and vegetables rotating inside the air fryer oven using the rotisserie function.

Dehydrate Function:

The dehydrate function allows you to make dried fruits, jerky, and other dehydrated snacks.

1. Prepare food for dehydration (e.g., thinly sliced fruits or marinated meat).
2. Arrange food in a single layer on the mesh trays.
3. Insert trays into the oven.
4. Select the Dehydrate preset. The oven will automatically set the recommended temperature and time for dehydration.
5. Monitor the food periodically until desired dryness is achieved.

Official Product Videos:

Currently, no official product videos from the seller are available for embedding in this manual. Please refer to the GoWISE USA website or official channels for video demonstrations and recipes.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your GoWISE USA Air Fryer Oven.

Cleaning Instructions:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners.
3. **Interior:** Wipe the interior with a damp cloth and mild soap. For stubborn food residue, a non-abrasive sponge can be used. Ensure the interior is dry before next use.
4. **Accessories:** All removable accessories, including mesh trays, drip pan, and rotisserie tools, are dishwasher safe. For best results, hand wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
5. **Drip Pan:** Empty and clean the drip pan after each use to prevent smoke and odors.

Product Care Instructions: Dishwasher Safe (for accessories), Hand Wash (for main unit interior/exterior).

TROUBLESHOOTING

If you encounter issues with your GoWISE USA Air Fryer Oven, refer to the common problems and solutions below. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; unit malfunction.	Ensure the power cord is securely plugged into a working grounded outlet. Check your circuit breaker. If the unit still does not power on, contact customer support.
Food is not cooked evenly.	Overcrowding; incorrect temperature/time; food not rotated.	Do not overcrowd the trays; cook in smaller batches if necessary. Adjust temperature and time as needed. For multi-level cooking, rotate trays halfway through cooking. Utilize the rotisserie function for whole items.
White smoke coming from the appliance.	Grease/oil residue in drip pan; fatty foods.	Clean the drip pan thoroughly after each use. For very fatty foods, you may need to drain excess fat during cooking. Ensure all parts are clean before use.
Unit shuts down unexpectedly during operation.	Overheating; electrical issue.	Unplug the unit and allow it to cool down for at least 30 minutes. Ensure proper ventilation around the unit. If the issue persists, there may be an internal electrical fault; contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Ultra
Item Model Number	GW44803
Brand	GoWISE

Feature	Detail
Capacity	12.7 Quarts
Color	Black
Material	Stainless Steel
Product Dimensions	12"D x 12"W x 14"H
Item Weight	24.7 pounds
Wattage	1600 watts
Control Method	Touch
Special Feature	Manual, Programmable
Recommended Uses	Dehydrate, Roast
UPC	819687022287
Manufacturer	GoWISE USA
Date First Available	October 10, 2018

WARRANTY AND SUPPORT

Your GoWISE USA GW44803 Ultra 12.7-Quart Electric Air Fryer Oven comes with a **1-year warranty** from the date of purchase. GoWISE USA also provides **free lifetime support** for this product.

For warranty claims, technical assistance, or any product-related inquiries, please contact GoWISE USA customer support through their official website or the contact information provided in your purchase documentation.

You can also find additional resources, recipes, and tips on the GoWISE USA store page: [GoWISE USA Store](#).

