

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Relaxdays](#) /

› [Relaxdays 10024755 Police Station Play Tent Instruction Manual](#)

Relaxdays 10024755

Relaxdays Police Station Play Tent

Model: 10024755

INTRODUCTION

This instruction manual provides important information for the safe assembly, use, and maintenance of your Relaxdays Police Station Play Tent. Please read this manual carefully before use and retain it for future reference. The Relaxdays Police Station Play Tent is designed to provide an imaginative play space for children. It features a police station theme with printed details, suitable for both indoor and outdoor environments.

SAFETY WARNINGS

- **Adult Supervision Required:** Always ensure children are supervised by an adult when using the play tent.
- **Keep Away From Fire:** The tent fabric is not fireproof. Keep the play tent away from open flames, heaters, and other heat sources.
- **Age Recommendation:** This product is suitable for children aged 3 years and up.
- **Choking Hazard:** Ensure all small parts are securely assembled and kept away from young children to prevent choking hazards.
- **Outdoor Use:** When used outdoors, ensure the tent is placed on a flat, stable surface and secured against wind if necessary. Do not use during strong winds or storms.

PACKAGE CONTENTS

Before assembly, please verify that all components are present:

- Police Play Tent Fabric
- Plastic Frame Poles (various lengths)
- Plastic Connectors
- Instruction Manual

Note: Decorative items shown in product images are not included.

SETUP INSTRUCTIONS

The Relaxdays Police Station Play Tent features a simple plug-in system for quick assembly.

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
- 2. Assemble the Base Frame:** Connect the plastic poles using the plastic connectors to form the rectangular base of the tent. Ensure all connections are secure.
- 3. Construct the Vertical Supports:** Attach the longer plastic poles to the corners of the base frame using the appropriate connectors to create the vertical structure.
- 4. Form the Roof Structure:** Connect the remaining poles and connectors to create the roof frame, then attach it to the top of the vertical supports.
- 5. Drape the Tent Fabric:** Carefully drape the tent fabric over the assembled plastic frame. Ensure the fabric is aligned correctly with the tent's openings and design elements.
- 6. Secure the Fabric:** Fasten the tent fabric to the frame using any integrated ties or loops to ensure it is taut and stable.

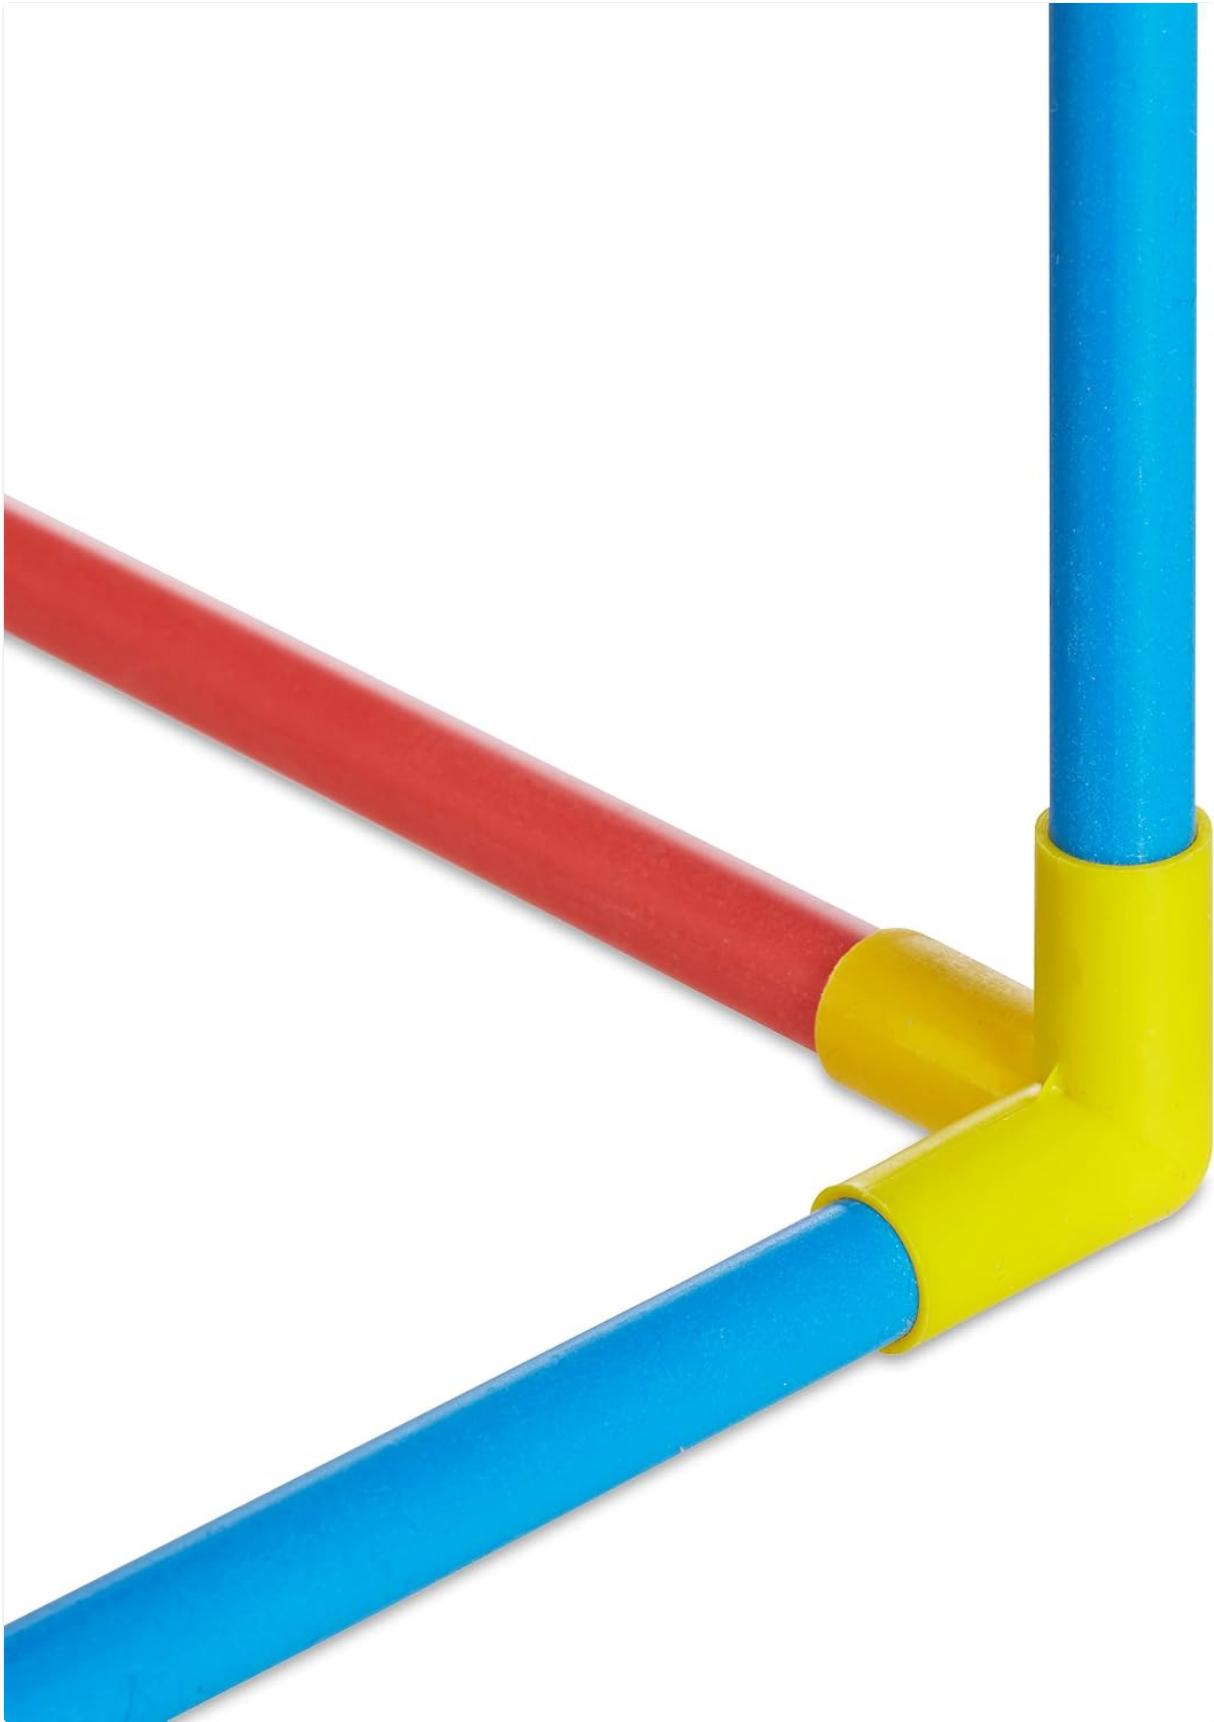


Image: Close-up view of the plastic frame poles and yellow connectors, illustrating the simple plug-in assembly system for the tent's structure.

For detailed visual instructions, refer to the diagrams provided in the included physical manual.

OPERATING (USAGE)

The Police Station Play Tent is designed for imaginative play and can be used in various settings:

- **Indoor Use:** Ideal for children's bedrooms, playrooms, or living areas. Ensure sufficient space for the tent (dimensions: 102 x 72 x 95 cm).
- **Outdoor Use:** Can be used in the garden on dry, calm days. Avoid prolonged exposure to direct sunlight or rain to preserve the fabric. Always place on a level surface.
- **Entrances:** The tent features two entrances. The fabric flaps can be tied back using the integrated ribbons for open access, or left down for a more enclosed play space.



Image: A close-up view of the blue ribbon tie-back, used to secure the tent's entrance flap in an open position.



Image: The Police Station Play Tent positioned in a child's bedroom, demonstrating its suitability for indoor play environments.

MAINTENANCE

- **Cleaning:** The polyester fabric can be spot cleaned with a damp cloth and mild soap. Do not machine wash or tumble dry. Allow to air dry completely before storage.
- **Frame Care:** Wipe plastic poles and connectors with a damp cloth as needed.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight, to prolong its lifespan.
- **Inspection:** Periodically inspect the tent fabric and frame for any signs of wear, tear, or damage. Replace damaged parts if necessary.

TROUBLESHOOTING

- **Tent is unstable:** Ensure all plastic poles are fully inserted into their connectors. Check that the tent fabric is evenly draped and secured to the frame.
- **Difficulty with assembly:** Refer to the setup instructions and ensure you are using the correct poles and connectors for each section. Do not force connections.

- **Fabric appears wrinkled:** Wrinkles are normal due to packaging. They will typically smooth out with use or by gently stretching the fabric over the frame.

SPECIFICATIONS

| | |
|------------------------------------|--|
| Model Number | 10024755 |
| Brand | Relaxdays |
| Dimensions (H x W x D) | Approx. 102 x 72 x 95 cm (40.2 x 28.3 x 37.4 inches) |
| Weight | Approx. 0.6 kg (1.3 lbs) |
| Recommended Age | 3 years and up |
| Tent Fabric Material | 100% Polyester |
| Frame Material | Plastic |
| Color | Blue/Red |
| Number of Entrances | 2 |
| Assembly | User assembly required (simple plug-in system) |
| Batteries Required/Included | No |
| Country of Origin | Germany |

104 cm



Image: The Police Station Play Tent with its key dimensions (height, width, depth) clearly indicated for reference.

WARRANTY INFORMATION

Specific warranty information for the Relaxdays Police Station Play Tent is not provided in the product details. Please refer to the retailer's return policy or contact Relaxdays customer service for warranty details.

SUPPORT

For further assistance, missing parts, or inquiries regarding your Relaxdays Police Station Play Tent, please contact Relaxdays customer support through their official website or the retailer where the product was purchased. *Please have your model number (10024755) ready when contacting support.*

