



Manuals.plus /

› Jensales /

› Jensales Fiat Hesston 55-56 Tractor Operators Manual

Jensales 55-56

Jensales Fiat Hesston 55-56 Tractor Operators Manual

Essential instructions for safe and efficient operation.

[Introduction](#)

[Setup](#)

[Operating](#)

[Maintenance](#)


[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

This manual provides detailed instructions for the safe and effective operation, maintenance, and troubleshooting of the Fiat Hesston 55-56 Tractor. It is crucial to read and understand all sections before operating the machine to ensure personal safety and prolong the life of the equipment. Keep this manual accessible for future reference.

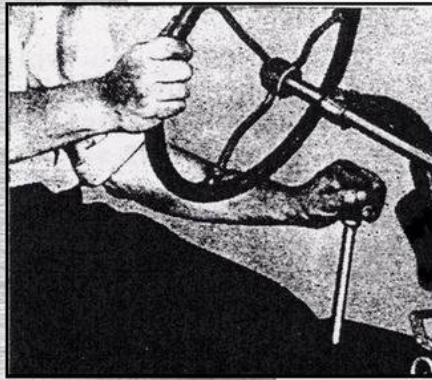

Operator's Manual

Operator's Manual



THIS IS A MANUAL PRODUCED BY **JENSALES INC.** WITHOUT THE AUTHORIZATION OF
OR IT'S SUCCESSORS. AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Figure 1: Front cover of the Fiat Hesston 55-56 Tractor Operators Manual. This image displays the official manual cover, providing a visual reference for the document's identity.

SETUP AND PRE-OPERATION CHECKS

Before starting the tractor, perform the following checks to ensure safe operation and prevent damage:

1. **Fluid Levels:** Verify engine oil, coolant, hydraulic fluid, and fuel levels are within recommended ranges. Refer to the dipsticks and sight gauges.

2. **Tire Pressure:** Check all tire pressures according to the specifications listed in the manual or on the tire sidewall.
3. **Safety Guards:** Ensure all safety guards and shields are in place and securely fastened.
4. **Lights and Signals:** Confirm all lights, turn signals, and warning lights are functional.
5. **Brakes:** Test brake pedal free play and effectiveness. Adjust if necessary.
6. **Steering:** Check for excessive play in the steering wheel.
7. **Attachments:** If attachments are connected, ensure they are properly mounted and secured, and all PTO shafts are correctly engaged and guarded.

Always consult the specific sections of this manual for detailed instructions on each pre-operation check.

OPERATING INSTRUCTIONS

Starting the Engine

1. Ensure the transmission is in neutral and the parking brake is engaged.
2. Turn the ignition key to the "ON" position.
3. If equipped, engage the glow plugs for the recommended duration in cold weather.
4. Turn the ignition key to the "START" position. Release the key once the engine starts.
5. Allow the engine to warm up for a few minutes before engaging any implements or driving.

Driving and Shifting

- Depress the clutch pedal fully before shifting gears.
- Select the appropriate gear for the task and terrain.
- Release the clutch pedal smoothly to avoid stalling or jerky movement.
- Always reduce speed before downshifting.

Stopping the Tractor

1. Bring the tractor to a complete stop using the foot brakes.
2. Engage the parking brake.
3. Shift the transmission into neutral.
4. Turn the ignition key to the "OFF" position to shut down the engine.
5. Remove the key to prevent unauthorized use.

MAINTENANCE SCHEDULE

Regular maintenance is essential for the longevity and performance of your Fiat Hesston 55-56 Tractor. Adhere to the following schedule:

Interval	Task
Daily / Every 10 Hours	Check engine oil, coolant, hydraulic fluid, and fuel levels. Inspect tires for damage and correct pressure. Clean air filter pre-cleaner.
Every 50 Hours	Lubricate all grease points. Check battery electrolyte level and terminals. Inspect fan belt tension.
Every 250 Hours	Change engine oil and filter. Replace fuel filter. Inspect brake and clutch pedal free play.
Every 500 Hours	Replace hydraulic filter. Check transmission oil level. Inspect all hoses and clamps.
Annually / Every 1000 Hours	Replace air filter element. Flush and replace coolant. Inspect steering linkage.

Always use genuine replacement parts and recommended lubricants. Consult a qualified technician for complex repairs.

TROUBLESHOOTING GUIDE

This section provides solutions for common operational issues. For problems not listed here, contact authorized service personnel.

- **Engine Fails to Start:**

- Check fuel level.
- Ensure battery terminals are clean and tight.
- Verify transmission is in neutral and parking brake is engaged.
- Inspect for loose electrical connections.

- **Loss of Power:**

- Check fuel filter for clogging.
- Inspect air filter for blockage.
- Verify proper engine oil level.

- **Hydraulic System Malfunction:**

- Check hydraulic fluid level.
- Inspect for leaks in hydraulic lines.
- Ensure PTO is engaged correctly if applicable.

- **Overheating:**

- Check coolant level.
- Clean radiator fins.
- Inspect fan belt tension.

Do not attempt repairs beyond your technical capability. Always prioritize safety.

TECHNICAL SPECIFICATIONS

Key technical details for the Fiat Hesston 55-56 Tractor:

- **Model:** Fiat Hesston 55-56
- **Manufacturer:** Jensales (as publisher of manual)
- **Part Number:** FI-O-55-56PLUS{506688}
- **Product Dimensions:** 12 x 10 x 3 inches (Manual dimensions)
- **Item Model Number:** 55-56
- **ASIN:** B07JBYTXDY
- **Date First Available:** October 17, 2017

Note: These specifications pertain to the manual itself. For detailed tractor specifications, refer to the specific sections within this manual.

WARRANTY AND SUPPORT

Warranty Information

Information regarding the warranty for the Fiat Hesston 55-56 Tractor is typically provided by the original equipment manufacturer (OEM) at the time of purchase. This operator's manual itself does not carry a separate warranty for the tractor. For details on the tractor's warranty, please refer to your purchase documentation or contact an authorized Fiat Hesston dealer.

Customer Support

For technical assistance, parts inquiries, or service, please contact an authorized Fiat Hesston service center or dealer. Contact information can usually be found on the manufacturer's official website or through your original point of purchase. Jensales provides this manual as a reproduction of the original operator's guide.