

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HONONJO](#) /

› [Instruction Manual for HONONJO RM-PJ7 Remote Control](#)

HONONJO RM-PJ7

Instruction Manual for HONONJO RM-PJ7 Remote Control

Model: RM-PJ7

INTRODUCTION

This manual provides detailed instructions for the HONONJO RM-PJ7 replacement remote control, designed for various Sony Projector models. Please read this manual carefully before using the remote control to ensure proper operation and longevity of the device.

The RM-PJ7 remote control is a high-quality replacement unit that offers full functionality comparable to the original Sony projector remote. It features an ergonomic design for comfortable handling and intuitive button layout for ease of use.

Compatible Projector Models:

- Sony VPL-BW120S
- Sony VPL-CW255
- Sony VPL-CW275
- Sony VPL-CX235
- Sony VPL-CX275
- Sony VPL-EX100
- Sony VPL-EX120
- Sony VPL-EX145
- Sony VPL-EX175
- Sony VPL-SW125
- Sony VPL-SW525
- Sony VPL-SW525C
- Sony VPL-SW535
- Sony VPL-SW535C
- Sony VPL-SW535EBPAC
- Sony VPL-SX125

- Sony VPL-SX535
- Sony VPL-SX535EBPAC

SETUP

Battery Installation:

The RM-PJ7 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Front and back view of the RM-PJ7 remote control. The front displays various function buttons, while the back clearly shows the battery compartment with its cover. This image illustrates where to insert the batteries.

Once batteries are installed, the remote control is ready for use. No programming or pairing is typically required for this infrared (IR) remote control; simply point it at your compatible Sony projector.

OPERATING INSTRUCTIONS

The RM-PJ7 remote control provides access to various functions of your Sony projector. Below is a guide to the main buttons and their functions:

Remote Control Button Functions

Button	Function
Power (/)	Turns the projector on or off.
INPUT	Cycles through available input sources (e.g., HDMI, VGA, USB).
MENU	Opens or closes the projector's on-screen menu.
APA	Automatic Pixel Alignment (for analog PC input). Optimizes the image quality.
ECO MODE	Toggles the projector's Eco Mode, which reduces lamp brightness and power consumption, extending lamp life.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options and adjusts settings.
ENTER	Confirms selections within the menu or activates a function.
RETURN	Goes back to the previous menu screen or exits a sub-menu.
RESET	Resets certain projector settings to their default values. Use with caution.
ASPECT	Changes the aspect ratio of the projected image (e.g., 4:3, 16:9).
KEYSTONE	Adjusts the keystone distortion to correct trapezoidal images. Use the +/- buttons to adjust.
D ZOOM (+/-)	Digitally zooms in or out on the projected image.
VOLUME (+/-)	Adjusts the audio output volume of the projector.
FREEZE	Pauses the current image on the screen. Press again to unfreeze.
AUDIO MUTING	Mutes or unmutes the audio output.
PIC MUTING	Blinks the projected image (turns off the lamp temporarily) without turning off the projector. Press again to restore the image.

For detailed information on specific projector functions, please refer to your Sony projector's original user manual.

MAINTENANCE

Cleaning the Remote Control:

To maintain the remote control's appearance and functionality, follow these cleaning guidelines:

- Wipe the surface of the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote control.
- Do not use harsh chemicals, abrasive cleaners, or solvents as they may damage the remote's finish or internal components.

Battery Replacement:

Replace batteries when the remote control's range decreases significantly or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote control.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Check battery polarity (+/-). Replace with fresh AAA batteries.
Remote control range is poor.	Weak batteries; Obstruction between remote and projector; Remote sensor on projector is dirty or blocked.	Replace batteries. Ensure a clear line of sight to the projector's IR sensor. Clean the projector's IR sensor if necessary.
Specific buttons not responding.	Button malfunction; Projector not supporting the function.	Ensure your projector model supports the specific function. If other buttons work, the specific button might be faulty (rare).
Projector does not respond to any remote commands.	Projector is off or in standby; Projector's IR sensor is faulty.	Ensure the projector is powered on. Test with another compatible remote if available. Consult projector's manual for IR sensor issues.

If the problem persists after trying these solutions, please contact the seller or manufacturer for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	HONONJO
Model	RM-PJ7
Material	Plastic
Working Range	Within 26 Feet (8 Meters)
Batteries Required	2 x AAA (NOT Included)
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic
Compatible Devices	Projector

WARRANTY AND SUPPORT

This HONONJO remote control is designed for reliable performance. For specific warranty information, please refer to the terms provided by your retailer or the HONONJO manufacturer at the time of purchase. Typically, replacement remote controls come with a limited warranty against manufacturing defects.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact the seller from whom you purchased this product. Provide your order details and a clear description of the issue for prompt support.

For general inquiries or to explore other products, you may visit the [HONONJO Store on Amazon](#).

© 2024 HONONJO. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - RM-PJ7



[Solutions Audiovisuelles Professionnelles Sony pour l'Enseignement et l'Entreprise](#)

Découvrez la gamme complète de solutions audiovisuelles professionnelles Sony, incluant projecteurs, écrans BRAVIA, systèmes de collaboration et caméras d'imagerie, conçues pour l'enseignement et les entreprises. Ce guide présente les dernières technologies et spécifications.

 <p>SONY VPL-CX275 5200 lumens XGA Basic Installation projector</p> <p>Overview: Cost effective 5200 lumens 3LCD projector ideal for large classrooms and meeting rooms. It is a compact projector with a high contrast ratio of 10,000:1 and a high resolution of 1024 x 768 pixels. The projector is designed for easy installation and maintenance. It features a long lamp life of up to 8,000 hours and a high contrast ratio of 10,000:1. It also has a built-in speaker and a remote control. The projector is a great choice for large classrooms and meeting rooms.</p> <p>Search projectors Search by projector type, feature, and more.</p> <p>Energy efficient design Up to 8,000 hours lamp replacement time, 800 lumens</p>	<h3>Sony VPL-CX275 Installation Projector: Features and Specifications</h3> <p>Detailed overview of the Sony VPL-CX275 installation projector, highlighting its 5200 lumens, XGA resolution, 3LCD technology, energy efficiency, and versatile installation features. Includes technical specifications and optional accessories.</p>
 <p>SONY VPL-SW636C 3,300 lumens WXGA Ultra Short Throw Interactive projector</p> <p>Overview: Bright, high contrast reference projector for large classrooms and meeting rooms with easy installation. It features a wide range of enhanced interactivity for the classroom and office. The projector is designed for easy installation and maintenance. It has a built-in speaker and a remote control.</p> <p>Power Bright, high contrast images over 3,000 lumens for projection in a variety of environments. The projector is designed for easy installation and maintenance. It has a built-in speaker and a remote control.</p> <p>Interactivity The projector is designed for easy installation and maintenance. It has a built-in speaker and a remote control.</p> <p>Screen Bright, high contrast images over 3,000 lumens for projection in a variety of environments. The projector is designed for easy installation and maintenance. It has a built-in speaker and a remote control.</p>	<h3>Sony VPL-SW636C WXGA Ultra Short Throw Interactive Projector</h3> <p>Discover the Sony VPL-SW636C, a 3,300 lumens WXGA Ultra Short Throw interactive projector ideal for classrooms and meeting rooms. Learn about its features, specifications, and installation.</p>
 <p>RHM RM-K222(B)8(8)系列家用K歌家庭影院说明书</p> <p>Overview: The RHM RM-K222 Karaoke Home Theater System User Manual provides detailed information on the system's features, functions, and operation. It includes instructions for setup, usage, and maintenance.</p>	<h3>RHM RM-K222 Karaoke Home Theater System User Manual</h3> <p>User manual for the RHM RM-K222 Karaoke Home Theater System, detailing its features, functions, and operation.</p>
 <p>Návod k použití Robot univerzální 3 rychlosti 20 l 230 V RM 200H</p> <p>www.rmgastro.com</p> <p></p>	<h3>Návod k použití Robot univerzální 3 rychlosti 20 l 230 V RM 200H - RM Gastro</h3> <p>Kompletní návod k použití pro robot univerzální RM 200H od RM Gastro. Obsahuje technická data, instalaciční pokyny, bezpečnostní opatření, návod k obsluze a údržbě.</p>
 <p>Instruction manual Universal mixer planetary 3 speed 30 l 400 V RM 30H</p> <p>www.rmgastro.com</p> <p></p>	<h3>RM Gastro RM 30H Universal Planetary Mixer Instruction Manual</h3> <p>Comprehensive instruction manual for the RM Gastro RM 30H Universal Planetary Mixer (30L, 400V). Covers technical data, installation, operation, safety, cleaning, and maintenance for professional use.</p>