

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Premium](#) /

› [Premium Levella 2.65L Air Fryer \(PAF281\) Instruction Manual](#)

## Premium PAF281

# Premium Levella 2.65L Air Fryer (PAF281) Instruction Manual

Model: PAF281

## 1. IMPORTANT SAFETY INSTRUCTIONS

Before using your Premium Levella Air Fryer, please read all instructions carefully and retain them for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool down before handling.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm (4 inches) free space on the back and sides and 10 cm (4 inches) free space above the appliance.
- Hot air is released through the air outlet vents during operation. Keep your hands and face at a safe distance from the vents.
- Do not cover the air inlet or air outlet vents.
- Never use the appliance for any purpose other than described in this manual.

## 2. PRODUCT OVERVIEW

The Premium Levella 2.65L Air Fryer (PAF281) utilizes a rapid hot air circulating system to cook food with little to no oil, offering a healthier alternative to traditional frying. It features a touch control panel for easy operation.



Figure 1: Premium Levella 2.65L Air Fryer in use, displaying its basket with food.



Figure 2: Front view of the air fryer, showing the sleek black design and control interface.



Figure 3: Detailed view of the removable non-stick basket and crisper plate, designed for easy cleaning.

### 3. SETUP

- 1. Unpacking:** Carefully remove all packaging materials, stickers, and labels from the appliance.
- 2. Initial Cleaning:** Wash the basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Ensure all parts are completely dry before use.
- 3. Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is adequate ventilation around the unit (at least 10 cm / 4 inches clearance on all sides).
- 4. Power Connection:** Plug the power cord into a grounded wall outlet.

### 4. OPERATING INSTRUCTIONS

#### 4.1 Control Panel Overview

The air fryer features a digital touch control panel with various preset functions and manual temperature/time adjustments.

- **Power Button:** Turns the appliance on/off.
- **Menu Button:** Cycles through pre-programmed settings (e.g., Fries, Chicken, Fish, Meat, Pizza, Bake).

- **Time/Temperature Adjustment:** Use '+' and '-' buttons to increase or decrease cooking time and temperature.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.
- **Stop/Cancel Button:** Stops the current cooking program.

## 4.2 Cooking Process

1. **Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill.
2. **Select Settings:**
  - Press the Power button to turn on the display.
  - Use the Menu button to select a preset cooking program, or manually adjust the temperature and time using the '+' and '-' buttons.
3. **Start Cooking:** Press the Start/Pause button to begin. The air fryer will automatically preheat if necessary.
4. **Shaking/Flipping (Optional):** For even cooking, especially with smaller items like fries or chicken wings, it is recommended to shake or flip the food midway through the cooking cycle. The air fryer may beep to remind you.
5. **Auto-Pause Feature:** The air fryer will automatically pause when the basket is pulled out and resume when it is re-inserted.
6. **Completion:** Once the set time has elapsed, the air fryer will beep to indicate cooking is complete and automatically shut off.
7. **Remove Food:** Carefully pull out the basket and remove the cooked food using heat-resistant tongs.

## 4.3 Cooking Demonstration

Watch this short video demonstrating the air fryer's operation, including cooking a burger and using the control panel.

Your browser does not support the video tag.

Video 1: Demonstration of the Premium Levella Air Fryer's features and cooking process.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:**
  - Remove the basket and crisper plate.
  - Wash them in hot water with dish soap and a non-abrasive sponge.
  - For stubborn residue, soak the basket and plate in hot water with dish soap for about 10 minutes.
  - **Note:** The basket and crisper plate are **not dishwasher safe**. Hand washing is recommended to preserve the non-stick coating.
3. **Interior:** Wipe the interior of the appliance with a damp cloth. For heavy soil, use a mild detergent.
4. **Exterior:** Clean the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overcrowded; food not shaken.	Cook food in smaller batches. Shake the basket or flip food midway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly after each use. Remove excess fat from ingredients.
Food is not crispy.	Insufficient cooking time or temperature; too much moisture.	Increase cooking time or temperature. Pat food dry before air frying.

## 7. SPECIFICATIONS

- Brand:** Premium
- Model:** PAF281
- Capacity:** 2.65 Liters (2.8 QT)
- Power:** 1400 Watts
- Control Method:** Touch
- Special Feature:** Temperature Control
- Dimensions (DxWxH):** 10.24" x 10.24" x 4.96"
- Material:** Stainless Steel
- Non-stick Coating:** Yes
- Dishwasher Safe:** No (Basket/Crisper Plate)
- Air Frying Technology:** Rapid Hot Air Circulating System

## 8. WARRANTY AND SUPPORT

This Premium Levella Air Fryer (PAF281) comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, service, or questions regarding your appliance, please contact Premium customer service through the contact information provided in your product documentation.