

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Epson](#) /
- › [Epson WorkForce DS-70 Portable Document Scanner User Manual](#)

Epson DS-70

Epson WorkForce DS-70 Portable Document Scanner User Manual

Model: DS-70 (B11B252402)

INTRODUCTION

The Epson WorkForce DS-70 is a compact and lightweight portable document scanner designed for efficient document management on the go. This manual provides essential information for the proper setup, operation, and maintenance of your scanner, ensuring optimal performance and longevity.



Front view of the Epson WorkForce DS-70 portable document scanner.

WHAT'S IN THE BOX

Please verify that all items are present in the package:

- Epson WorkForce DS-70 Portable Document Scanner
- User Manual
- USB Cable (for power and data connection)

SETUP GUIDE

1. Software Installation

1. Before connecting the scanner, insert the provided software CD into your computer's optical drive or download the latest drivers and software (Document Capture Pro 2, Epson Scan 2.0, TWAIN driver) from the official Epson support website.
2. Follow the on-screen instructions to complete the software installation. This typically includes installing drivers and utility

applications necessary for the scanner's operation.

2. Connecting the Scanner

1. Ensure your computer is powered on and the software installation is complete.
2. Connect one end of the supplied USB cable to the USB port on the Epson WorkForce DS-70 scanner.
3. Connect the other end of the USB cable to an available USB 2.0 port on your computer. The scanner is powered via this USB connection.
4. The operating system should automatically detect the scanner and finalize the driver installation.



The Epson WorkForce DS-70 scanner connected to a laptop via USB.

OPERATING INSTRUCTIONS

1. Preparing Documents for Scanning

- Ensure documents are free from staples, paper clips, or any obstructions that could damage the scanner.
- Straighten any wrinkled or folded documents.
- The scanner supports various paper types and sizes, including standard A4 documents, receipts, and business cards.

2. Performing a Scan

1. Open the Epson Scan 2.0 or Document Capture Pro software on your computer.
2. Place the document face-up into the scanner's input slot. The scanner will automatically detect the document.
3. Adjust scanning settings within the software, such as color mode (color, grayscale, black & white), resolution (up to 600 dpi), and destination (e.g., PDF, JPEG, email).
4. Click the 'Scan' button in the software or press the scan button on the scanner itself to initiate the scanning process.
5. The scanner will feed the document through, and the scanned image will appear in the software. Scanning is fast, taking approximately 5.5 seconds per page.
6. Save the scanned document to your desired location.



The Epson WorkForce DS-70 scanner actively feeding a document.



The Epson WorkForce DS-70 scanner feeding a small card.

Gain de temps

Profitez des avantages de la numérisation instantanée, sans temps de préchauffage et numérisation rapide de 5,5 secondes par feuille

A close-up shot of a hand holding a blue credit card and sliding it into the Epson WorkForce DS-70 scanner. The scanner is white and black, with the 'EPSON' logo visible. A yellow arrow points from the 'Gain de temps' text to the scanner.

Scanning a card with the Epson WorkForce DS-70.

Cleaning the Scanner

- Regularly clean the scanner' to ensure optimal scan quality.
- Disconnect the USB cable before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild, non-abrasive cleaner to wipe the exterior of the scanner.
- For the interior, refer to the detailed cleaning instructions within the Epson Scan 2.0 or Document Capture Pro software's help section, or the full user manual.
- Do not use alcohol, paint thinner, or corrosive solvents, as these can damage the scanner's components.

TROUBLESHOOTING

Common Issues and Solutions

- **Scanner not detected:**
Ensure the USB cable is securely connected to both the scanner and the computer. Try a different USB port. Verify that the scanner drivers are correctly installed. Restart your computer.
- **Scanned image is blank or white:**
Check that the document is placed correctly, face-up, into the scanner. Ensure the scanner's optical path is clean and free from dust or debris. Reinstall the scanner software and drivers.
- **Poor scan quality (streaks, blurry images):**
Clean the scanner's interior components, especially the glass and rollers, as per the maintenance instructions. Ensure the document is flat and not wrinkled. Adjust the resolution settings in the scanning software.
- **Software issues or errors:**
Ensure your operating system is up to date. Download and install the latest version of Epson Scan 2.0 or Document Capture Pro from the Epson support website. If issues persist, consult the software's help documentation or Epson's online support.
- **Scanner not feeding documents:**
Ensure the document is properly aligned and inserted straight into the input slot. Check for any paper jams. Clean the paper feed rollers if they appear dirty or worn.

SPECIFICATIONS

Feature	Detail
Brand	Epson
Model Name	WorkForce DS-70
Model Number	B11B252402
Scanner Type	Document
Connectivity Technology	USB Hi-Speed (USB 2.0 compatible)
Optical Resolution	600 dpi
Color Depth	24 Bits
Scanning Speed	Approx. 5.5 seconds per page
Maximum Document Size	A4

Optical Sensor Technology	CIS (Contact Image Sensor)
Power Source	USB Powered
Dimensions (L x W x H)	272 x 47 x 34 mm (approx.)
Weight	0.27 kg
Operating System Compatibility	Windows 7+, MacOS 10.6+
Included Software	Document Capture Pro 2, Epson Scan 2.0, TWAIN Driver

WARRANTY AND SUPPORT

Manufacturer's Warranty

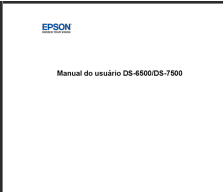
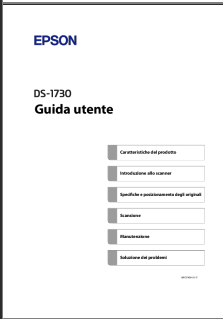
The Epson WorkForce DS-70 scanner comes with a 2-year manufacturer's warranty. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty documentation included with your product or visit the official Epson website.



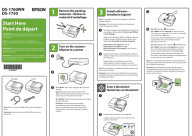
Customer Support

For further assistance, technical support, or to download the latest drivers and software, please visit the official Epson support website or contact their customer service department. Contact information can typically be found on the Epson website or in the included documentation.

© 2023 Epson Corporation. All rights reserved.

Related Documents - DS-70

	<p>Manual do Usuário Epson DS-6500/DS-7500</p> <p>Este manual do usuário fornece informações detalhadas sobre os scanners Epson DS-6500 e DS-7500, cobrindo desde as funções básicas até a solução de problemas e especificações técnicas.</p>
	<p>Epson DS-1730 User Guide</p> <p>Comprehensive user guide for the Epson DS-1730 scanner, covering product features, scanning operations, maintenance, troubleshooting, and technical specifications. Learn how to optimize scanning for various document types and ensure proper product care.</p>

	<p>EPSON L6190: Guide to Scanning from Control Panel to Computer via USB</p> <p>A comprehensive guide for EPSON L6190 users on how to scan documents directly from the printer's control panel to a computer using a USB connection on Windows 10 (64-bit).</p>
<p>EPSON DS-570W User's Guide</p>	<p>Epson DS-570W User's Guide: Setup, Operation, and Troubleshooting</p> <p>Comprehensive user guide for the Epson DS-570W scanner, covering setup, operation, scanning features, network settings, maintenance, and troubleshooting. Learn how to maximize your scanning experience with this detailed manual.</p>
	<p>Epson Scanner Troubleshooting and Maintenance Guide (ES-300W, ES-300WR, ES-200)</p> <p>Comprehensive guide for Epson ES-300W, ES-300WR, and ES-200 scanners, covering setup, Wi-Fi connection, USB recognition, software issues, roller replacement, cleaning, and troubleshooting common problems.</p>
	<p>Epson DS-1760WN and DS-1730 Scanner Quick Start Guide</p> <p>A concise guide to setting up and using the Epson DS-1760WN and DS-1730 scanners, including software installation and scanning instructions for mobile devices and computers.</p>