



Manuals.plus /

› **Beyblade** /

› TAKARA TOMY Beyblade Burst Cho-Z Valkyrie.Z.EV Attack Starter B-127 Instruction Manual

Beyblade B-127

TAKARA TOMY Beyblade Burst Cho-Z Valkyrie.Z.EV Attack Starter B-127 Instruction Manual

INTRODUCTION

Welcome to the world of Beyblade Burst! This manual provides essential information for the assembly, operation, and maintenance of your new TAKARA TOMY Beyblade Burst Cho-Z Valkyrie.Z.EV Attack Starter. Please read these instructions carefully before use to ensure proper handling and maximum enjoyment.

WHAT'S IN THE BOX

Your TAKARA TOMY Beyblade Burst Cho-Z Valkyrie.Z.EV Attack Starter package includes the following components:

- Spinning Top (Beyblade Burst Cho-Z Valkyrie.Z.EV)
- Launcher



Figure 1: The complete TAKARA TOMY Beyblade Burst Cho-Z Valkyrie.Z.EV Attack Starter set, featuring the blue and gold Beyblade alongside its grey launcher.



チョウゼツ



チョウゼツ



チョウゼツ

ゼットイブイ

超Zヴァルキリー-Z.EV

B-127 スターター

無敵モードに超Z覚醒!

チョウゼツかくせい

バーストなら無敵の神

チョウゼツかくせい

強力シュートで超Z覚醒するとバースト
されないレイヤーに致命的な動きを
するドライバーと高いバースト力がある
ディスクで相手を粉碎させる!

PARTS



チョウゼツ 超Zヴァルキリー

バーストしなくなる無敵モードを搭載!
無敵モード時、ノーダメージで相手を
攻撃できるアタックタイプ!



ゼニス

ディスク周囲に装備したラバーパーツが相手と接触
した際に高いバースト力を生み出すアタック系。



エボリューション

使い込むことによって軸先が削れて動きが変化する特性を
持ちつつ、軸先が削れても高さをキープできるアタック系。

ACTION



通常モード



バースト
ストッパー



無敵モード

強いシュートで高速回転させると
バーストストッパーがレイヤーを
ロックし、バーストしない
無敵モードに変形!

Figure 2: A close-up view of the Beyblade Burst Cho-Z Valkyrie.Z.EV disassembled into its three core components: the Energy Layer, Forge Disc, and Performance Tip (Driver), illustrating its modular design.

SAFETY INFORMATION

No specific safety warnings are provided for this product. However, general toy safety practices should always be followed:

- Recommended for ages 13-15 years.
- Keep small parts away from young children to prevent choking hazards.
- Do not aim Beyblades at people or animals.
- Use only official Beyblade Burst products together.

SETUP AND ASSEMBLY

Follow these steps to assemble your Beyblade and prepare it for launch:

1. **Assemble the Beyblade:** Ensure the Energy Layer, Forge Disc, and Performance Tip are securely connected. Align the tabs and twist until they lock into place.
2. **Attach to Launcher:** Insert the Beyblade into the launcher's slot. Twist the Beyblade clockwise until it clicks into place, indicating it is securely attached.
3. **Prepare for Launch:** Pull the ripcord through the launcher. The Beyblade is now ready for battle.

Video 1: This official video provides a quick demonstration of how to assemble the Beyblade Burst Cho-Z Valkyrie.Z.EV and attach it to the launcher, followed by a brief launch sequence.

OPERATING INSTRUCTIONS

To engage in a Beyblade Burst battle, follow these steps:

1. **Choose an Arena:** Use an official Beyblade Burst Beystadium for optimal performance and safety.
2. **Launch:** Hold the launcher firmly over the Beystadium. Pull the ripcord swiftly and powerfully to launch your Beyblade into the arena.
3. **Battle:** Your Beyblade will spin and clash with opponents. The Cho-Z Valkyrie.Z.EV is an Attack type Beyblade, designed for aggressive combat.
4. **Winning Conditions:** A Beyblade wins by knocking its opponent out of the stadium, bursting the opponent into pieces, or out-spinning the opponent.

MAINTENANCE

To ensure the longevity of your Beyblade Burst Cho-Z Valkyrie.Z.EV, consider the following maintenance tips:

- **Cleaning:** Wipe down your Beyblade and launcher with a soft, dry cloth after use to remove dust and debris. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store your Beyblade and launcher in a cool, dry place away from direct sunlight and extreme temperatures. Keep components organized to prevent loss.
- **Inspection:** Periodically inspect all parts for wear and tear. Replace any damaged components to maintain optimal performance and safety.

TROUBLESHOOTING

If you encounter any issues with your Beyblade Burst Cho-Z Valkyrie.Z.EV, refer to the following common problems and solutions:

- **Beyblade not spinning correctly:** Ensure all three parts (Energy Layer, Forge Disc, Performance Tip) are securely assembled. Check the launcher for any obstructions or damage.
- **Beyblade detaches from launcher:** Make sure the Beyblade is twisted fully into the launcher until it clicks. A loose connection can cause premature detachment.
- **Launcher ripcord gets stuck:** Gently pull the ripcord out. If it continues to stick, inspect the launcher mechanism for any foreign objects or damage.

SPECIFICATIONS

Product Dimensions	1 x 1 x 1 inches
Item Weight	5 ounces
Item Model Number	B-127
Manufacturer	Takaratomy
Manufacturer Recommended Age	13 - 15 years
UPC	4904810618485

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Takaratomy website. Keep your purchase receipt as proof of purchase.