

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Christopher Knight Home](#) /
- › [Christopher Knight Home Kama Patio Dining Table \(Model 307489\) Instruction Manual](#)

Christopher Knight Home 307489

Christopher Knight Home Kama Patio Dining Table Instruction Manual

Model: 307489

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Christopher Knight Home Kama Patio Dining Table. Please read all instructions carefully before assembly and use to ensure safe and proper handling of the product.

The Kama Patio Dining Table features a 72-inch rectangular acacia wood top with rustic iron hairpin legs, designed for both indoor and outdoor use.

SAFETY INFORMATION

No specific safety warnings apply to this product beyond general furniture safety practices. Always ensure the table is placed on a stable, level surface. Do not exceed the maximum weight recommendation of 300 pounds. Keep small children away during assembly.

PARTS LIST

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Acacia Wood Table Top (1)
- Iron Hairpin Legs (4 sets, totaling 8 individual legs)
- Assembly Hardware (Screws, Washers, Allen Wrench - included)



Image: All components of the Christopher Knight Home Kama Patio Dining Table, including the acacia wood top and four sets of hairpin legs.

SETUP AND ASSEMBLY

Assembly is required for this dining table. It is recommended that two people assemble this product. All necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Attach Hairpin Legs:** Position the acacia wood table top upside down. Align each set of hairpin legs with the pre-drilled holes on the underside of the table top.
3. **Secure Legs:** Using the provided screws and Allen wrench, securely fasten each hairpin leg set to the table top. Ensure all screws are tightened evenly. Do not overtighten.
4. **Upright the Table:** With assistance, carefully turn the assembled table upright and place it in its desired location.
5. **Final Check:** Verify that the table is stable and all connections are secure before use.



Image: The fully assembled Kama Patio Dining Table shown in an outdoor patio environment, demonstrating its intended use.

OPERATING INSTRUCTIONS

The Christopher Knight Home Kama Patio Dining Table is designed for versatile use, suitable for both indoor and outdoor environments. Its broad surface (72" L x 36" W) can comfortably accommodate up to 6 people for dining or other activities.

- **Placement:** Place the table on a flat, stable surface to prevent wobbling.
- **Weight Capacity:** Do not place items exceeding the maximum weight recommendation of 300 pounds on the table.
- **Environmental Use:** While designed for outdoor use, prolonged exposure to extreme weather conditions (heavy rain, direct scorching sun, snow) may affect the wood finish over time. Consider using a protective cover when not in use outdoors for extended periods.

MAINTENANCE

Proper care will extend the life and preserve the appearance of your dining table.

- **Cleaning:** Wipe the table surface with a clean cloth and mild soap. Avoid harsh chemicals or abrasive cleaners, which can damage the wood finish.
- **Spills:** The surface is non-porous and treated to resist spills. Wipe spills immediately to prevent staining.
- **Wood Care:** Periodically inspect the wood for dryness or fading. Depending on exposure to elements, you may consider applying a wood sealant or oil suitable for acacia wood to maintain its finish and weather resistance.
- **Legs:** The rustic metal hairpin legs require minimal maintenance. Wipe clean with a damp cloth as needed.



Image: A detailed view of the table's acacia wood surface and the connection point of the hairpin legs, highlighting the material and finish.

TROUBLESHOOTING

If you encounter issues with your dining table, refer to the following common solutions:

- **Table Wobbles:**
 - Ensure the table is on a level surface.
 - Check that all leg attachment screws are securely tightened.

- Adjust the levelers on the bottom of the hairpin legs if present.

- **Scratches on Wood Surface:**

- Minor scratches can sometimes be buffed out with fine-grit sandpaper and re-oiled, or treated with a wood repair kit. Consult a professional for significant damage.

- **Fading Wood Finish:**

- If used outdoors, apply a suitable outdoor wood sealant or oil to restore and protect the finish.

SPECIFICATIONS

Brand	Christopher Knight Home
Model Number	307489
Product Dimensions	72"W x 36"D x 29"H
Item Weight	57.3 Pounds
Maximum Weight Recommendation	300 Pounds
Material Type	Acacia Wood (Top), Iron (Legs)
Color	Teak Finish + Rustic Metal
Seating Capacity	6
Indoor/Outdoor Usage	Indoor, Outdoor
Assembly Required	Yes (Tools included)
Recommended Number of People for Assembly	2



Image: A diagram illustrating the dimensions of the Kama Patio Dining Table: 72 inches long, 36 inches deep, and 29 inches high.

WARRANTY AND SUPPORT

For warranty information or customer support regarding your Christopher Knight Home Kama Patio Dining Table, please refer to the documentation included with your purchase or visit the official Christopher Knight Home website. Contact details for support are typically provided by the retailer or manufacturer.

You can visit the Christopher Knight Home store on Amazon for more information: [Christopher Knight Home Store](#)

