

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jensales](#) /

› [Jensales Hough D-90C Pay Dozer Parts Manual](#)

Jensales D-90C

Jensales Hough D-90C Pay Dozer Parts Manual

Model: D-90C

INTRODUCTION

This manual is specifically designed to provide comprehensive parts information for the Hough D-90C Pay Dozer. It contains detailed illustrations, exploded views, and part numbers necessary for identifying and ordering replacement components. This resource is essential for proper maintenance, repair, and restoration of your equipment, ensuring correct part identification and assembly.

MAJOR SECTION INDEX

The manual is organized into major sections to facilitate easy navigation and part identification. Each section covers a specific system or component group of the Hough D-90C Pay Dozer.

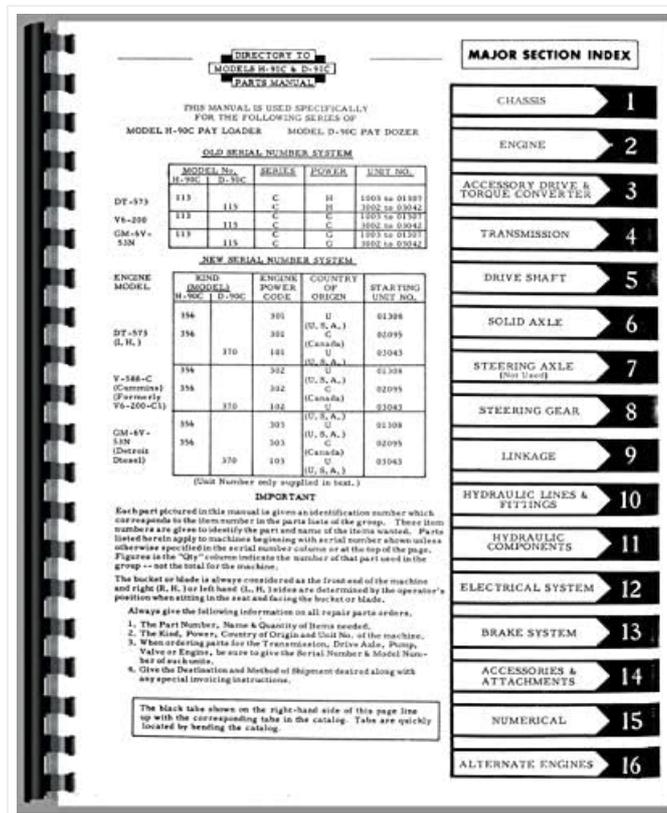


Image: This page displays the major section index, which includes categories such as Chassis, Engine, Accessory Drive & Torque Converter, Transmission, Drive Shaft, Solid Axle, Steering Axle, Steering Gear, Linkage, Hydraulic Lines & Fittings, Hydraulic Components, Electrical System, Brake System, Accessories & Attachments, Numerical, and Alternate Engines. It also provides important notes regarding part identification based on serial numbers and machine configuration.

Key sections include:

- **Chassis:** Covers the main frame and structural components.
- **Engine:** Details all engine components and related systems.
- **Accessory Drive & Torque Converter:** Information on power transmission components.
- **Transmission:** Diagrams and part numbers for the transmission assembly.
- **Drive Shaft:** Components related to power transfer.
- **Solid Axle:** Parts for the axle assembly.
- **Steering Axle & Steering Gear:** Components for the steering system.
- **Linkage:** Details on control linkages.
- **Hydraulic Lines & Fittings / Hydraulic Components:** All parts of the hydraulic system.
- **Electrical System:** Wiring, sensors, and electrical components.
- **Brake System:** Components for the braking mechanism.
- **Accessories & Attachments:** Parts for various add-ons and implements.
- **Numerical:** A numerical listing of parts.
- **Alternate Engines:** Information on different engine configurations.

Important Note: Each part pictured in this manual is given an identification number which corresponds to the item number in the parts lists of the group. These item numbers are for identification purposes only and should not be used when ordering. Always give the following information when ordering parts: Part Number, Name & Quantity of Units, Kind, Power, Country of Origin and Unit No. of the machine, and the Model and Serial Number of the machine. Always give the Destination and Method of Shipment desired along with any special invoicing instructions.

For quick reference, an alphabetical index is provided, listing various parts and components along with their corresponding page numbers within the manual.

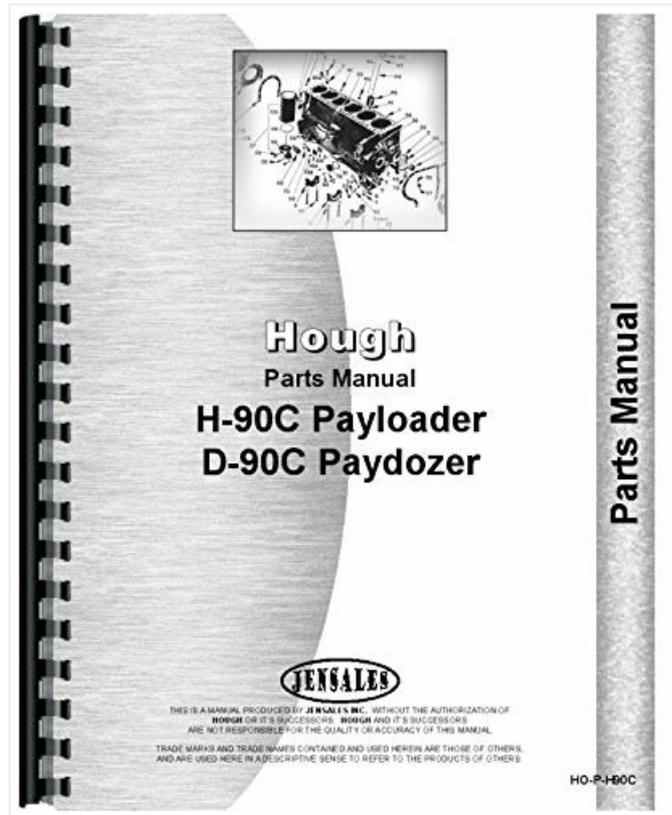


Image: This page shows an alphabetical index, providing a list of parts and their respective page numbers for easy lookup. Examples include Heater, Horn, Housing, Hydraulic Oil Filter, Linkage, and various other components.

This index allows users to quickly locate specific parts or systems without needing to browse through the entire manual sequentially.

CHASSIS - BOOM & BUCKET (LOADER) EXAMPLE

This section provides an example of the detailed diagrams found within the manual, specifically for the chassis components related to the boom and bucket of the loader.

