

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AgfaPhoto](#) /

› [AGFA Photo Realishot DC5200 Compact Camera User Manual](#)

AgfaPhoto DC5200

AGFA Photo Realishot DC5200 Compact Camera User Manual

Model: DC5200

INTRODUCTION

Welcome to your new AGFA Photo Realishot DC5200 digital camera. This manual provides detailed instructions for setting up, operating, and maintaining your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using your camera.

WHAT'S INCLUDED

The package for your AGFA Photo Realishot DC5200 camera typically includes the following items:

- AGFA Photo Realishot DC5200 Camera
- USB Cable
- User Manual (this document)
- Lithium Battery

CAMERA OVERVIEW

Familiarize yourself with the main components of your camera.



Figure 1: Front view of the AGFA Photo Realishot DC5200 camera, showing the lens, flash, and brand logo.

EMBRACE VERSATILITY



- Photo & video
- Self-timer
- CMOS sensor
- Photo 21MP

Figure 2: Back view of the camera, highlighting the 2.4-inch LCD screen and control buttons.



Figure 3: Side view of the camera, illustrating the USB port for charging and data transfer, and the power button.

SETUP

1. Battery Installation and Charging

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert the provided lithium battery, ensuring the correct polarity as indicated inside the compartment.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the supplied USB cable to charge the battery. The charging indicator light will illuminate.
5. Charging is complete when the indicator light turns off or changes color (refer to camera display for specific indication).

2. SD Card Installation

The camera supports SD cards up to 32 GB (not included).

1. Locate the SD card slot, usually near the battery compartment.
2. Insert the SD card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently push the SD card until it pops out.

OPERATING THE CAMERA

1. Powering On/Off

Press and hold the **Power** button (refer to Figure 3) to turn the camera on or off.

2. Taking Photos

1. Turn on the camera. The LCD screen will display the live view.

2. Use the **Mode** button to select your desired shooting mode (e.g., Auto, Scene Modes).
3. To zoom in or out, use the zoom controls, typically labeled 'W' (Wide) and 'T' (Telephoto). The camera features 8x digital zoom.
4. Press the shutter button halfway down to focus. Once focused, press it fully to capture the photo.



Figure 4: Example of 8x digital zoom capability, allowing closer shots of subjects.

Scene Modes and Special Features:

- **Scene Modes:** Select from various scene modes like Car, Landscape, Portrait, Night, Night Portrait, High Light Sensitivity, and Beach to optimize settings for different environments.
- **Flash Modes:** Adjust flash settings (Auto, Force, Off, Red-eye Reduction) as needed.
- **Self-Timer:** Use the self-timer (2s/5s/10s) for delayed shots.
- **Image Stabilization:** The camera features digital image stabilization to reduce blur.



Figure 5: Various scene modes available on the camera, including Night, Auto, and Beach modes.

3. Recording Videos

1. Switch the camera to video recording mode using the **Mode** button.
2. Press the shutter button to start recording. The camera records in 720p HD resolution.
3. Press the shutter button again to stop recording.

4. Playback Mode

To view your captured photos and videos:

1. Enter playback mode using the designated button (often labeled with a play icon or 'Playback').
2. Use the directional buttons to navigate through your media files.
3. Press the **Set** or **OK** button to view a selected item.

5. Connecting to a Computer

To transfer photos and videos to a computer:

1. Ensure the camera is turned off.
2. Connect the camera to your computer using the supplied USB cable.
3. Turn on the camera. It should appear as a removable disk or device on your computer.
4. Drag and drop files from the camera's storage to your computer.

MAINTENANCE

Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Do not spray cleaning solution directly onto the camera. Apply it to the cloth first.

Storage

- When not in use for extended periods, remove the battery.
- Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.
- Protect the camera from dust and moisture.

TROUBLESHOOTING

Problem	Solution
Camera does not turn on.	Ensure the battery is fully charged and correctly inserted. Try charging the battery for at least 2 hours.
Photos are blurry.	Hold the camera steady when taking pictures. Ensure there is adequate lighting. Check if the lens is clean.
"Card Error" message appears.	Reinsert the SD card. Try formatting the SD card (this will erase all data). Use a different SD card if the problem persists. Ensure the card is not locked.
Cannot transfer files to computer.	Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port or cable. Make sure the camera is turned on after connecting.

TECHNICAL SPECIFICATIONS

Feature	Specification
Photo Sensor Resolution	21 Megapixels
Video Resolution	720p HD
Digital Zoom	8x
Screen Size	2.4 Inches TFT LCD
Image Stabilization	Yes
Battery Type	Lithium Battery
Storage Media	SD Card (up to 32 GB)
Connectivity	USB
Flash Modes	Auto, Force, Off, Red-eye Reduction
Self Timer	2s/5s/10s
Weight	3.14 Ounces

WARRANTY AND SUPPORT

Your AGFA Photo Realishot DC5200 camera comes with a standard manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included

in your product packaging or visit the official AgfaPhoto website.

For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact AgfaPhoto customer service through their official channels. Contact information can typically be found on the product packaging or the official brand website.

© 2026 AgfaPhoto. All rights reserved.