

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YING RAY](#) /

› [YING RAY HA-L-2018 Replacement Remote Control for Kelvinator Air Conditioners Instruction Manual](#)

YING RAY HA-L-2018

YING RAY HA-L-2018 Replacement Remote Control Instruction Manual

Model: HA-L-2018

INTRODUCTION

This manual provides instructions for the YING RAY HA-L-2018 replacement remote control, designed for use with various Kelvinator air conditioner models. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan.

PRODUCT OVERVIEW

The YING RAY HA-L-2018 remote control features a clear LCD display and intuitive buttons for managing your air conditioner's functions.

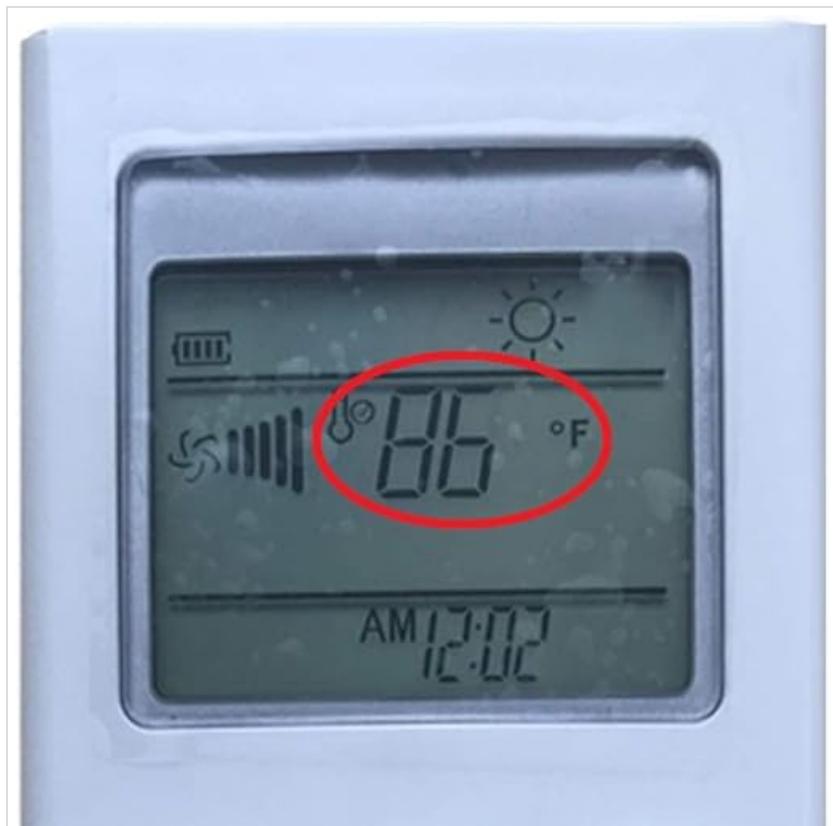




Image 1: Front view of the YING RAY HA-L-2018 remote control, showing the LCD screen and all function buttons.

Key buttons include:

- **ON/OFF:** Powers the air conditioner on or off.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **TEMP ▲/▼:** Adjusts the temperature setting.
- **FAN SPEED:** Changes the fan speed.
- **SWING:** Activates or deactivates the air swing function.
- **TIMER ON/OFF:** Sets a timer for the unit to turn on or off.
- **LIGHT:** Controls the display light on some AC units.

- **JET COOL:** Activates rapid cooling.
- **°C/°F [5SEC]:** Press and hold for 5 seconds to switch between Celsius and Fahrenheit display.
- **E/SAVING:** Energy saving mode.
- **A/CLEAN:** Auto clean function.
- **SLEEP:** Activates sleep mode.
- **SET/CLEAR [3SEC]:** Used for timer settings.

SETUP

Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover.

Tips for Battery Used:



There are two kinds of battery types in USA & CANADA market.

"A" and "B"

"A" is a little longer than "B" in battery positive pole as picture showing.
Sometimes type "B" may have poor contact with positive pole spring,
If this remote control doesn't work with your air conditioner, please
pull the positive pole spring out a little as following picture showing
(For type "B")



Image 2: Diagram illustrating two types of AAA batteries ("A" and "B") with differing positive pole lengths. Type "A" has a longer positive pole than Type "B".

Important Note on Battery Types: There are variations in AAA battery positive pole lengths. If the remote

does not power on after battery installation, it may be due to poor contact with the positive pole spring, especially with Type "B" batteries (shorter positive pole). In such cases, gently pull out the positive pole spring in the remote's battery compartment slightly to ensure better contact.



Image 3: A three-panel image demonstrating how to gently pull out the positive pole spring in the battery compartment using a small tool to improve contact for Type "B" batteries.

OPERATING INSTRUCTIONS

Power On/Off

Press the **ON/OFF** button to turn the air conditioner on or off.

Temperature Adjustment

Use the **TEMP ▲** button to increase the temperature and the **TEMP ▼** button to decrease it.

Mode Selection

Press the **MODE** button repeatedly to cycle through available operating modes such as Cool, Heat, Fan, Dry, or Auto, depending on your air conditioner's features.

Fan Speed

Press the **FAN SPEED** button to adjust the fan's intensity (e.g., Low, Medium, High, Auto).

Swing Function

Press the **SWING** button to activate or deactivate the automatic air swing feature, which helps distribute air evenly.

Timer Function

To set a timer for the air conditioner to turn on or off, use the **TIMER ON** or **TIMER OFF** buttons. Follow the on-screen prompts and use the **TEMP ▲/▼** buttons to adjust the time. Press and hold **SET/CLEAR**

[3SEC] to confirm or cancel the timer.

Light Function

Press the **LIGHT** button to control the display light on your air conditioner unit, if applicable.

Jet Cool Function

Press the **JET COOL** button for rapid cooling. This mode typically operates at the lowest temperature and highest fan speed for a set period.

Fahrenheit/Celsius Display

To switch the temperature display between Fahrenheit (°F) and Celsius (°C), press and hold the **°C/°F** [5SEC] button for approximately 5 seconds.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control's display becomes dim or if the remote becomes unresponsive. Always replace both batteries simultaneously with new AAA batteries. Refer to the "Battery Installation" section for proper procedure.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-).
- **Replace Batteries:** If the batteries are old or depleted, replace them with fresh AAA batteries.
- **Battery Contact:** If the remote still does not respond, refer to the "Important Note on Battery Types" in the Setup section and adjust the positive pole spring if necessary (see Image 3).
- **Line of Sight:** Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- **Remote Compatibility:** Verify that your air conditioner model is compatible with the YING RAY HA-L-2018 remote control.

SPECIFICATIONS

- **Model:** HA-L-2018
- **Compatible Devices:** Air Conditioner
- **Max Number of Supported Devices:** 1
- **Special Feature:** Ergonomic design
- **Power Source:** 2 x AAA Batteries (not included)
- **Display:** LCD with Fahrenheit and Celsius options

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact the seller or manufacturer

directly through your purchase platform.

For further assistance, you may refer to the product listing on [Amazon.com](#).

© 2024 YING RAY. All rights reserved.