

SilverCrest SRR3.7

SilverCrest SRR3.7 Rotary Shaver User Manual

1. INTRODUCTION AND SAFETY WARNINGS

Thank you for choosing the SilverCrest SRR3.7 Rotary Shaver. This manual provides important information regarding the safe operation, maintenance, and care of your device. Please read these instructions carefully before first use and keep them for future reference.

Important Safety Warnings:

- This device is only suitable for **dry shaving**. Do not use it with shaving foam, gel, or in wet conditions.
- Avoid using the shaver in or near water to prevent electric shock.
- Regularly clean the device to prevent the build-up of bacteria and ensure hygienic use.
- Keep the device out of reach of children.
- Do not attempt to repair the device yourself. Contact qualified service personnel for any repairs.
- Ensure the charging adapter is compatible with your local power supply.

2. PACKAGE CONTENTS

Carefully unpack all items and check for completeness. The package should contain the following:

- SilverCrest SRR3.7 Rotary Shaver
- Protective Cap for shaver head
- Cleaning Brush
- Charging Adapter
- Travel Pouch



Figure 2.1: The image displays the SilverCrest SRR3.7 Rotary Shaver along with its accessories: a charging adapter, a small cleaning brush, a protective cap for the shaver head, and a black travel pouch.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your SilverCrest SRR3.7 Rotary Shaver:

- **Rotary Shaving Head:** Features three flexible rotary blades for a close shave.
- **Integrated Pop-up Trimmer:** For precise trimming of sideburns or longer hairs.
- **Power Button:** To turn the shaver on and off.
- **Charging Indicator:** Shows the battery status.
- **Ergonomic Handle:** Designed for comfortable grip.





Figure 3.1: This image shows a detailed view of the SilverCrest SRR3.7 Rotary Shaver, emphasizing its rotary shaving head with three cutting elements and the pop-up trimmer extended on the side of the shaver body.

4. SETUP AND INITIAL CHARGING

4.1 Initial Charging

Before using your shaver for the first time, it is recommended to fully charge the battery. The shaver operates on a built-in rechargeable Lithium-ion battery and can be used cordlessly or directly from the mains power supply.

1. Ensure the shaver is turned off.
2. Connect the charging adapter to the shaver's charging port.
3. Plug the adapter into a suitable electrical outlet.
4. The charging indicator light will illuminate, indicating that the shaver is charging.
5. Allow the shaver to charge completely. Refer to the specifications for typical charging time.
6. Once fully charged, disconnect the adapter from the shaver and the power outlet.

5. OPERATING INSTRUCTIONS

5.1 Dry Shaving

The SilverCrest SRR3.7 is designed for dry shaving only. For best results, shave before washing your face.

1. Press the power button to turn on the shaver.
2. Hold the shaver at a right angle (90 degrees) to your skin.
3. Gently stretch your skin with your free hand to make the hairs stand upright.
4. Move the shaver in small, circular motions over your face and neck. Do not press too hard.
5. Continue shaving until all desired areas are smooth.
6. Press the power button again to turn off the shaver.

5.2 Using the Pop-up Trimmer

The integrated trimmer is ideal for shaping sideburns, mustaches, or for pre-trimming longer hairs.

1. Turn on the shaver.
2. Slide the trimmer release button (usually located on the back or side of the shaver) upwards to engage the pop-up trimmer.
3. Hold the trimmer perpendicular to the skin and carefully trim the desired areas.
4. Once finished, push the trimmer back into its housing until it clicks into place.



Figure 5.1: This image shows a man using the SilverCrest SRR3.7 Rotary Shaver on his neck, illustrating the correct way to hold the shaver for effective dry shaving.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your shaver. Always ensure the shaver is turned off and unplugged before cleaning.

6.1 Daily Cleaning

1. After each use, turn off the shaver and remove the protective cap.

- 2. Gently tap the shaving head to dislodge loose hair clippings.
- 3. Use the provided cleaning brush to brush away any remaining hair from the shaving head and the hair chamber.
- 4. Replace the protective cap.

6.2 Deep Cleaning (Weekly/Bi-weekly)

- 1. Turn off the shaver and remove the shaving head assembly. Consult your shaver's specific instructions for how to detach the head.
- 2. Carefully clean the inner and outer cutters with the cleaning brush.
- 3. Do not use water or liquid cleaning agents, as the shaver is for dry use only.
- 4. Reassemble the shaving head, ensuring it clicks securely into place.

6.3 Storage

Store the shaver in a cool, dry place, away from direct sunlight and moisture. Always use the protective cap to prevent damage to the shaving head.

7. TROUBLESHOOTING

If you encounter issues with your SilverCrest SRR3.7 Rotary Shaver, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is discharged.	Charge the shaver fully.
Shaver does not turn on.	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Poor shaving performance.	Shaving head is dirty or clogged with hair.	Clean the shaving head thoroughly as per maintenance instructions.
Poor shaving performance.	Blades are worn.	Consider replacing the shaving head (if replacement parts are available).
Shaver not charging.	Charging adapter not properly connected or faulty.	Check all connections. Try a different power outlet.

8. SPECIFICATIONS

Feature	Detail
Model Name	SRR3.7
Brand	SilverCrest
Item Number	SRR3.7

Feature	Detail
ASIN	B07JDZKPPZ
Power Source	Battery-powered (Mains operation also possible)
Battery Type	1 Lithium-ion (Built-in rechargeable)
Head Type	Rotary
Blade Material	Stainless Steel
Special Feature	Rotary Head, Integrated Trimmer
Recommended Uses	Armpit, Back Hair, Beard, Face
Color	Black
Package Dimensions	19 x 12 x 8 cm; 500 g

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your purchase or contact the retailer or manufacturer directly. Keep your proof of purchase for any warranty claims.

