



[Manuals.plus](#) /

› [Accutime](#) /

› Accutime JRW4026 Quartz Digital Watch User Manual

Accutime JRW4026

Accutime JRW4026 Quartz Digital Watch User Manual

Model: JRW4026

INTRODUCTION

Thank you for choosing the Accutime JRW4026 Quartz Digital Watch. This manual provides essential information for setting up, operating, and maintaining your watch. Designed for young Jurassic World fans, this watch features a digital LCD display and durable construction.



Image 1: Front view of the Accutime JRW4026 Quartz Digital Watch, showcasing the T-Rex face and digital time display.

SETUP

Setting the Time

Your Accutime JRW4026 watch features a digital LCD display. To set the time, follow these general steps. Specific button functions may vary slightly, but most digital watches follow a similar pattern:

1. **Locate the Buttons:** Typically, there are two or three buttons on the side of the watch. One is usually for 'Mode' or 'Set', and others for 'Adjust' or 'Light'.
2. **Enter Time Setting Mode:** Press the 'Mode' or 'Set' button repeatedly until the time display (hours or minutes) begins to flash.
3. **Adjust Hours/Minutes:** Use the 'Adjust' or 'Light' button to change the flashing digit. Pressing it once will increment the number. Hold it down to scroll faster.
4. **Move to Next Setting:** Press the 'Mode' or 'Set' button again to move to the next setting (e.g., from hours to minutes, then to AM/PM, date, etc.).
5. **Exit Setting Mode:** Once all settings are adjusted, press the 'Mode' or 'Set' button one last time, or wait a few seconds for the watch to automatically exit the setting mode.

Refer to the specific button labels on your watch for precise operation.

OPERATING INSTRUCTIONS

Reading the Time

The time is displayed clearly on the digital LCD screen. The format is typically HH:MM (Hour:Minute), often with an AM/PM indicator for 12-hour format.

Using Additional Functions (if applicable)

Depending on the model, your watch may have additional functions accessible via the 'Mode' button:

- **Date Display:** Press the 'Mode' button once or twice to cycle through to the date display (Month-Day).
- **Stopwatch:** Some models include a stopwatch function. Enter stopwatch mode, use one button to start/stop, and another to reset.
- **Backlight:** A dedicated button (often labeled 'Light') or a long press of another button may activate a backlight for viewing in low-light conditions.



Image 2: The Accutime JRW4026 watch displayed on a wrist, showing its fit and digital time display.

MAINTENANCE

General Care

- **Cleaning:** Wipe the watch case and band with a soft, dry cloth. For silicone bands, a slightly damp cloth can be used, then dry thoroughly. Avoid harsh chemicals.
- **Water Resistance:** This watch is generally splash-resistant but not waterproof. Avoid submerging it in water, showering, or swimming while wearing it.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for extended periods, as this can affect battery life and display function.
- **Impact:** While durable, avoid dropping the watch or subjecting it to strong impacts to prevent damage to the internal components or display.

Battery Replacement

The watch is powered by 1 product-specific battery (included). When the display dims or stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and function. Attempting to replace the battery yourself may void any implied warranty or cause damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery.
Time is incorrect.	Time was not set correctly or buttons were accidentally pressed.	Reset the time following the "Setting the Time" instructions.
Buttons are unresponsive.	Internal malfunction or battery issue.	Ensure battery is fresh. If problem persists, contact support.

SPECIFICATIONS

- **Model Number:** JRW4026
- **Brand:** Accutime
- **Display Type:** Digital LCD
- **Movement:** Quartz
- **Case Material:** Plastic
- **Band Material:** Silicone
- **Power Source:** 1 Product Specific Battery (included)
- **Recommended Age:** 6 years and up
- **Package Dimensions:** 3.2 x 3.2 x 3.1 inches
- **Item Weight:** 0.8 ounces
- **First Available Date:** December 14, 2018

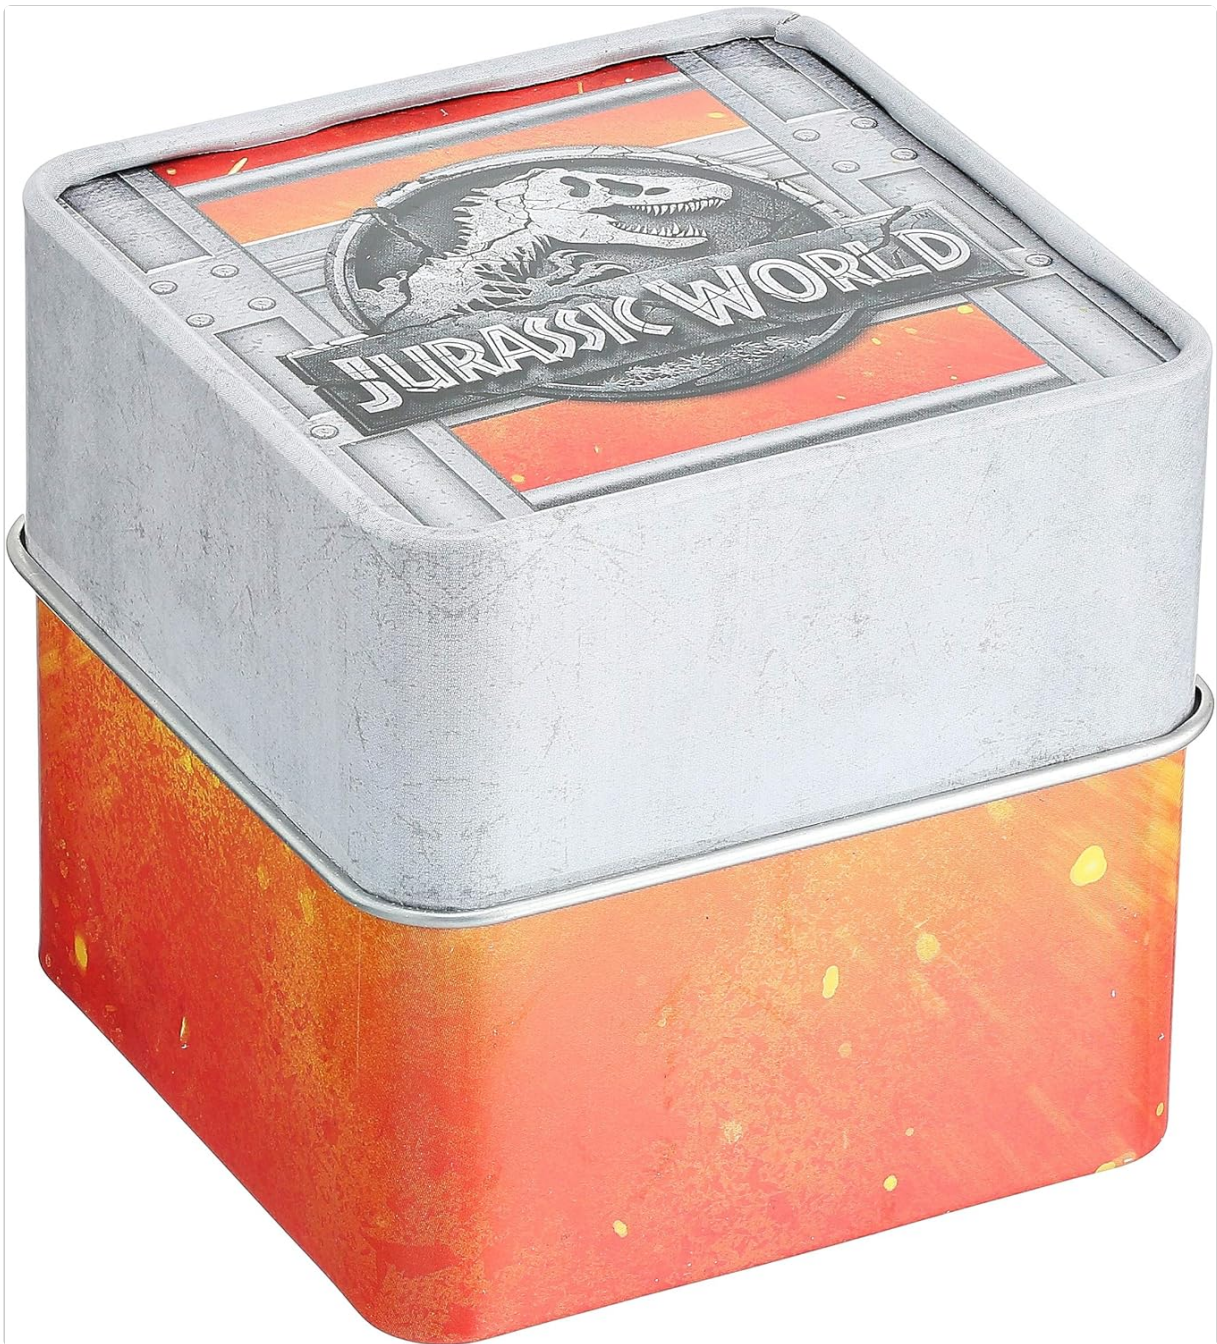


Image 3: The packaging box for the Accutime JRW4026 watch, featuring Jurassic World branding.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Accutime JRW4026 Quartz Digital Watch, please refer to the documentation included with your purchase or contact Accutime customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.