

MODECOM MC-Drifter 70

MODECOM Speaker System 2.1 Volcano MC-Drifter 70 User Manual

Model: MC-Drifter 70 | Brand: MODECOM

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your MODECOM Speaker System 2.1 Volcano MC-Drifter 70. Please read this manual thoroughly before using the product to ensure optimal performance and safety. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Subwoofer unit
- 2 x Satellite speakers
- 1 x Audio input cable (3.5mm jack)
- 1 x Power cable
- 1 x User Manual (this document)



Image 1: MODECOM Speaker System 2.1 Volcano MC-Drifter 70. This image displays the main subwoofer unit and two satellite speakers, illustrating the complete system.

3. SETUP INSTRUCTIONS

Follow these steps to set up your speaker system:

1. **Positioning Speakers:** Place the subwoofer on the floor, preferably near a wall for enhanced bass. Position the two satellite speakers on either side of your listening area, facing towards you.
2. **Connecting Satellite Speakers:** Connect the cables from the satellite speakers to the corresponding output ports on the rear of the subwoofer. Ensure a secure connection.
3. **Connecting to Audio Source:** Connect one end of the provided 3.5mm audio input cable to the "AUDIO IN" port on the subwoofer. Connect the other end to the audio output jack (e.g., headphone jack) of your computer, smartphone, or other audio device.
4. **Power Connection:** Insert the power cable into the power input port on the subwoofer. Plug the other end of the power cable into a standard electrical outlet.

4. OPERATING INSTRUCTIONS

Once the system is set up, follow these steps for operation:

1. **Power On/Off:** Locate the power switch, usually on the rear or front panel of the subwoofer. Flip the switch to the "ON" position to power on the system. Flip it to "OFF" to power down.
2. **Volume Control:** Use the main volume knob, typically located on the front panel of the subwoofer or one of the satellite speakers, to adjust the overall sound level.
3. **Bass Control:** If available, use the "BASS" or "SUBWOOFER" control knob to adjust the intensity of the bass output from the subwoofer.
4. **Audio Playback:** Start playing audio from your connected source device. Adjust the volume on both the source device and the speaker system for desired sound levels.

5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your speaker system:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the surfaces of the speakers and subwoofer. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the finish or internal components.
- **Storage:** If storing the system for an extended period, disconnect all cables and store it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure that the subwoofer and speakers have adequate ventilation. Do not block any ventilation openings.

6. TROUBLESHOOTING

If you encounter issues with your speaker system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound	System not powered on. Volume too low. Audio cable disconnected or faulty. Incorrect audio source selected on device.	Ensure power switch is "ON". Increase volume on speakers and source device. Check all audio connections; try a different cable. Verify audio output settings on your source device.
Distorted sound	Volume too high. Poor audio source quality. Cables not fully inserted.	Reduce volume on speakers and source device. Try a different audio source or file. Ensure all cables are securely connected.
Subwoofer not working	Bass level set too low. Subwoofer cable disconnected.	Increase the bass control knob. Check the subwoofer's connection to the main unit.

If the problem persists after trying these solutions, please contact MODECOM customer support.

7. SPECIFICATIONS

Key technical specifications for the MODECOM Speaker System 2.1 Volcano MC-Drifter 70:

- **Brand:** MODECOM
- **Model Number:** G-Q-MHF70-DRIFTER70
- **Product Type:** 2.1 Speaker System
- **Mounting Type:** Table Mount
- **Package Dimensions:** 30 x 25 x 10 cm
- **Product Weight:** 800 g
- **ASIN:** B07JFMMTGH

8. SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Do not open the speaker enclosures. There are no user-serviceable parts inside.
- Keep the system away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.