

CATIGA CD-8185

CATIGA Desktop Calculator CD-8185 Instruction Manual

Model: CD-8185 | Brand: CATIGA

1. INTRODUCTION AND OVERVIEW

The CATIGA CD-8185 Desktop Calculator is designed for convenient and comfortable everyday use in various settings, including home, office, school, and business. It features an 8-digit display, large responsive buttons, and dual power sources for reliable operation.

Key features include:

- **Easy-to-Use Design:** Large, tilted, and angled LCD display for clear visibility.
- **Large Responsive Buttons:** Spacious button size to minimize input errors and provide a satisfying tactile feel.
- **Robust Build:** Constructed with a sturdy and premium plastic body for durability.
- **Versatile Functions:** Supports basic arithmetic operations (add, subtract, multiply, divide), percent calculations, grand total, and a Clear Entry (CE) button.
- **Dual Power Sources:** Operates on both solar power and an included LR44 battery, ensuring functionality in any lit environment.



Image: Front view of the CATIGA CD-8185 Desktop Calculator, highlighting its clear 8-digit display and well-spaced, large pink and white buttons.

2. SETUP

The CATIGA CD-8185 calculator is designed for immediate use with minimal setup required.

2.1 Powering On

This calculator utilizes a dual power system, combining solar power with a pre-installed LR44 battery. This ensures continuous operation in various lighting conditions.

- **Solar Power:** The calculator will automatically draw power from ambient light when sufficient illumination is available.
- **Battery Power:** An LR44 battery is included and pre-installed. This battery provides power when light levels are insufficient for solar operation.

To turn on the calculator, press the **ON/C** button. The display should illuminate, showing '0'.



Image: Close-up of the CATIGA CD-8185 calculator's upper right section, illustrating the solar panel and indicating the presence of a pre-installed battery for its dual power system.

3. OPERATING INSTRUCTIONS

The CATIGA CD-8185 calculator provides essential functions for everyday calculations.

3.1 Basic Operations

- **Addition (+):** Enter the first number, press **+**, enter the second number, then press **=**.
- **Subtraction (-):** Enter the first number, press **-**, enter the second number, then press **=**.
- **Multiplication (×):** Enter the first number, press **×**, enter the second number, then press **=**.
- **Division (÷):** Enter the first number, press **÷**, enter the second number, then press **=**.
- **Percentage (%):** Enter the number, press **%**. For percentage of a number (e.g., 10% of 200), enter 200, press **×**, enter 10, press **%**.
- **Grand Total (GT):** After a series of calculations, press **GT** to display the cumulative total of all results.
- **Clear Entry (CE):** Clears the last entered number or calculation, allowing correction without clearing the entire operation.
- **All Clear (ON/C):** Pressing **ON/C** once clears the current entry. Pressing it twice clears all entries and resets the calculator to '0'.

3.2 Display and Buttons


The calculator features a large, easy-to-read 8-digit LCD display. The buttons are designed to be large and responsive, reducing the chance of incorrect inputs during rapid calculations.

LARGE

EASY TO READ

DISPLAY

UP TO 8 DIGITS

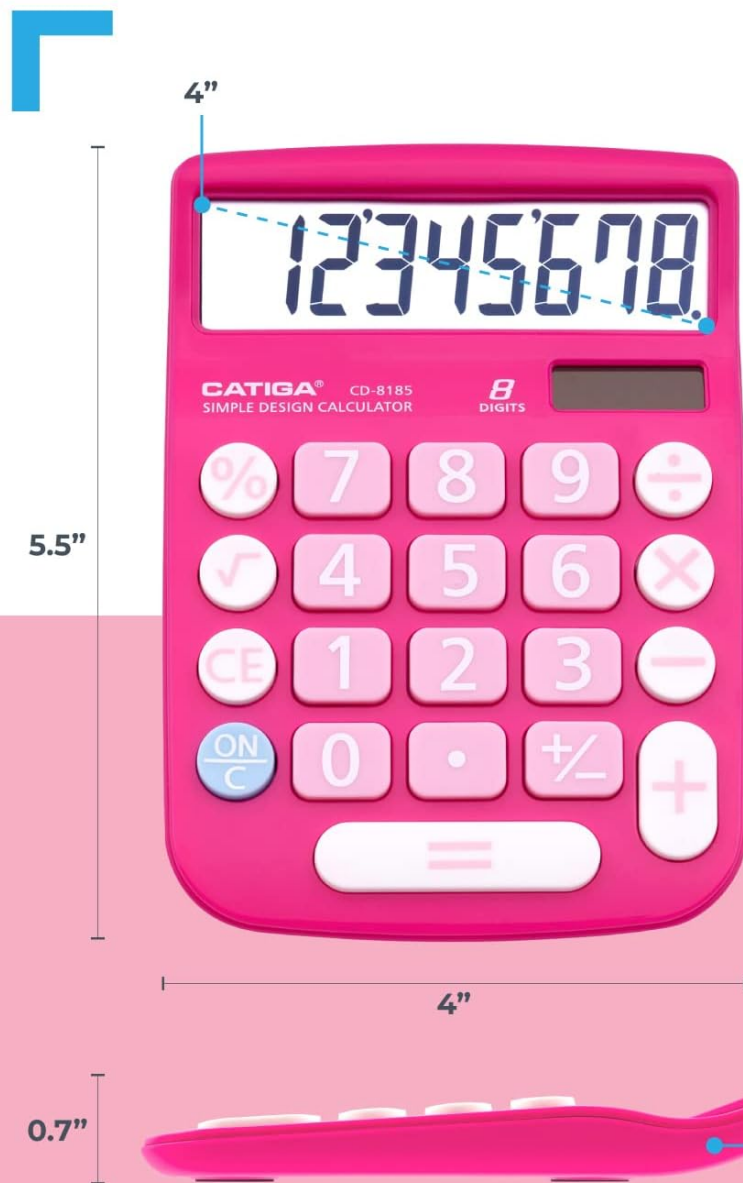

**ERGONOMIC
ANGLE DESIGN**

Easier Viewing
For Better User
Experience

Image: The CATIGA CD-8185 calculator shown with its approximate dimensions: 5.5 inches in height, 4 inches in width, and 0.7 inches in thickness, emphasizing its compact and ergonomic design.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your CATIGA CD-8185 calculator.

4.1 Cleaning

- To clean the calculator, gently wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the display or the plastic casing.

4.2 Storage

- Store the calculator in a cool, dry place away from direct sunlight and extreme temperatures.

- Avoid dropping the calculator or subjecting it to strong impacts, as its robust plastic body is designed for everyday use but not extreme conditions.



Image: The back of the CATIGA CD-8185 calculator, displaying its two anti-slip rubber pads for stability during use, and emphasizing the large, responsive keypad from a user-friendly design perspective.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your CATIGA CD-8185 calculator.

5.1 Calculator Turns Off Automatically

- **Issue:** The calculator turns itself off unexpectedly.
- **Solution:** This is a normal power-saving feature. The calculator is designed to automatically turn off after approximately 6 minutes of inactivity to conserve battery life. Simply press the **ON/C** button to reactivate it.

5.2 Display is Blank or Faint

- **Issue:** The display is blank or the numbers are difficult to read.
- **Solution:** Ensure the calculator is exposed to sufficient light for solar power. If the issue persists, the pre-installed LR44 battery may need replacement. Refer to the specifications for battery type.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	6 x 4.25 x 0.75 inches
Item Weight	5 ounces
ASIN	B07JFS1GY1
Item Model Number	5582679104
Batteries	1 LR44 battery required (included)
Screen Size	3.5 Inches (visible diagonal)
Power Source	Solar Powered (with battery backup)
Color	Pink
Manufacturer	Jeoly / Catiga Electronic Co. Ltd
Date First Available	October 15, 2018

7. WARRANTY AND SUPPORT

CATIGA is committed to providing excellent customer service and support for its products.

7.1 Return Policy

This product is backed by a 30-day unconditional return guarantee, allowing for a refund or replacement within 30 days of purchase.

7.2 Customer Support

For any inquiries or assistance, CATIGA offers comprehensive customer support:

- **24/7 Customer Support:** General assistance available around the clock.
- **Lifetime Phone Support:** Dedicated phone support is available from 9 AM to 5 PM PST for the lifetime of the product.

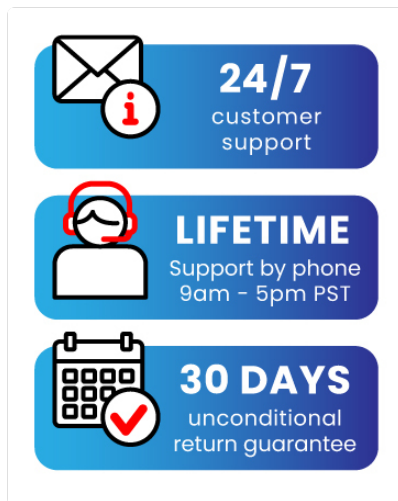


Image: A visual representation of CATIGA's customer support offerings, including 24/7 support, lifetime phone support (9am-5pm PST), and a 30-day unconditional return guarantee.

© 2024 CATIGA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question