

[manuals.plus](#) /› [MEDION](#) /› [MEDION Boombox E65711 User Manual - CD/MP3 Player with FM Radio and USB](#)

MEDION E65711

MEDION Boombox E65711 User Manual

Model: E65711

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your MEDION Boombox E65711. Please read it thoroughly before using the device and retain it for future reference.

The MEDION Boombox E65711 is a versatile portable audio system featuring a CD/MP3 player, FM radio, AUX input, and USB playback capabilities. It can be powered by mains electricity or batteries, offering flexibility for both indoor and outdoor use.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter or batteries. Ensure the voltage matches the device requirements.
- **Ventilation:** Do not block ventilation openings. Maintain adequate space around the device for proper airflow.
- **Water and Moisture:** Keep the device away from water, rain, and high humidity. Do not operate with wet hands.
- **Heat:** Avoid placing the device near heat sources such as radiators, stoves, or other heat-producing appliances.
- **Cleaning:** Disconnect from power before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- MEDION Boombox E65711
- Power Cable
- User Manual
- Warranty Card

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your boombox.



Image 4.1: Front view of the MEDION Boombox E65711, highlighting the central display, volume knob, function buttons, and USB input.

Controls and Ports:

- **Power Button:** Turns the device on or off.
- **Function/Mode Button:** Switches between CD, FM Radio, USB, and AUX modes.
- **Volume Knob:** Adjusts the audio output level.
- **Play/Pause Button:** Controls playback for CD and USB.
- **Stop Button:** Stops playback.
- **Skip/Search Buttons (◀◀▶▶):** Skips tracks on CD/USB or tunes radio frequencies.
- **Program/Repeat Button:** Used for programming CD/MP3 tracks or repeating playback.
- **USB Port:** For connecting USB storage devices for MP3 playback.
- **AUX Input (3.5mm):** For connecting external audio sources.
- **Headphone Jack (3.5mm):** For private listening.
- **FM Antenna:** Extend for optimal radio reception.

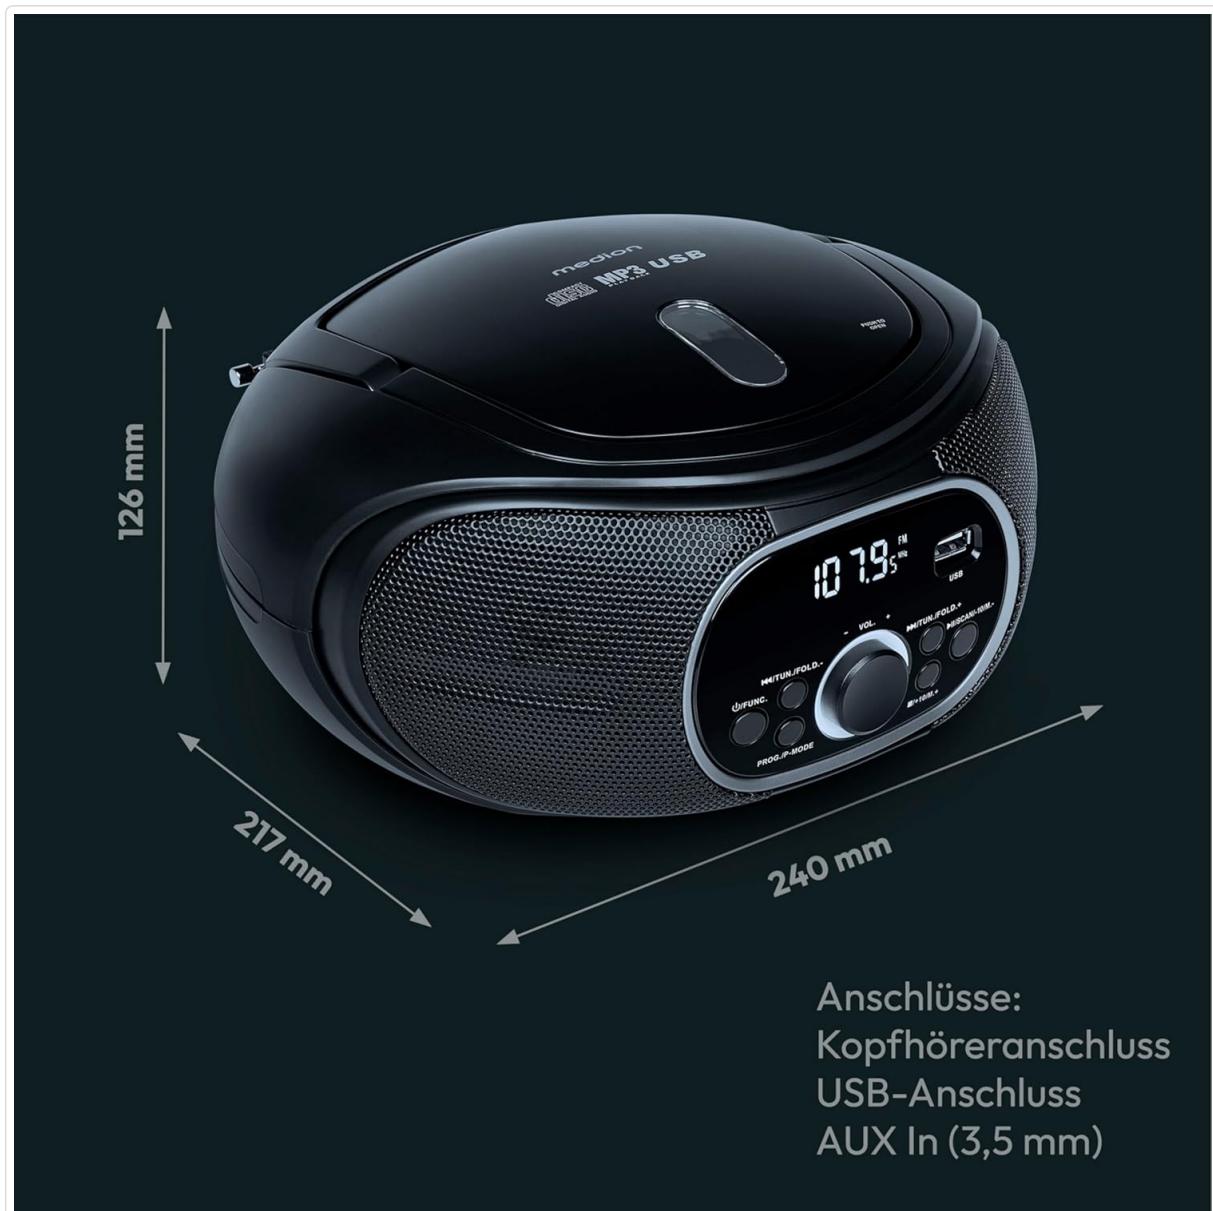


Image 4.2: Side view illustrating the dimensions and various connection ports including headphone, USB, and AUX input.

5. SETUP

5.1 Power Supply

The boombox can be powered by either mains electricity or batteries.

Mains Operation:

1. Ensure the boombox is switched off.
2. Connect the power cable to the AC IN socket on the back of the boombox.
3. Plug the other end of the power cable into a standard wall outlet.

Battery Operation:

This device requires 6 x C-size batteries (not included).

1. Ensure the boombox is switched off and disconnected from mains power.
2. Open the battery compartment cover located on the bottom or back of the unit.
3. Insert 6 C-size batteries, observing the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

1. **Power On/Off:** Press the Power button to turn the unit on or off.
2. **Select Mode:** Press the Function/Mode button repeatedly to cycle through available modes: CD, FM Radio, USB, AUX.
3. **Adjust Volume:** Rotate the Volume knob to increase or decrease the sound level.

6.2 CD Playback



Image 6.1: The top-loading CD compartment, ready for disc insertion.

1. Press the Function/Mode button to select CD mode.
2. Open the CD compartment cover.
3. Place a CD (CD, CD-R, CD-RW, or MP3-CD) onto the spindle with the label side facing up.
4. Close the CD compartment cover. The boombox will begin reading the disc.
5. Press the Play/Pause button to start or pause playback.
6. Use the Skip/Search buttons (◀◀/▶▶) to navigate between tracks. Press and hold to fast forward or rewind.

7. Press the Stop button to end playback.
8. **Programming Tracks:** While in Stop mode, press the Program button. Select desired tracks using Skip/Search buttons and press Program again to confirm each track. Press Play to start programmed playback.

6.3 FM Radio Operation



Image 6.2: The boombox with its telescopic antenna extended for improved FM reception.

1. Extend the telescopic FM antenna for better reception.
2. Press the Function/Mode button to select FM Radio mode.
3. **Automatic Station Search:** Press and hold the Scan button (often combined with Skip/Search) to automatically scan and store available FM stations. The boombox can store up to 30 stations.
4. **Manual Tuning:** Briefly press the Skip/Search buttons ($\blacktriangleleft\blacktriangleright$) to manually tune to desired frequencies.
5. **Recall Presets:** Use the Preset buttons (if available, or Skip/Search after auto-scan) to cycle through stored stations.

6.4 USB Playback

MP3-Wiedergabe vom USB-Stick

Lieblingslieder rund um die Uhr



Image 6.3: Detail of the USB port, used for playing MP3 files from a USB stick.

1. Insert a USB storage device containing MP3 music files into the USB port.
2. Press the Function/Mode button to select USB mode. The boombox will automatically detect and begin playing MP3 files.
3. Use the Play/Pause, Stop, and Skip/Search buttons as you would for CD playback to control your music.

6.5 AUX Input

The AUX input allows you to connect external audio devices (e.g., MP3 players, smartphones) to the boombox.

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the boombox.
2. Connect the other end of the cable to the headphone jack or audio output of your external device.
3. Press the Function/Mode button to select AUX mode.
4. Control playback and volume from your external device. The boombox's volume control will also affect the output.

6.6 Headphone Use

For private listening, connect standard 3.5mm headphones (not included) to the Headphone Jack. When

headphones are connected, sound will be muted from the boombox's speakers.

7. MAINTENANCE

- **Cleaning:** Wipe the exterior of the boombox with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If CD playback issues occur, use a specialized CD lens cleaner disc to clean the laser lens.
- **Battery Replacement:** If using batteries, replace all batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the unit will not be used for an extended period.
- **Storage:** Store the boombox in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Batteries depleted or incorrectly inserted.	Check power cable connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Wrong mode selected; Headphones connected.	Increase volume; Select correct mode (CD, FM, USB, AUX); Disconnect headphones.
CD skips or does not play	CD dirty or scratched; CD inserted incorrectly; Lens dirty.	Clean or replace CD; Insert CD correctly; Use a CD lens cleaner.
Poor FM reception	Antenna not extended; Weak signal.	Fully extend the FM antenna; Reposition the boombox for better reception.
USB not playing	USB device not inserted correctly; Incompatible file format; USB device corrupted.	Reinsert USB device; Ensure files are MP3 format; Try a different USB device.

9. SPECIFICATIONS

- **Model:** E65711
- **Brand:** MEDION
- **Color:** Black
- **Product Type:** Boombox
- **Supported Media:** CD, CD-R, CD-RW, MP3-CD, USB (MP3)
- **Radio:** PLL-UKW Stereo FM Radio with 30 station presets
- **Display:** Negative LCD
- **Connections:** AUX Input (3.5mm), USB 2.0 Port, Headphone Jack (3.5mm)
- **Output Power:** 2 x 12 W Max. Music Output (2 x 1.2 W RMS)
- **Power Source:** AC 230V ~ 50Hz or 6 x 1.5V C-size batteries (not included)
- **Dimensions (L x W x H):** 21.7 cm x 24 cm x 12.6 cm

- **Manufacturer:** MEDION

10. WARRANTY AND SUPPORT

Your MEDION Boombox E65711 comes with a warranty. Please refer to the included warranty card for detailed terms and conditions, including the warranty period and coverage.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact MEDION customer service. Contact information can typically be found on the warranty card or the official MEDION website.

© 2025 MEDION. All rights reserved.