

Manuals.plus /

› [Escape](#) /

› [Escape Platinum SPBT924 Bluetooth Stereo Speaker User Manual](#)

## Escape SPBT924

# Escape Platinum SPBT924 Bluetooth Stereo Speaker User Manual

Model: SPBT924 | Brand: Escape

[Contents](#) [Controls](#) [Setup](#) [Product Overview](#) [Package](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

## 1. PRODUCT OVERVIEW

The Escape Platinum SPBT924 is a versatile Bluetooth stereo speaker designed for portable audio playback. It features Bluetooth 4.3 connectivity for wireless streaming, an integrated FM radio, and supports music playback from Micro SD cards and USB drives. The speaker includes a built-in microphone for hands-free calling and is powered by a rechargeable 1200mAh lithium battery, offering up to 10 hours of talk time.



This image displays the Escape Platinum SPBT924 Bluetooth Stereo Speaker, a black rectangular device, within its retail packaging. The packaging highlights features such as 'Stereo Wireless Speaker with Radio', 'Microphone', and 'MP3 Player'.

## 2. PACKAGE CONTENTS

---

Please check the package for the following items:

- Escape Platinum SPBT924 Bluetooth Stereo Speaker
- USB Charging Cable
- User Manual (this document)

## 3. CONTROLS AND INDICATORS

---

The speaker features intuitive controls for easy operation. While specific button labels are not visible in the provided image, typical controls for this type of device include:

- **Power Button:** To turn the speaker on or off.
- **Mode Button:** To switch between Bluetooth, FM Radio, Micro SD, and USB modes.
- **Volume Up/Next Track Button:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track Button:** Short press for volume down, long press for previous track.
- **Play/Pause/Call Button:** To play/pause music, answer/end calls, or initiate Bluetooth pairing.
- **Micro SD Card Slot:** For inserting a Micro SD card with MP3 audio files.
- **USB Port:** For connecting a USB drive with MP3 audio files.
- **Charging Port:** For connecting the USB charging cable.
- **LED Indicator:** Displays power status, charging status, and Bluetooth pairing status.

## 4. SETUP

---

### 4.1 Charging the Speaker

1. Connect the supplied USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate to show that the speaker is charging.
4. Once fully charged, the LED indicator will change color or turn off, depending on the model. A full charge typically takes 2-3 hours.

### 4.2 Powering On/Off

- To power on: Press and hold the Power button for approximately 3 seconds. An audible prompt or LED indicator will confirm power-on.
- To power off: Press and hold the Power button for approximately 3 seconds. An audible prompt or LED indicator will confirm power-off.

### 4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode button to switch to Bluetooth mode. The LED indicator will flash, indicating it's ready for pairing.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "SPBT924" from the list of found devices.
4. Once paired, the speaker will emit an audible confirmation, and the LED indicator will stop flashing and remain solid.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

## 5. OPERATION

---

### 5.1 Bluetooth Mode

After successful pairing, you can stream audio wirelessly from your device to the speaker. Use your device's controls or the speaker's volume/track buttons to manage playback.

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.
- **Volume Adjustment:** Short press the Volume Up or Volume Down buttons.

### 5.2 FM Radio Mode

1. Press the Mode button repeatedly until you hear the FM radio.
2. For best reception, ensure the speaker is placed in an open area. Some models may require the charging cable to be connected as an antenna.
3. **Auto-Scan:** Long press the Play/Pause button to automatically scan and save available FM stations.
4. **Change Station:** Short press the Volume Up or Volume Down buttons to switch between saved stations.

### 5.3 Micro SD / USB Playback

1. Insert a Micro SD card or USB drive containing MP3 audio files into the respective slot/port.
2. The speaker should automatically switch to Micro SD or USB mode and begin playing music. If not, press the Mode button to select the correct source.
3. Use the Play/Pause, Volume Up, and Volume Down buttons to control playback as described in Bluetooth mode.

### 5.4 Hands-Free Calling

- When connected via Bluetooth to a smartphone, incoming calls will be routed through the speaker.
- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.
- **Redial Last Number:** Double-press the Play/Pause button.

## 6. MAINTENANCE

---

- Keep the speaker away from water, moisture, and extreme temperatures.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping or subjecting the speaker to strong impacts.
- When not in use for extended periods, charge the battery at least once every three months to prolong its lifespan.

## 7. TROUBLESHOOTING

---

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the USB charging cable and try again.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"> <li>• Ensure the speaker is in Bluetooth pairing mode (LED flashing).</li> <li>• Make sure Bluetooth is enabled on your device.</li> <li>• Move the speaker closer to your device (within 10 meters).</li> <li>• Forget "SPBT924" from your device's Bluetooth list and try pairing again.</li> <li>• Restart both the speaker and your device.</li> </ul>
No sound from speaker.	<ul style="list-style-type: none"> <li>• Increase the volume on both the speaker and your connected device.</li> <li>• Ensure the speaker is correctly paired or the correct input mode (Micro SD, USB, FM) is selected.</li> <li>• Check if the audio source is playing.</li> </ul>
Poor FM radio reception.	<ul style="list-style-type: none"> <li>• Relocate the speaker to an area with better signal.</li> <li>• Ensure the charging cable is connected, as it may act as an antenna for some models.</li> <li>• Perform an auto-scan for stations again.</li> </ul>
Micro SD/USB not playing.	<ul style="list-style-type: none"> <li>• Ensure the files are in MP3 format.</li> <li>• Check if the card/drive is inserted correctly.</li> <li>• Try a different Micro SD card or USB drive.</li> <li>• Ensure the speaker is in the correct mode.</li> </ul>

## 8. SPECIFICATIONS

Model Number	SPBT924
Bluetooth Version	4.3
Operating Range	Up to 30 feet (10 meters)
Speaker Output Power	3W x 2 (6W total)
Frequency Response	100 - 20000Hz
Sensitivity	90dB
Battery Type	Rechargeable 1200mAh Lithium Battery
Talk Time	Up to 10 hours
Standby Time	Up to 180 hours
FM Radio Frequency	88-108MHZ
Supported Audio Formats (Micro SD/USB)	MP3
Dimensions (Approx.)	19.5 x 8 x 6.5 cm
Weight (Approx.)	440 g

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for warranty claims.

