

[Manuals.plus](#) /

> [Albrecht](#) /

> Albrecht DR790CD Digital Radio with CD Player and Bluetooth User Manual

Albrecht DR790CD

Albrecht DR790CD Digital Radio with CD Player and Bluetooth User Manual

Model: DR790CD

1. INTRODUCTION

Thank you for choosing the Albrecht DR790CD Digital Radio. This multifunctional device combines modern DAB+ and FM radio reception with a classic CD player, Bluetooth connectivity, and USB/Aux-in options, all housed in an elegant dark brown wooden casing. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and longevity.



Image 1.1: Front view of the Albrecht DR790CD Digital Radio, showcasing its display, control buttons, and CD slot.

2. SAFETY INFORMATION

Please read these safety instructions carefully before using the device. Keep this manual for future reference.

- **Power Source:** Only use the provided power adapter. Ensure the voltage matches the requirements specified on the device.
- **Ventilation:** Do not block any ventilation openings. Allow sufficient space around the device for proper airflow.
- **Water and Moisture:** Do not expose the device to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the device.
- **Heat Sources:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the device from the power outlet before cleaning. Use a dry, soft cloth only. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Laser Safety:** This product contains a Class 1 laser. Do not open the CD compartment while a disc is spinning.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact your retailer.

- Albrecht DR790CD Digital Radio Unit
- Remote Control
- FM Wire Antenna
- Aux-in Cable
- Power Adapter
- User Manual (this document)
- AA Batteries for Remote Control (2x)



Image 3.1: The Albrecht DR790CD unit shown with its remote control, various connection cables, and the user manual.

4. PRODUCT OVERVIEW

4.1 Front Panel Controls

- **Power/Volume Knob:** Turn to adjust volume, press to power on/off.
- **Mode Button:** Switches between DAB+, FM, CD, Bluetooth, USB, and Aux-in modes.
- **Menu Button:** Accesses menu options for the current mode.
- **Previous/Next Buttons:** Navigates tracks, stations, or menu options.
- **Play/Pause/OK Button:** Controls playback, confirms selections.
- **Scan Button:** Initiates station scanning in radio modes.
- **Preset Button:** Accesses and saves preset stations.
- **Eject Button:** Ejects a CD from the CD slot.

- **Tune Knob:** Fine-tunes radio frequencies or navigates lists.
- **Display Screen:** Shows current mode, time, station information, track details, etc.

4.2 Rear Panel Connections



Image 4.1: Rear view of the Albrecht DR790CD, showing the power switch, AC input, USB port, Aux-in jack, headphone jack, and FM antenna connection.

- **ON/OFF Switch:** Main power switch for the unit.
- **AC IN:** Power input for the AC adapter.
- **USB Port (5V=1A):** For connecting USB storage devices for MP3 playback.
- **AUX IN:** 3.5mm stereo jack for connecting external audio sources.
- **Headphone Jack:** 3.5mm stereo jack for private listening.
- **FM ANT (75 ohm):** Connection for the supplied FM wire antenna.

4.3 Remote Control



Image 4.2: Close-up view of the remote control for the Albrecht DR790CD, showing its various buttons for power, mode, volume, playback, and numeric input.

The remote control provides convenient access to all functions of the DR790CD. Refer to the remote control diagram in the quick start guide for a detailed button layout.

5. SETUP

5.1 Power Connection

1. Ensure the ON/OFF switch on the rear panel is in the OFF position.
2. Connect the supplied power adapter to the AC IN port on the rear of the unit.
3. Plug the power adapter into a suitable wall outlet.

5.2 Antenna Connection

For optimal radio reception, connect the supplied FM wire antenna to the FM ANT (75 ohm) port on the rear panel. Extend the wire fully and position it for best signal reception.

5.3 Remote Control Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

5.4 Initial Power On

1. Flip the ON/OFF switch on the rear panel to the ON position.
2. Press the Power/Volume knob on the front panel or the Power button on the remote control to turn on the unit.
3. The unit will typically start in the last used mode or initiate a DAB+ scan upon first use.

6. OPERATING INSTRUCTIONS

6.1 Radio Operation (DAB+/FM)

1. Press the **Mode** button to select DAB+ or FM radio.
2. In DAB+ mode, press **Scan** to perform a full scan for available stations. The unit will automatically store found stations.
3. In FM mode, press **Scan** to auto-scan and stop at the next strong station, or use the **Tune** knob to manually tune.
4. Use the **Previous/Next** buttons to navigate through available stations.
5. **Saving Presets:** To save a station, press and hold the **Preset** button. Use the **Previous/Next** buttons to select a preset number, then press **OK** to confirm.
6. **Recalling Presets:** Press the **Preset** button briefly, then use the **Previous/Next** buttons to select the desired preset, and press **OK**.

6.2 CD Player Operation

1. Press the **Mode** button to select CD mode.
2. Gently insert a CD into the CD slot with the label side facing up. The unit will automatically load the disc and begin playback.
3. Use the **Play/Pause** button to pause or resume playback.
4. Use the **Previous/Next** buttons to skip tracks. Press and hold to fast forward/rewind.
5. Press the **Eject** button to remove the CD.

6.3 Bluetooth Operation

1. Press the **Mode** button to select Bluetooth mode. The display will show "Bluetooth" and the unit will enter pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), search for available Bluetooth devices.
3. Select "Albrecht DR790CD" from the list to pair. Once connected, you will hear a confirmation sound.
4. You can now play audio from your device through the DR790CD. Use the unit's controls or your device's controls for playback.

6.4 USB Playback

1. Insert a USB flash drive (formatted as FAT32) containing MP3 audio files into the USB port on the rear panel.
2. Press the **Mode** button to select USB mode. The unit will automatically detect and begin playing MP3 files.
3. Use the **Previous/Next** buttons to navigate through tracks.

6.5 Auxiliary Input (AUX IN)

1. Connect an external audio device (e.g., MP3 player, smartphone) to the AUX IN jack on the rear panel using the supplied 3.5mm audio cable.
2. Press the **Mode** button to select AUX IN mode.
3. Play audio from your connected external device. The volume can be controlled via the DR790CD or the external device.

6.6 Sound Settings (Equalizer)

The DR790CD features an equalizer to customize the sound output. Press the **Menu** button, then navigate to the Sound

or Equalizer settings. You can choose from preset equalizer modes (e.g., Classic, Pop, Rock, Jazz, Voice) or adjust bass and treble manually to suit your preference.

6.7 Alarm and Sleep Timer

The unit includes alarm and sleep timer functions. Access these settings via the **Menu** button. You can set an alarm to wake up to radio or a melody, and configure the sleep timer to automatically turn off the radio after a set period (e.g., 15, 30, 60 minutes).

7. MAINTENANCE

7.1 Cleaning

- Always unplug the device from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc.

7.2 Storage

If you plan to store the unit for an extended period, unplug it from the power outlet and remove batteries from the remote control. Store it in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; ON/OFF switch is OFF; Power outlet faulty.	Check power cable connection; Ensure ON/OFF switch is ON; Try a different power outlet.
No sound	Volume too low; Mute activated; Incorrect mode selected; Headphones connected.	Increase volume; Check if mute is active; Select correct mode (DAB+, FM, CD, etc.); Disconnect headphones.
Poor radio reception	Antenna not connected or poorly positioned; Weak signal area.	Connect and fully extend the FM antenna; Reposition the antenna; Try moving the unit to a different location.
CD not playing	CD inserted incorrectly; Disc is dirty or scratched; Disc format not supported.	Re-insert CD with label side up; Clean the disc; Ensure it's an audio CD or MP3 CD.
Bluetooth pairing failed	Unit not in pairing mode; Device too far; Bluetooth disabled on external device.	Ensure unit is in Bluetooth mode; Move devices closer; Enable Bluetooth on your external device.
Remote control not working	Batteries low or inserted incorrectly; Obstruction between remote and unit.	Replace batteries, check polarity; Remove any obstructions; Ensure you are within range.

9. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model Name	Albrecht DR790CD
Brand	Albrecht
Color	Brown/Black
Connectivity Technology	Auxiliary, Bluetooth, USB
Special Features	DAB+/FM/Bluetooth/CD/USB, Excellent sound with 2 x 15W speakers in wooden casing, Digital Radio DAB+ with CD player
Supported Audio Formats	CD, MP3
Connector Type	Mini USB
Item Weight	1.38 Kilograms
Media Format Type	CD-R
Power Source	AC Power (via adapter)
Speaker Output	2 x 15W

10. WARRANTY INFORMATION

This Albrecht DR790CD product comes with a warranty covering parts availability for 2 years from the date of purchase. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

11. SUPPORT

For further assistance, technical support, or warranty inquiries, please contact your retailer or the official Albrecht customer service. Refer to the contact information provided with your purchase or visit the Albrecht official website for support resources.

Online Resources: For the latest updates, FAQs, and additional support, please visit the official Albrecht website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07JH547Y3>

More documents and user manuals: **<https://manuals.plus/>**