

Caso Design 12778

Caso Design Inox 2 Two-Slice Toaster

MODEL: 12778 - INSTRUCTION MANUAL

Introduction

Thank you for choosing the Caso Design Inox 2 Two-Slice Toaster. This manual provides important information regarding the safe operation, use, and maintenance of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, press the CANCEL button, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- Do not attempt to dislodge food when the toaster is plugged in.
- Bread may burn. Therefore, toasters must not be used near or below curtains and other combustible materials. They must be attended when in use.

Product Overview

Familiarize yourself with the components of your Caso Design Inox 2 Toaster.

- **Toasting Slots:** Two extra-long (5.5 inches) and wide (1.5 inches) slots for various bread types and bagels.
- **Control Panel:** Tilted panel with LED display for browning levels and function buttons.
- **Browning Level Buttons:** Up and down arrows to select desired browning from 1 to 6.
- **Function Buttons:** Defrost, Bagel, Reheat, and Cancel.
- **Toast Lever:** Lowers and raises bread into the toasting slots.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning.
- **Wire Warming Basket Attachment:** For heating croissants, muffins, and rolls.



Angled view of the Caso Design Inox 2 Toaster, showing the stainless steel finish, control panel, and toast lever.



Front view of the Caso Design Inox 2 Toaster, highlighting the control panel with its buttons and LED display.



Top view of the Caso Design Inox 2 Toaster, showing the two extra-long toasting slots and the toast lever.



Close-up of the toast lever and the cancel button located on the side of the toaster.

Setup

1. **Unpack:** Carefully remove the toaster and all accessories from the packaging. Remove any protective films or stickers.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from curtains, walls, or other flammable materials. Ensure adequate ventilation around the toaster.
3. **First Use:** Before toasting food for the first time, operate the toaster empty for a few cycles at the highest browning setting (level 6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Ensure the area is well-ventilated.

Operating Instructions

Basic Toasting

1. Plug the toaster into a suitable electrical outlet.
2. Place one or two slices of bread, bagels, or other items into the toasting slots. Ensure items are centered for even toasting.
3. Use the **Up** and **Down** arrow buttons on the control panel to select your desired browning level from 1 (lightest) to 6 (darkest). The selected level will be shown on the LED display.
4. Press the toast lever down until it locks into place. The toasting cycle will begin.
5. Once the selected browning level is reached, the toast will automatically pop up.



The toaster with two slices of bread inserted into the extra-long slots, ready for toasting.



The toaster accommodating two halves of bagels in its wide slots.



Close-up of the control panel, showing the LED display indicating browning level '6' and the function buttons.

Special Functions

- **DEFROST (*):** Use this function for toasting frozen bread. Insert the frozen item, select your desired browning level, and press the DEFROST button before lowering the toast lever. The toaster will automatically adjust the toasting time.
- **BAGEL ():** This function is ideal for bagels, toasting the cut side while gently warming the crust side. Insert the bagel halves with the cut side facing inwards, select your desired browning level, and press the BAGEL button before lowering the toast lever.
- **REHEAT (SSS):** To warm up already toasted bread without further browning, use the REHEAT function. Insert the bread, press the REHEAT button, and then lower the toast lever.
- **CANCEL (▲):** To stop the toasting cycle at any time, press the CANCEL button. The toast will immediately pop up.

Using the Wire Warming Basket Attachment

The removable wire warming basket is designed for heating larger items like croissants, muffins, or rolls that cannot fit into the toasting slots.

1. Place the warming basket securely on top of the toaster, ensuring it sits evenly over the toasting slots.
2. Place the items you wish to warm on the basket.
3. Set the browning level to a low setting (e.g., 1 or 2) and lower the toast lever to activate the heating elements.
4. Monitor the items closely to prevent burning. The warming cycle is typically shorter than toasting.
5. Once warmed, lift the toast lever to stop the heating and carefully remove the items from the basket.



The removable wire warming basket attachment, designed for heating larger baked goods.



A round loaf of bread placed on the warming basket, demonstrating its use for larger items.

Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Empty Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting it.



The removable crumb tray partially pulled out from the bottom of the toaster for easy cleaning.

- Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, a mild detergent can be used, but ensure no liquid enters the toasting slots. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- Internal Cleaning:** Never insert utensils or fingers into the toasting slots. If food becomes lodged, unplug the toaster and carefully invert it to shake out the food.

Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; toast lever not fully depressed.	Ensure the toaster is securely plugged into a working outlet. Press the toast lever down until it locks.
Uneven toasting.	Food not centered in slots; inconsistent bread thickness.	Ensure bread is centered. Adjust browning level if necessary.
Food stuck in toaster.	Oversized food item.	Unplug the toaster and carefully remove the food using non-metallic tongs. Never use metal utensils.
Smoke coming from toaster.	Crumbs accumulated; food burning.	Press CANCEL, unplug, and allow to cool. Clean the crumb tray. If food is burning, reduce browning level.

Specifications

- Brand:** Caso Design
- Model:** 12778

- **Color:** Stainless
- **Material:** Metal, Plastic
- **Wattage:** 800 watts
- **Number of Browning Settings:** 6
- **Product Dimensions:** 10.04 x 11.22 x 8.07 inches
- **Item Weight:** 5.04 pounds

Warranty and Support

For warranty information, technical support, or customer service inquiries, please refer to the warranty card included with your product or visit the official Caso Design website. Do not attempt to repair the appliance yourself.

You can also visit the Caso Design Store for more information: [Caso Design Store](#)