

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WOFI](#) /

› [WOFI Valley Ceiling Light User Manual](#)

WOFI 9970.01.06.8100

WOFI Valley Ceiling Light User Manual

Model: 9970.01.06.8100

INTRODUCTION

Welcome to your new WOFI Valley Ceiling Light. This modern LED ceiling light features a sleek design, color temperature changing capabilities, a memory function, and a convenient remote control. Crafted with quality materials, it provides elegant illumination for any space.

SAFETY INFORMATION

- Read all instructions carefully before installation and use.
- Installation must be performed by a qualified electrician.
- Disconnect power before installation or maintenance.
- Do not expose the product to moisture or extreme temperatures.
- This product is for indoor use only.
- Keep out of reach of children.

WARNING: Risk of electric shock. Ensure power is off before handling.

PACKAGE CONTENTS

- 1x WOFI Valley Ceiling Light
- 1x Remote Control
- Mounting Hardware (screws, anchors)
- User Manual

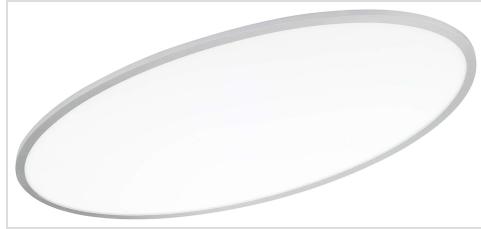


Image: The main WOFI Valley Ceiling Light unit, an oval-shaped LED fixture with a white diffuser and a silver-grey frame.



Image: The white remote control for the WOFI Valley Ceiling Light, showing buttons for brightness, color temperature, timer, and on/off functions.

SETUP AND INSTALLATION

- Safety First:** Turn off the main power supply at the circuit breaker before beginning installation.
- Mounting the Fixture:**
Mark the drilling points on the ceiling using the mounting bracket as a template.
Drill holes and insert appropriate wall anchors (if necessary).
Secure the mounting bracket to the ceiling with screws.
- Wiring Connection:**
Connect the live (L), neutral (N), and ground (GND) wires from your ceiling to the corresponding terminals on the light fixture. Ensure connections are secure.
- Attaching the Light:**
Carefully attach the light fixture to the mounting bracket, ensuring it is securely fastened.
- Restore Power:** Turn the main power supply back on.



Image: The WOFI Valley Ceiling Light mounted flush against a ceiling, demonstrating its low-profile design.

OPERATING INSTRUCTIONS

Remote Control Functions

The included remote control allows for full control over the light's features.

- Power On/Off:** Press the "ON" or "OFF" button to turn the light on or off.
- Brightness Adjustment (Dimming):** Use the brightness buttons (often marked with sun icons or +/-) to increase or decrease the light intensity.
- Color Temperature Change (CCT):** Adjust the color temperature from warm white to cool white using the CCT buttons.
- Memory Function:** The light remembers the last brightness and color temperature setting when turned off and on again.
- Sleep Mode / Night Light:** Activate a low-brightness, warm light setting suitable for night use.
- Timer Function:** Set the light to turn off automatically after a specified period (e.g., 30 minutes, 60 minutes).



Image: Close-up of the remote control, highlighting buttons for brightness, color temperature, and timer settings.

CARE AND MAINTENANCE

- Cleaning:** Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Bulb Replacement:** This fixture uses integrated LED technology. LEDs are designed for long life and are not user-replaceable. If the light source fails, the entire fixture may need to be replaced.
- Inspection:** Periodically check for any loose connections or damage.

Note: This product is an ambient product. Ambient products are lights that can be disassembled to check the light sources contained in the delivery separately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring. Remote control battery low.	Check circuit breaker. Verify wiring connections (ensure power is off). Replace remote control battery.

Problem	Possible Cause	Solution
---------	----------------	----------

Light flickers.	Unstable power supply. Loose connection.	Consult an electrician. Check wiring connections (ensure power is off).
Remote control not working.	Battery depleted. Obstruction between remote and light. Remote not paired.	Replace battery. Ensure clear line of sight. Refer to remote pairing instructions (if applicable).

TECHNICAL SPECIFICATIONS

- Brand:** WOFI
- Model Number:** 9970.01.06.8100
- Dimensions (L x W x H):** 100 x 50 x 5.2 cm (39.4 x 19.7 x 2.0 inches)
- Weight:** 4.59 kg (10.12 lbs)
- Material:** Plastic, Metal
- Color:** White
- Light Source Type:** Integrated LED
- Maximum Wattage:** 45 Watts
- Luminous Flux:** 3450 lm
- Energy Efficiency Class:** A
- IP Rating:** IP20 (Indoor use only)
- Special Features:** Dimmable, Color Temperature Change, Memory Function, Remote Control, Sleep Mode
- Power Source:** AC
- Batteries Required for Remote:** Yes (Batteries included)



Image: Energy efficiency label showing class A rating.

WARRANTY AND CUSTOMER SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact your retailer.

Manufacturer: WOFI

Country of Origin: Germany

Contact: Please visit the official WOFI website or contact their customer service for further assistance.

Note: Spare parts availability information is not available. Software updates are not guaranteed.

© 2024 WOFI. All rights reserved.

This manual is subject to change without notice.