

[Manuals.plus](#) /

› [Croove](#) /

› Croove Rechargeable Portable Voice Amplifier Model 8541763230 User Manual

Croove 8541763230

Croove Rechargeable Portable Voice Amplifier

Model: 8541763230 | Brand: Croove

INTRODUCTION

The Croove Rechargeable Portable Voice Amplifier is designed to enhance your voice, making it audible and clear in various settings. This compact and lightweight device is ideal for public speaking, teaching, tour guiding, and other situations where voice projection is essential. It features a long-lasting rechargeable battery and a comfortable headset microphone for hands-free operation.

Key features include:

- **Powerful Amplification:** Delivers clear, distortion-free sound covering over 3300 square feet.
- **User-Friendly Design:** Simple operation with two microphone ports and adjustable volume control.
- **Portable and Convenient:** Slim design with a durable belt clip and an adjustable neck/waistband for easy mobility.
- **Extended Battery Life:** Provides up to 10 hours of continuous use on a single charge.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Croove Voice Amplifier Unit
- Wired Headset Microphone
- USB Charging Cable
- Wall Adapter
- Adjustable Neck/Waistband Strap
- Belt Clip (pre-attached to the amplifier unit)



Image: All components included with the Croove Voice Amplifier.

SETUP

1. **Charge the Amplifier:** Before first use, fully charge the voice amplifier. Connect the small end of the USB charging cable to the DC 5V port on the amplifier and the larger end to the wall adapter. Plug the wall adapter into a power outlet. The charging indicator light will illuminate.
2. **Connect the Headset Microphone:** Insert the 3.5mm jack of the wired headset microphone into either of the two MIC ports (MIC1 or MIC2) on the side of the amplifier unit.
3. **Position the Microphone:** Place the headset comfortably on your head. Position the microphone boom so that the microphone is approximately 1-2 inches from your mouth for optimal sound pickup.
4. **Power On:** Locate the ON/OFF switch on the side of the amplifier. Slide it to the "ON" position.
5. **Adjust Volume:** Use the volume control knob to set the desired amplification level. Start with a lower volume and gradually increase it to avoid feedback.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing, setup, and basic operation of the Croove Voice Amplifier, including connecting the headset and charging the unit.

OPERATING INSTRUCTIONS

Once the amplifier is set up and powered on, you can begin using it to project your voice.

- **Speaking Clearly:** Speak naturally into the headset microphone. Ensure the microphone remains close to your mouth for the best sound quality and to minimize background noise.
- **Volume Adjustment:** Adjust the volume knob as needed to suit your environment and audience size. Avoid setting the volume too high, which can cause feedback (a high-pitched squealing sound).
- **Multiple Microphones:** The amplifier supports two microphone inputs (MIC1 and MIC2), allowing for flexibility if you have an alternative compatible microphone.



Image: The Croove Voice Amplifier unit with its headset, illustrating key features.

CHARGING THE BATTERY

The Croove Voice Amplifier is equipped with a rechargeable Lithium Ion battery that provides up to 10 hours of operation on a full charge.

- **Charging Process:** Connect the supplied USB charging cable to the DC 5V port on the amplifier and to the wall adapter. Plug the adapter into a standard electrical outlet.
- **Charging Indicator:** A light indicator will show the charging status. Refer to the device for specific light behaviors (e.g., red for charging, green for fully charged).
- **Charging Time:** Allow sufficient time for a full charge, especially before extended use.

WEARING OPTIONS

The amplifier offers flexible wearing options for comfort and convenience:

- **Belt Clip:** The amplifier unit features a durable belt clip on its back, allowing you to securely attach it to your belt, waistband, or pocket.
- **Neck/Waistband Strap:** For additional versatility, use the adjustable neck/waistband strap. Attach the strap to the loops on the amplifier unit and wear it around your neck or waist.



Image: The Croove Voice Amplifier being worn by a user during an outdoor presentation.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your voice amplifier.

- **Cleaning:** Wipe the amplifier unit and headset with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to about 50% every few months.
- **Microphone Covers:** Replace microphone foam covers periodically to maintain hygiene and sound quality.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	Amplifier is off. Volume is too low. Microphone not connected properly. Microphone is faulty. Battery is low.	Ensure the ON/OFF switch is in the "ON" position. Increase the volume using the control knob. Check that the microphone jack is fully inserted into a MIC port. Try using the other MIC port or a different compatible microphone. Charge the amplifier battery.
Feedback (high-pitched squeal)	Microphone too close to the speaker. Volume set too high.	Increase the distance between the microphone and the amplifier speaker. Reduce the volume.

Problem	Possible Cause	Solution
Battery not charging	Charging cable or adapter is faulty. Not properly connected.	Ensure the USB cable and wall adapter are securely connected. Try using a different USB charging cable or wall adapter.

SPECIFICATIONS

Model Number	8541763230
Brand	Croove
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Life	Up to 10 hours
Connectivity Technology	Wired
Connector Type	USB (for charging)
Audio Input	Wired Microphones (2 ports)
Coverage Area	Over 3300 sq. ft.
Product Dimensions (L x W x H)	3.7 x 1.85 x 3.3 inches
Item Weight	0.5 Kilograms (1.1 pounds)
Material	Plastic
Color	Black
UPC	818907027026

WARRANTY AND SUPPORT

The Croove Voice Amplifier comes with a **90-day warranty**. Croove stands behind the quality of its products and offers a satisfaction guarantee. For any issues or support needs, please contact Croove customer service.



Image: Product packaging highlighting the 90-day warranty.