

Cecotec 548405328

Cecotec Ready Warm 5200 Box Ceramic Wall Heater User Manual

Model: 548405328

1. INTRODUCTION

Thank you for choosing the Cecotec Ready Warm 5200 Box Ceramic Wall Heater. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.

1.1 Safety Information

- Ensure the heater is installed on a solid, non-combustible surface.
- Do not cover the heater or block its air inlets/outlets.
- Keep flammable materials at a safe distance from the heater.
- This appliance is equipped with IPX2 splash protection, making it suitable for use in bathrooms, but it should not be directly exposed to water spray.
- Always unplug the heater before cleaning or maintenance.
- Do not operate the heater with a damaged cord or plug.
- Supervise children and individuals with reduced physical, sensory, or mental capabilities when near the appliance.

2. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present and undamaged:

- Cecotec Ready Warm 5200 Box Ceramic Wall Heater Unit
- Wireless Remote Control
- Mounting Hardware (screws, wall plugs)
- User Manual



Front view of the Cecotec Ready Warm 5200 Box Ceramic Wall Heater, showcasing its digital display and air outlet.

3. SETUP AND INSTALLATION

Follow these steps for proper installation of your wall heater:

3.1 Choosing a Location

- Select a wall location that is clear of obstructions and at least 1 meter (3 feet) away from curtains, furniture, and other flammable materials.
- Ensure the wall can support the weight of the heater (approximately 2.3 kg).
- For bathroom installation, ensure the location complies with local electrical safety regulations and is not directly above a bathtub or shower. The IPX2 rating protects against dripping water.

3.2 Wall Mounting

1. Mark the desired mounting points on the wall using the heater's mounting holes as a template. Ensure the marks are level.
2. Drill holes at the marked positions. The drill bit size should match the provided wall plugs.
3. Insert the wall plugs into the drilled holes.
4. Secure the mounting bracket (if separate) or the heater directly to the wall using the provided screws. Do not overtighten.
5. Once securely mounted, plug the heater into a suitable electrical outlet.



The Cecotec Ready Warm 5200 Box Ceramic Wall Heater mounted on a wall, demonstrating its compact design.

4. OPERATING INSTRUCTIONS

Your Cecotec Ready Warm 5200 heater can be operated via its digital control panel or the wireless remote control.

4.1 Control Panel

The digital display shows the current temperature and settings. Buttons on the unit allow for basic control.

4.2 Remote Control

The wireless remote control provides full functionality from a distance.



The wireless remote control for the heater, showing power, mode, timer, and temperature adjustment buttons.

4.3 Basic Functions

- **Power On/Off:** Press the power button on the unit or remote to turn the heater on or off.
- **Mode Selection:** Cycle through the 3 operating modes (e.g., Fan, Low Heat (1000W), High Heat (2000W)) using the mode button.
- **Temperature Adjustment:** Use the '+' and '-' buttons to set the desired temperature. The heater will maintain this temperature.
- **Timer Function:** Activate the 12-hour programmable timer. The heater will automatically shut off after the set duration.



An illustration depicting the Cecotec Ready Warm 5200 Box Ceramic Wall Heater actively emitting warm air.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and longevity of your heater.

- **Always unplug the heater** from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Use a vacuum cleaner with a brush attachment to gently remove dust from the air inlets and outlets.
- Do not immerse the heater in water or any other liquid.
- Store the heater in a cool, dry place when not in use.

6. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following table before contacting support:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; Power button not pressed; Overheat protection activated.	Check power cord connection and wall outlet; Press power button; Unplug, wait 30 minutes, then plug back in.
No heat output.	Fan mode selected; Temperature setting too low.	Select a heat mode (1000W or 2000W); Increase the desired temperature setting.
Remote control not working.	Batteries depleted; Obstruction between remote and heater.	Replace remote control batteries; Ensure clear line of sight to the heater's receiver.
Heater shuts off unexpectedly.	Overheat protection activated; Timer function active.	Check for obstructions around the heater; Unplug, wait 30 minutes, then plug back in; Check timer settings.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	548405328
Color	White
Dimensions (L x W x H)	19.6 x 12 x 50.2 cm
Weight	2.3 Kilograms
Power	2000 Watts (Max)
Voltage	220 Volts
Number of Speeds/Modes	3
Noise Level	44 dB
Special Features	Remote Control, Digital Display, Timer, Overheat Protection, IPX2 Splash Protection
Mounting Type	Wall Mount
Recommended Use	Indoor, Bathrooms

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Cecotec products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official Cecotec website for detailed

warranty terms and conditions. Spare parts availability is indicated for 10 years.





8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Cecotec customer support. Contact information can typically be found on the official Cecotec website or on the product packaging. You can also visit the [product page on Amazon](#) for additional resources and customer reviews.

© 2025 Cecotec. All rights reserved.

[gen_bottom_of_page]

Related Documents - 548405328

	<p>Návod k použití Cecotec Ready Warm 5200 Box Ceramic - Bezpečnost a Funkce</p> <p>Kompletní návod k použití pro topidlo Cecotec Ready Warm 5200 Box Ceramic. Zahrnuje bezpečnostní pokyny, montáž, ovládání, čištění a technické specifikace.</p>
	<p>Cecotec Ready Warm Thermal Connected Electric Panel Heaters - User Manual and Specifications</p> <p>Comprehensive user manual for Cecotec Ready Warm Thermal Connected electric panel heaters (models 800-2500W). Includes safety instructions, installation guides, operation details, technical specifications, and warranty information.</p>
	<p>Cecotec Ready Warm 5200 Box Ceramic: Manual de Instrucciones y Uso</p> <p>Manual completo para el calefactor cerámico de pared Cecotec Ready Warm 5200 Box Ceramic. Incluye instrucciones de seguridad, montaje, funcionamiento, especificaciones técnicas y garantía.</p>
	<p>Manual de Instrucciones Cecotec Ready Warm 5300 Power Box Ceramic: Calefactor de Pared</p> <p>Descubra el manual de instrucciones para el Cecotec Ready Warm 5300 Power Box Ceramic, un calefactor de pared cerámico diseñado para un uso doméstico eficiente. Encuentre información sobre instalación, funcionamiento, seguridad y mantenimiento.</p>



[Calefactor Cerámico Cecotec Ready Warm 5250 Swing Box Ceramic: Manual de Usuario](#)

Manual de instrucciones para el calefactor cerámico de pared Cecotec Ready Warm 5250 Swing Box Ceramic. Descubra cómo instalar, operar y mantener su calefactor para un confort óptimo y seguro.



[Cecotec Ready Warm Ceramic Towel Manual: Installation, Operation & Safety Guide](#)

Comprehensive instruction manual for Cecotec Ready Warm Ceramic Towel models 9770, 9780, and 9790. This guide provides essential information on safe operation, installation, cleaning, maintenance, and technical specifications for your electric towel rack.