

[Manuals.plus](#) /

› [Marea](#) /

› Marea Women's Watch B41204/13 Instruction Manual

Marea B41204/13

Marea Women's Watch B41204/13 Instruction Manual

Model: B41204/13

1. INTRODUCTION

Thank you for choosing the Marea Women's Watch B41204/13. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

2. PRODUCT OVERVIEW

The Marea B41204/13 is an elegant analog women's watch featuring a chronograph function and a durable bracelet. It is designed for everyday wear with a water resistance rating suitable for splashes.



This image shows the Marea B41204/13 women's watch, featuring a round case, white dial, and a gold-colored bracelet. The watch has an analog display and chronograph subdials.

Key Features:

- Analog Display
- Chronograph Function
- Battery-Powered Quartz Movement
- Water Resistant up to 30 Meters (3 ATM)
- Gold-colored Bracelet

- White Dial

3. SETUP

Setting the Time:

1. Pull the crown (the knob on the side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into position 1 (normal operating position).

4. OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time. Your watch has two pushers, typically located above and below the crown.

Using the Chronograph:

1. **Start:** Press the upper pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press the lower pusher (B) to reset the chronograph hands to their zero position.

Note: Avoid operating the chronograph pushers while the watch is wet or submerged in water to prevent damage.

5. MAINTENANCE

Cleaning:

Wipe your watch regularly with a soft, dry cloth to remove dust and dirt. For the bracelet, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

Water Resistance (30 Meters / 3 ATM):

Your Marea B41204/13 watch is water resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for showering, swimming, diving, or any water sports. Always ensure the crown is fully pushed in before any contact with water.

Battery Replacement:

The watch is powered by a battery. When the watch stops or the second hand starts skipping (if applicable), it's an indication that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Storage:

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields.

6. TROUBLESHOOTING

- **Watch not running:**
 - Check if the crown is fully pushed in.
 - The battery may need replacement. Consult a watch technician.
- **Time is incorrect:**

- Reset the time as described in the 'Setting the Time' section.
 - If the issue persists, the watch may require servicing.
- **Chronograph hands do not reset to zero:**
 - This may indicate a need for calibration or servicing. Consult a watch technician.

7. SPECIFICATIONS

Brand	Marea
Model Number	B41204/13
Display Type	Analog
Special Features	Chronograph
Power Source	Battery-Powered
Water Resistance Depth	30 Meters (3 ATM)
Item Shape	Round
Case Diameter	36 Millimeters
Band Color	Gold
Dial Color	White
Item Weight	81.65 g

8. WARRANTY AND SUPPORT

Marea watches are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Marea website. For technical support or service, please contact your authorized Marea dealer or service center.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question