

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic KX-TGC210 Digital Cordless Phone User Manual](#)

## Panasonic KX-TGC210

# Panasonic KX-TGC210 Digital Cordless Phone User Manual

Model: KX-TGC210

[Contents](#)   [Setup](#)   [Introduction](#)   [Safety Information](#)   [Package](#)  
[Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Support](#)

## 1. INTRODUCTION

Thank you for purchasing the Panasonic KX-TGC210 Digital Cordless Phone. This manual provides essential information for the safe and efficient use of your new telephone system. Please read these instructions carefully before using the product and retain them for future reference.





Image 1.1: The Panasonic KX-TGC210 Digital Cordless Phone, showing the handset docked in its base unit.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Do not open the base unit or handset. Refer all servicing to qualified personnel.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only the supplied power adapter and battery pack.
- Do not dispose of batteries in a fire. They may explode. Check with local codes for special disposal instructions.
- Avoid using the phone during a thunderstorm. There may be a remote risk of electric shock from lightning.

## 3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Cordless Handset
- Base Unit

- AC Power Adapter for Base Unit
- Telephone Line Cord
- Rechargeable Battery Pack (Lithium Polymer)
- Handset Cover

## 4. SETUP

---

### 4.1 Connecting the Base Unit

1. Connect the AC power adapter to the base unit and then to a standard electrical outlet.
2. Connect the telephone line cord to the base unit and then to a telephone wall jack.
3. Ensure all connections are secure.





Image 4.1: Side view of the base unit, illustrating where to connect the power adapter and telephone line cord.

## 4.2 Installing the Battery

1. Remove the handset cover by sliding it downwards.
2. Insert the supplied Lithium Polymer battery pack into the battery compartment, ensuring correct polarity.
3. Replace the handset cover.

## 4.3 Charging the Handset

Place the handset on the base unit. The charging indicator on the handset will illuminate. Allow the handset to charge for at least 7 hours before initial use to ensure full battery capacity.

## 4.4 Initial Settings

After the handset is charged, you may need to set the date, time, and language. Follow the on-screen prompts or refer to the "Settings" section in this manual for detailed instructions.

# 5. OPERATING THE PHONE

---

## 5.1 Making Calls

- **To make an external call:** Press **TALK**, then dial the phone number.
- **To use the speakerphone:** Press **SPEAKERPHONE** button during a call.

## 5.2 Answering Calls

When the phone rings, press **TALK** or any dial key (0-9, \*, #) to answer the call.

## 5.3 Adjusting Volume

During a call, use the **VOLUME UP/DOWN** buttons on the side of the handset to adjust the earpiece or speaker volume.

## 5.4 Using the Digital Answering System

The KX-TGC210 features a digital answering system. To activate or deactivate, press the **ANSWER ON/OFF** button on the base unit or through the handset menu. To listen to messages, press the **PLAY** button on the base unit or access the "Answering System" menu on the handset.

## 5.5 Intercom Function

If you have multiple handsets registered to the same base unit, you can make intercom calls between them. Press the **INTERCOM** button and select the desired handset.

## 5.6 Call Blocking

The phone includes a feature to reduce unwanted calls. To block a number, access the "Call Block" menu in the handset settings. You can add numbers manually or from the caller ID list.

## 5.7 Ringtone Melody

Customize your phone's ringtone by selecting from various polyphonic melodies available in the handset's settings menu under "Ringtone Settings".

# 6. MAINTENANCE

## 6.1 Cleaning

Wipe the exterior surfaces of the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the unit is unplugged before cleaning.

## 6.2 Battery Care

To prolong battery life, avoid overcharging by not leaving the handset on the base unit for extended periods after it is fully charged. If the phone will not be used for a long time, remove the battery from the handset.

# 7. TROUBLESHOOTING

Problem	Solution
No dial tone.	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the AC adapter is properly connected.
Handset does not charge.	Verify the handset is correctly placed on the base unit. Clean the charging contacts on both the handset and base unit with a dry cloth. Ensure the AC adapter is plugged in.
Poor call quality or static.	Move the handset closer to the base unit. Avoid using the phone near other electronic devices that may cause interference (e.g., microwaves, Wi-Fi routers).
Cannot make or receive calls.	Check if the phone line is active. Ensure the handset is registered to the base unit. Try resetting the base unit by unplugging and replugging the AC adapter.

# 8. SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model	KX-TGC210
Colour	BLACK
Telephone Type	Cordless
Answering System Type	Digital
Number of Batteries	1 Lithium Polymer (included)
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Battery Powered
Dialler Type	Single Keypad
Dimensions (L x W x H)	47 x 30 x 164 millimetres
Item Weight	0.1 Kilograms
Special Features	Polyphonic ringtone melody, Conference calls with external line, Intercom (between handsets), Call blocking.

## 9. SUPPORT AND WARRANTY

For technical assistance, warranty information, or to purchase accessories, please visit the official Panasonic support website or contact your local Panasonic customer service center. Keep your purchase receipt as proof of purchase for warranty claims.

*Note: This product is an exclusive Spanish product, which means it is fully set up for Spanish users. Some features or default settings may be optimized for the Spanish market.*