

[Manuals.plus](#) /

› [Adventure Force](#) /

› Adventure Force Ultra Exosaur Robotic Dinosaur User Manual

Adventure Force Ultra Exosaur

Adventure Force Ultra Exosaur Robotic Dinosaur User Manual

Model: Ultra Exosaur

Brand: Adventure Force

1. INTRODUCTION

The Adventure Force Ultra Exosaur Robotic Dinosaur is an interactive toy designed to provide imaginative play for children aged 3 and older. This robotic dinosaur features forward motion, bright lights, and realistic dinosaur sounds, activated by a simple push of a button. It is designed to engage children interested in robotics and mechanics, fostering creative roleplay.



Figure 1.1: The Adventure Force Ultra Exosaur Robotic Dinosaur as packaged, showcasing its green color and robotic enhancements.

2. SAFETY INFORMATION

Please read all safety information before operating the Ultra Exosaur. Keep these instructions for future reference.

- **Age Recommendation:** Suitable for children aged 3 months and up. Adult supervision is recommended for younger children.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries from the toy.
 - Remove batteries if the toy is not to be used for a long period.
 - Do not short-circuit the supply terminals.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Rechargeable batteries are to be removed from the toy before being charged.
- **Choking Hazard:** This toy contains small parts that may pose a choking hazard to young children. Ensure all components are securely attached.
 - **Electrical Safety:** Do not expose the toy to water or excessive moisture. Do not attempt to disassemble or modify the toy's internal components.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present:

- 1 x Adventure Force Ultra Exosaur Robotic Dinosaur
- 3 x AA Batteries (pre-installed or included separately)



Figure 3.1: A detailed view of the Ultra Exosaur, highlighting its design and features within the packaging.

4. SETUP: BATTERY INSTALLATION

The Ultra Exosaur requires 3 AA batteries for operation. These batteries are typically included and may be pre-installed. If not, follow these steps:

1. Locate the battery compartment on the underside of the dinosaur.

2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 new AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Note: Always use fresh batteries for optimal performance. Dispose of old batteries responsibly.

5. OPERATING INSTRUCTIONS

The Ultra Exosaur is designed for simple, interactive play.

1. **Power On:** Locate the ON/OFF switch, usually on the underside or side of the dinosaur. Slide the switch to the "ON" position.
2. **Activate Motion, Lights & Sounds:** The toy is motion-activated. Gently tap or move the dinosaur to trigger its walking action, bright lights, and realistic dinosaur sounds. There may also be a "TRY ME!" button on the packaging or toy itself for initial activation.
3. **Play:** Engage in imaginative play, creating scenarios for the robotic dinosaur.
4. **Power Off:** When play is complete, slide the ON/OFF switch to the "OFF" position to conserve battery life.



Figure 5.1: The Ultra Exosaur demonstrating its illuminated features in a low-light environment, showcasing the red lights.



Figure 5.2: The packaging rear, confirming the toy's "Walking Action!" and "Lights & Sounds" features, along with its "Hybrid Dino Robot!" designation.

6. MAINTENANCE

- **Cleaning:** Wipe the surface of the dinosaur with a soft, damp cloth. Do not immerse the toy in water or use harsh chemicals.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for extended periods.
- **Battery Replacement:** Replace batteries when the lights dim, sounds become distorted, or motion slows down.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dinosaur does not move, light up, or make sounds.	◦ Batteries are dead or low. ◦ Batteries are inserted incorrectly. ◦ ON/OFF switch is in the "OFF" position.	◦ Replace with new AA batteries. ◦ Check battery polarity and reinsert correctly. ◦ Slide the ON/OFF switch to the "ON" position.
Motion is sluggish or sounds are distorted.	Batteries are low.	Replace with new AA batteries.

8. SPECIFICATIONS

Feature	Detail
Model Name	Ultra Exosaur
Brand	Adventure Force
Product Type	Robotic Dinosaur Toy
Color	Green
Material	Plastic
Special Features	Light, Sound, Walking Action
Batteries Required	Yes (3 x AA)
Batteries Included	Yes
Assembly Required	Yes (minor, e.g., battery installation)
Manufacturer Recommended Age	3 months and up
Package Dimensions	38.6 x 26.9 x 13.4 cm
Item Weight	1.19 kg

9. WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the contact information provided on the product packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Adventure Force

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question