

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALFAJR](#) /

› [AIFajr CT-01 Azan Alarm Clock User Manual](#)

ALFAJR CT-01

AIFajr CT-01 Azan Alarm Clock User Manual

Model: CT-01

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your AIFajr CT-01 Azan Alarm Clock. Please read this manual thoroughly to ensure proper use and to fully utilize all features of your device. The AIFajr CT-01 is designed to display accurate prayer times and provide Azan alerts, along with standard alarm clock functionalities.

2. PRODUCT OVERVIEW

The AIFajr CT-01 is a digital alarm clock featuring Azan prayer time alerts. It includes a clear display for time, date, prayer times, and temperature. The clock offers multiple Azan voices and various alarm settings.

2.1 Front View and Display



Image 2.1: Front view of the AlFajr CT-01 Azan Alarm Clock. The display shows the current time (10:30 AM), temperature (23°C), date (16 MAY), and a prayer time (12:40 PM). To the right, buttons for Azan sound selection (Makkah, Madinah, Egypt, AlQuds, Riyadh, Random) and control buttons (down arrow, SET, up arrow) are visible.

2.2 Rear View and Controls



Image 2.2: Rear view of the AlFajr CT-01 Azan Alarm Clock. This image highlights the control switches located on the back: 'DAILY ALARM', 'PRAYER ALARMS', and 'SNOOZE'. A speaker grille is also visible.

2.3 Dimensions



Image 2.3: Front view of the AlFajr CT-01 Azan Alarm Clock with key dimensions indicated. The clock measures approximately 3.81 cm in width and 2.25 cm in height.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert two AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2 Initial Power On and Basic Settings

Upon first power-on or after battery replacement, the clock may require initial setup.

1. Press and hold the **SET** button to enter setup mode.
2. Use the **UP** and **DOWN** arrow buttons to adjust values.
3. Press **SET** again to confirm and move to the next setting.

3.3 Setting Time and Date

1. In setup mode, navigate to the time setting. Adjust hours and minutes.
2. Proceed to date setting. Adjust year, month, and day.
3. Select 12-hour or 24-hour format as desired.

3.4 Setting Location for Prayer Times

Accurate prayer times depend on correct location settings.

1. In setup mode, navigate to the city selection.

2. Use the **UP** and **DOWN** buttons to browse through pre-programmed cities (over 100 major US cities supported).
3. If your city is not listed, select a nearby major city or use the longitude and latitude setting option.
4. To set using longitude and latitude, navigate to the respective setting and input the values for your location.

3.5 Azan Sound Selection

The clock offers five distinct Azan voices.

1. Locate the Azan Sound selection dial on the front panel (refer to Image 2.1).
2. Rotate the dial to choose from Makkah, Madinah, Egypt, AlQuds, Riyadh, or Random Azan voices.

4. OPERATING INSTRUCTIONS

4.1 Daily Alarm

The daily alarm functions as a standard alarm clock.

1. Locate the 'DAILY ALARM' switch on the back of the clock (refer to Image 2.2).
2. Toggle the switch to the 'ON' position to activate the daily alarm.
3. To set the daily alarm time, press and hold the **SET** button until the alarm time flashes. Use the **UP** and **DOWN** buttons to adjust. Press **SET** to confirm.

4.2 Fajr Alarm

The special Fajr alarm is designed to wake you up for the Fajr prayer.

1. The Fajr alarm is typically linked to the calculated Fajr prayer time. Consult the full manual for specific settings related to Fajr alarm adjustments.

4.3 Prayer Alarms (Azan)

The clock will automatically play the selected Azan voice at the calculated prayer times.

1. Locate the 'PRAYER ALARMS' switch on the back of the clock (refer to Image 2.2).
2. Toggle the switch to the 'ON' position to enable Azan alerts for all five daily prayers.
3. Ensure your location settings are accurate for precise prayer times.

4.4 Snooze Function

The snooze function provides a temporary delay for alarms.

1. Locate the 'SNOOZE' switch on the back of the clock (refer to Image 2.2).
2. Toggle the switch to the 'ON' position to activate the snooze function.
3. When an alarm sounds, press any button (usually the top button or a dedicated snooze button if present) to activate snooze. The alarm will sound again after a set interval.

4.5 Display Light

The full screen light illuminates the display for visibility in dark conditions.

1. Press the light button (usually located on the top or front of the clock) to activate the display backlight.

4.6 Temperature Display

The clock displays the ambient temperature.

1. The temperature is shown on the main display, typically in Celsius (°C) or Fahrenheit (°F).

2. To switch between Celsius and Fahrenheit, refer to the detailed settings menu by pressing the **SET** button.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance and functionality of your clock:

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

5.2 Battery Replacement

Replace batteries when the display dims or the clock functions become erratic.

- Follow the battery installation steps outlined in Section 3.1.
- Always use fresh AA batteries.
- Dispose of old batteries responsibly according to local regulations.

6. TROUBLESHOOTING

- **Clock not turning on:** Check battery installation and ensure batteries are fresh.
- **Incorrect prayer times:** Verify that the city/location settings are accurate. Adjust longitude/latitude if necessary.
- **Alarm not sounding:** Ensure the respective alarm switches (Daily Alarm, Prayer Alarms) on the back are in the 'ON' position. Check alarm volume settings if applicable.
- **Display issues:** If the display is dim or flickering, replace the batteries.
- **Resetting the clock:** If the clock behaves unexpectedly, a reset may resolve the issue. Locate the reset button/port (often a small pinhole) on the back and use a thin object (like a paperclip) to press it. This will typically revert settings to factory defaults, requiring re-setup.

7. SPECIFICATIONS

Feature	Detail
Brand	ALFAJR
Model	CT-01
Colour	Black
Display Type	Digital
Power Source	Battery Powered (2 AA batteries included)
Special Feature	Alarm, Azan Prayer Times, Temperature Display
Material	Plastic
Mounting Type	Tabletop
Item Weight	0.44 Kilograms (444 g)
Item Dimensions (LxWxH)	6.2 x 3.8 x 2.2 Centimeters

Feature	Detail
Operation Mode	Manual
Manufacturer	ZOON

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.