

[manuals.plus](#) /› [Playmobil](#) /› [Playmobil 70063 Special Plus Fisherman Playset Instruction Manual](#)

Playmobil 70063

Playmobil 70063 Special Plus Fisherman Playset Instruction Manual

Model: 70063 | Brand: Playmobil

1. INTRODUCTION

The Playmobil 70063 Special Plus Fisherman playset offers an engaging experience for children aged 4 and up, encouraging imaginative role-play. This set features a Playmobil figure dressed in fishing attire, complete with a gilet and hat, along with three fish that can be attached to the fishing line. This manual provides detailed instructions for assembly, operation, maintenance, and important safety information to ensure a fun and safe play experience.

- Features 1 Playmobil Fisherman figure.
- Fisherman is dressed in fishing attire, including a hat and gilet.
- Fish can be attached to the fishing line for realistic play.
- Includes various accessories to enhance play.

2. WHAT'S IN THE Box

Carefully unpack all components from the box. The Playmobil 70063 Special Plus Fisherman playset includes the following items:

- 1 x Playmobil figure
- 1 x Hat
- 1 x Knife
- 1 x Stool
- 1 x Box
- 3 x Fish
- 1 x Fishing Rod



Image: All components included in the Playmobil 70063 Special Plus Fisherman playset, laid out for inspection.



Image: Front view of the Playmobil 70063 Special Plus Fisherman packaging, showing the assembled figure and accessories.



Image: Back view of the Playmobil 70063 Special Plus Fisherman packaging, detailing contents and safety information in multiple languages.

3. SETUP & ASSEMBLY

Follow these steps to assemble your Playmobil Fisherman figure and accessories:

- Figure Assembly:** Attach the head, torso, and legs of the Playmobil figure. Ensure all parts click securely into place.
- Attaching Attire:** Place the gilet onto the figure's torso and then the hat onto its head.
- Fishing Rod:** Assemble the fishing rod if it comes in multiple pieces. Attach the three fish to the fishing line as desired.
- Stool and Box:** Place the stool and box in your play scene to create a fishing spot.

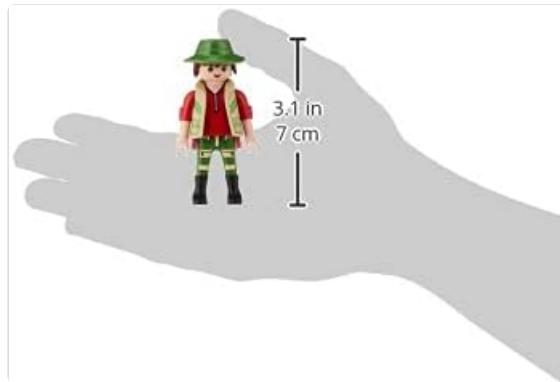


Image: A Playmobil figure held in a hand, illustrating its approximate size of 3.1 inches (7 cm).

4. OPERATING INSTRUCTIONS

The Playmobil 70063 Special Plus Fisherman set is designed for imaginative play. Here are some ways to interact with the set:

- Fishing Action:** Hold the fishing rod with the figure and pretend to cast the line into water. The attached fish can be 'caught' and 'released' for dynamic play.
- Setting up Camp:** Use the stool and box to create a realistic fishing scene by a riverbank or lake.
- Storytelling:** Encourage children to create their own stories and adventures for the fisherman, fostering creativity and narrative skills.

5. MAINTENANCE

To ensure the longevity of your Playmobil playset, follow these maintenance guidelines:

- Cleaning:** Clean figures and accessories with a damp cloth and mild soap. Rinse thoroughly with water and air dry completely. Avoid harsh chemicals or abrasive cleaners.
- Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures. Keeping small parts in a designated container can prevent loss.
- Inspection:** Periodically inspect all parts for any signs of wear or damage. Discontinue use of any broken parts to prevent injury.

6. SAFETY INFORMATION

Please read and adhere to the following safety information:

WARNING: Not suitable for children under 3 years of age due to the dangers of suffocation caused by small parts.

- Always supervise young children during play.
- Keep small parts away from infants and toddlers to prevent choking hazards.

- Do not put any parts of the toy in the mouth.

7. TROUBLESHOOTING

If you encounter any issues with your Playmobil playset, consider the following:

- **Missing Parts:** If any parts are missing upon opening the box, please contact Playmobil customer support.
- **Damaged Parts:** If any parts are damaged, discontinue use and contact Playmobil customer support for replacements.
- **Assembly Difficulties:** Refer to the visual instructions provided in the packaging or contact customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.66 x 1.5 x 4.72 inches
Item Weight	1.13 ounces
Item Model Number	70063
Manufacturer Recommended Age	4 - 10 years
Release Date	February 1, 2019
Manufacturer	Playmobil

9. WARRANTY & SUPPORT

For any warranty claims, missing parts, or product support, please contact Playmobil customer service directly. Refer to the official Playmobil website or product packaging for the most up-to-date contact information.

You can visit the official Playmobil Store for more information and products:[Playmobil Store](#)

10. PRODUCT VIDEOS

Inside the Box

Video: This video provides a detailed look at the contents of a Playmobil box, demonstrating the unboxing experience and the various components included in a typical playset. It helps users visualize what to expect when opening their new Playmobil product.