

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [DIGIQUEST](#) /
- › [DIGIQUEST TLC128 Universal TV Remote Control Instruction Manual](#)

DIGIQUEST TLC128

DIGIQUEST TLC128 Universal TV Remote Control Instruction Manual

Model: TLC128

INTRODUCTION

This manual provides comprehensive instructions for the DIGIQUEST TLC128 Universal TV Remote Control. This remote is designed for broad compatibility with various television brands, offering a straightforward solution for controlling your TV. Please read this manual carefully to ensure proper setup and operation.





Image: The DIGIQUEST TLC128 Universal TV Remote Control shown in its retail packaging.

SETUP

1. Battery Installation

The DIGIQUEST TLC128 remote control requires two (2) AAA 1.5V batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Necessita di 2 batterie 1,5V LR 03 - AAA (non incluse)

Image: Rear view of the remote control, illustrating the battery compartment and the required AAA battery type.

2. Initial Use

The DIGIQUEST TLC128 Universal TV Remote Control is designed for immediate use with most compatible televisions. Once the batteries are correctly installed, the remote should function without additional programming for many popular TV brands, including Sony, Samsung, Philips, LG, and Panasonic. Simply point the remote at your television and begin operating it.

OPERATING INSTRUCTIONS

The remote control features a standard layout for intuitive operation. Below is a description of the main buttons and their functions:

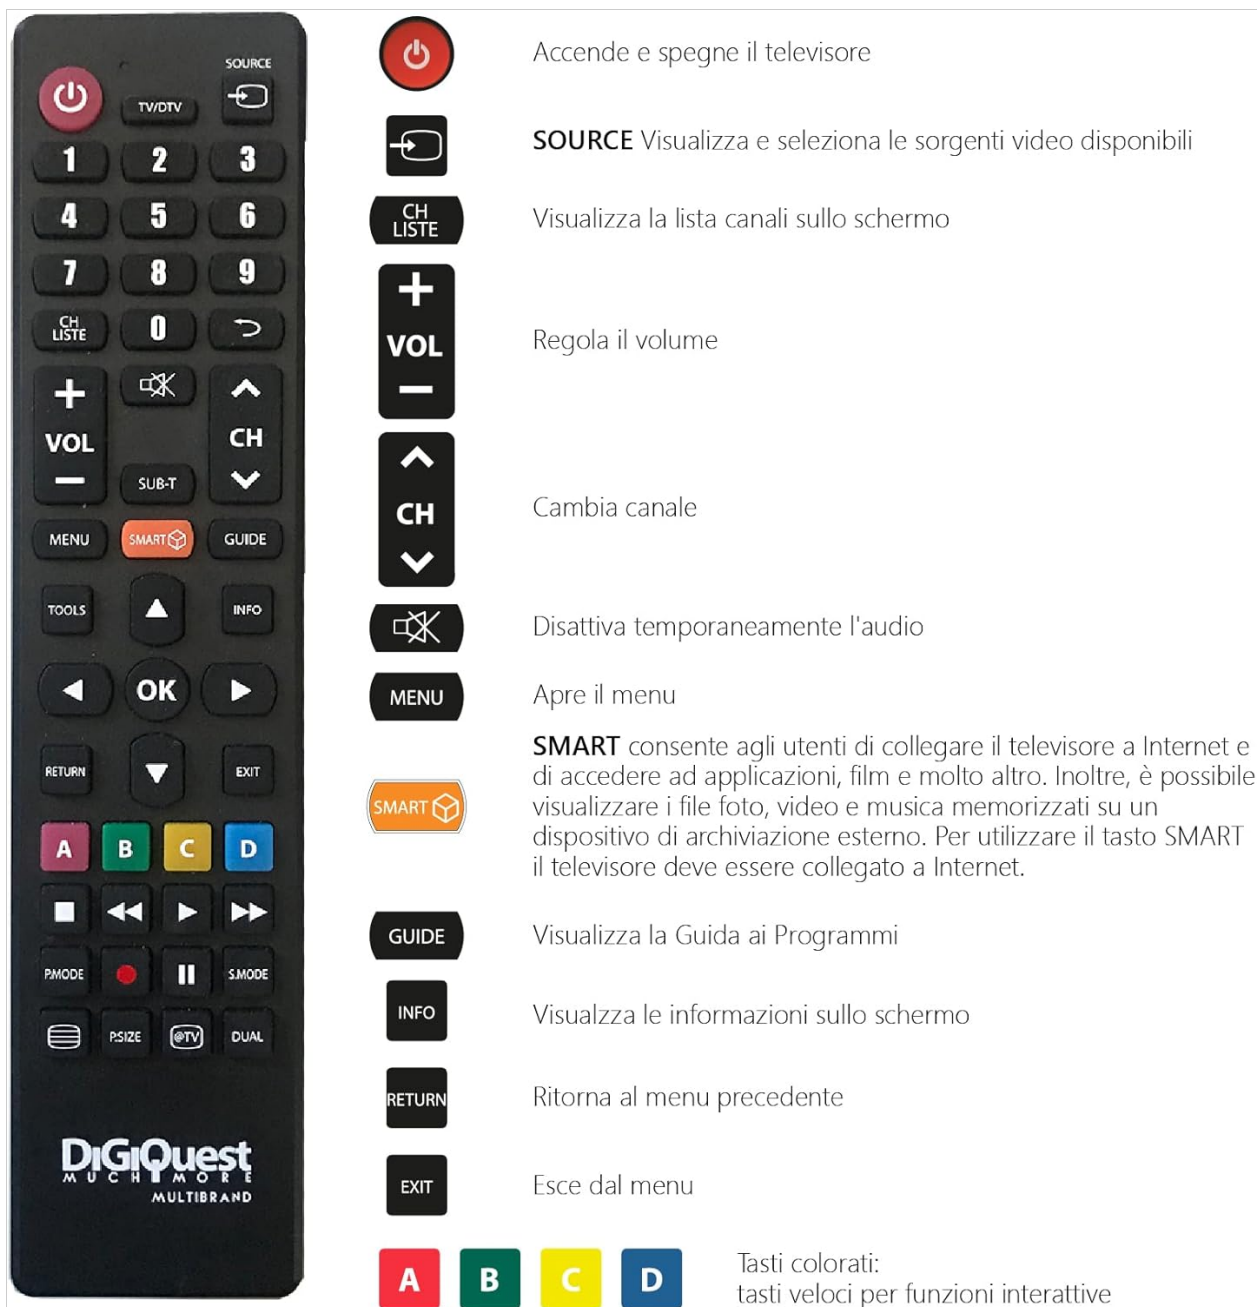


Image: Front view of the remote control with key buttons highlighted and their corresponding functions described.

Power Button (Red Circle with Line): Turns the television on and off.

SOURCE: Displays and selects available video input sources (e.g., HDMI 1, AV, TV).

TV/DTV: Switches between TV and Digital TV modes.

Number Buttons (0-9): Directly select channels.

CH LISTE: Displays the channel list on screen.

VOL +/-: Adjusts the volume level.

Mute Button (Speaker with X): Temporarily mutes the audio.

CH +/-: Changes the television channel up or down.

MENU: Opens the television's main menu.

SMART: Allows users to connect the television to the internet and access applications, movies, and more. It also enables viewing photo, video, and music files stored on an external storage device. For the SMART button to function, the television must be connected to the internet.

GUIDE: Displays the Program Guide.

INFO: Displays on-screen information about the current program or input.

Navigation Buttons (Up, Down, Left, Right): Navigate through menus and options.

OK: Confirms selections in menus.

RETURN: Returns to the previous menu or screen.

EXIT: Exits the current menu or application.

Colored Buttons (A, B, C, D): Quick keys for interactive functions, often used in smart TV applications or teletext.

Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop): Control media playback.

P.MODE: Picture Mode selection.

S.MODE: Sound Mode selection.

P.SIZE: Picture Size/Aspect Ratio adjustment.

@TV: Specific function, often for smart TV features or app access.

DUAL: Dual audio or picture mode selection.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace the batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- Make sure you are within the effective operating range (up to 10 meters).

- **Certain functions do not work:**

- While the remote is multi-brand compatible, some specific advanced functions may not be supported by all TV models or brands.
- Ensure your TV is connected to the internet for SMART TV functions to operate.

- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.

SPECIFICATIONS

Brand	DIGIQUEST
Model Name	TLC128
Color	Black
Connectivity Technology	Infrared (IR)
Compatible Devices	Televisions (Sony, Samsung, Philips, LG, Panasonic, Telefunken, Digiquet, Hitachi, etc.)
Special Features	Easy to Use
Number of Buttons	30
Maximum Range	10 Meters
Power Source	2 x AAA 1.5V Batteries (not included)



Image: Compliance markings (RoHS, CE, WEEE) indicating adherence to environmental and safety standards.

WARRANTY INFORMATION

The DIGIQUEST TLC128 Universal TV Remote Control comes with a **1-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation provided with your product or contact DIGIQUEST customer support.

SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official DIGIQUEST website or contact your retailer. Ensure you have your product model number (TLC128) and proof of purchase available when seeking support.


Related Documents - TLC128

	<p>DIGIQUEST Guida Rapida: Collegamenti e Programmazione Telecomando</p> <p>Questa guida rapida fornisce istruzioni essenziali per l'installazione e la configurazione del ricevitore TV digitale DIGIQUEST, inclusi collegamenti, posizionamento del sensore e programmazione del telecomando multifunzione per diverse marche di TV.</p>
	<p>DIGIQUEST VOICE 1.0 Digital Terrestrial Receiver User Manual</p> <p>User manual for the DIGIQUEST VOICE 1.0 digital terrestrial receiver, covering setup, operation, features, and troubleshooting. Includes safety precautions and technical specifications.</p>
	<p>DIGIQUEST Ti9 Decoder Digitale Satellitare - Manuale Utente</p> <p>Manuale utente completo per il decoder digitale satellitare DIGIQUEST Ti9 (RICD1228). Include istruzioni per l'installazione, configurazione, uso del menu, risoluzione problemi e specifiche tecniche.</p>
	<p>Manuale Utente Ricevitore Digitale Terrestre DIGIQUEST VOICE 1.0</p> <p>Scopri il ricevitore digitale terrestre DIGIQUEST VOICE 1.0. Questa guida utente completa offre istruzioni dettagliate per l'installazione, la configurazione, le funzionalità avanzate e la risoluzione dei problemi, garantendo la migliore esperienza di visione.</p>
	<p>Manuale Utente Macchina da Caffè DIGIQUEST COFFY (HOME0035)</p> <p>Guida completa per la macchina da caffè DIGIQUEST COFFY (modello HOME0035). Include istruzioni dettagliate per l'uso sicuro, la preparazione del caffè, la pulizia, la manutenzione e la risoluzione dei problemi.</p>



DECODER DIGITALE TERRESTRE FULL HD
FULL HD DIGITAL TERRESTRAL RECEIVER
DECODIFICADOR DIGITAL TERRESTRE FULL HD

 DIGIQUEST SH5
AVL-PRC0208



• MANUALE UTENTE
• USER MANUAL
• MANUAL DEL USUARIO

[DIGIQUEST SH5 - Manuale Utente Ricevitore Digitale Terrestre Full HD](#)

Manuale completo per il DIGIQUEST SH5, un ricevitore digitale terrestre Full HD. Guida all'installazione, configurazione, uso dei menu, funzioni multimediali, risoluzione problemi e specifiche tecniche.